
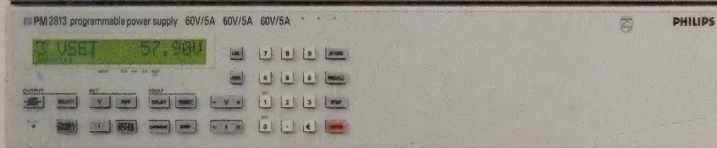
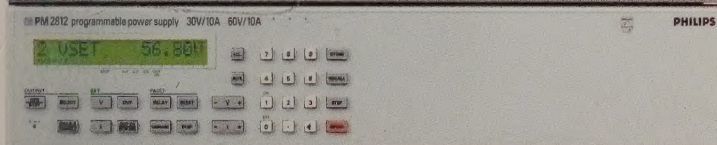
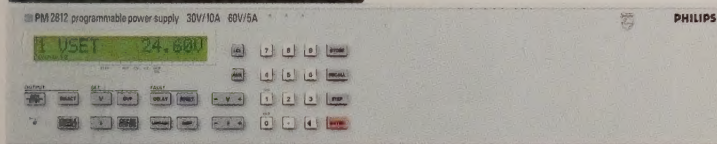


# PM2811-PM2812-PM2813

## Programmable Power Supplies

### Reference Manual

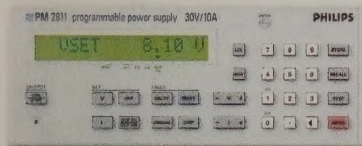

4822 872 80134

930806




**PHILIPS**







## 3



## IMPORTANT

In correspondence concerning this instrument please write down the model number and serial number as located on the type plate at the rear of this instrument.

For your reference:

Model number : PM .... / ...

Serial number : DM .....

*NOTE: The design of this equipment is subject to continuous development and improvement. Consequently, this equipment may incorporate minor changes in detail from the information contained in this manual.*

© Copyright Philips Export B.V., 1993

All rights reserved. No part of this manual may be reproduced by any means or in any form without written permission of the copyright owner.

Printed in The Netherlands

# **INSIDE THIS MANUAL**

## **HOW TO USE THIS MANUAL**

This reference manual has been aimed at the experienced user as well as the user new to Programmable Power Supplies. It will help the reader to operate the power supply manually (local operation) or from a PC via the General Purpose Interface Bus (remote operation).

### **This manual contains the following information**

- |                   |                                                                                                                                                                                                                                |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Chapter 1</b>  | <b>OPERATING INSTRUCTIONS</b><br>Gives full reference information about operating your power supply in the following modes:<br>1) locally (via the keys and the display)<br>2) remotely (via programming commands and queries) |
| <b>Chapter 2</b>  | <b>MAINTENANCE INSTRUCTIONS</b><br>Gives information about how to maintain your power supply, covering preventive measures as well as corrective measures.                                                                     |
| <b>Appendix A</b> | <b>TECHNICAL SPECIFICATIONS</b><br>Gives performance specifications about your programmable power supply.                                                                                                                      |
| <b>Appendix B</b> | <b>PERFORMANCE VERIFICATION PROCEDURE</b><br>Describes how to conduct a performance verification test for your programmable power supply.                                                                                      |
| <b>Appendix C</b> | <b>CALIBRATION PROCEDURES</b><br>Describes how to calibrate your power supply manually using the keys or remotely via a GPIB controller.                                                                                       |
| <b>Appendix D</b> | <b>ERROR MESSAGES</b><br>Gives a summary and explanation of the error messages.                                                                                                                                                |

## CONTENTS

Page:

|          |                                         |            |
|----------|-----------------------------------------|------------|
| <b>1</b> | <b>OPERATING INSTRUCTIONS</b>           | <b>1-3</b> |
| 1.1      | Introduction                            | 1-3        |
| 1.2      | Local operating instructions            | 1-3        |
| 1.2.1    | Key references                          | 1-4        |
| 1.2.2    | Display indicators                      | 1-41       |
| 1.3      | Remote operating instructions           | 1-43       |
| 1.3.1    | Command/query references                | 1-47       |
| <b>2</b> | <b>MAINTENANCE INSTRUCTIONS</b>         | <b>2-3</b> |
| 2.1      | Introduction                            | 2-3        |
| 2.2      | Preventive maintenance                  | 2-4        |
| 2.2.1    | Performance verification testing        | 2-4        |
| 2.3      | Corrective maintenance                  | 2-5        |
| 2.3.1    | Trouble shooting                        | 2-5        |
| 2.3.1.1  | Overcurrent situation                   | 2-5        |
| 2.3.1.2  | Overvoltage situation                   | 2-5        |
| 2.3.1.3  | Unknown calibration code                | 2-6        |
| 2.3.1.4  | Unregulated output situation            | 2-7        |
| 2.3.1.5  | Fail situation                          | 2-7        |
| 2.3.1.6  | Error during testing                    | 2-7        |
| 2.3.2    | Replacements                            | 2-8        |
| 2.3.2.1  | Replacing the fuses                     | 2-8        |
| 2.3.3    | Calibration                             | 2-8        |
| 2.3.3.1  | Calibration Procedure                   | 2-9        |
| <b>A</b> | <b>TECNICAL SPECIFICATIONS</b>          | <b>A-1</b> |
| A.1      | Characteristics of the power supplies   | A-1        |
| A.1.1    | Performance characteristics             | A-1        |
| A.1.1.1  | Instrument performance                  | A-1        |
| A.1.1.2  | Output channel 30V/10A/60W performance  | A-3        |
| A.1.1.3  | Output channel 60V/5A/60W performance   | A-5        |
| A.1.1.4  | Output channel 60V/10A/120W performance | A-7        |
| A.1.2    | Safety characteristics                  | A-9        |
| A.1.3    | Dimensions and weight                   | A-10       |
| A.1.4    | Mains supply conditions                 | A-11       |

|                                                   |            |
|---------------------------------------------------|------------|
| A.2 Interferences .....                           | A-11       |
| A.2.1 Electromagnetic interface .....             | A-11       |
| A.2.2 Radio frequency interface .....             | A-11       |
| A.3 General purpose interface bus .....           | A-12       |
| A.3.1 Interface specification .....               | A-12       |
| A.3.2 Function specification .....                | A-12       |
| A.4 Trigger bus .....                             | A-14       |
| A.4.1 Function specification .....                | A-14       |
| A.4.2 Timing relation .....                       | A-14       |
| <b>B PERFORMANCE VERIFICATION PROCEDURE .....</b> | <b>B-1</b> |
| B.1 General information .....                     | B-1        |
| B.2 Test equipment .....                          | B-1        |
| B.3 Output voltage/current check .....            | B-1        |
| <b>C CALIBRATION PROCEDURE .....</b>              | <b>C-1</b> |
| <b>D ERROR MESSAGES .....</b>                     | <b>D-1</b> |
| D.1 Instrument error messages .....               | D-1        |
| D.1.1 Functional error messages .....             | D-1        |
| D.1.2 Hardware error messages .....               | D-1        |
| D.2 SCPI command/query error messages .....       | D-3        |
| D.2.1 Command errors .....                        | D-3        |
| D.2.2 Execution errors .....                      | D-4        |
| D.2.3 Device-specific errors .....                | D-5        |
| D.2.4 Query errors .....                          | D-5        |



Digitized by the Internet Archive  
in 2025

[https://archive.org/details/manualsplus\\_06182](https://archive.org/details/manualsplus_06182)

# 1 OPERATING INSTRUCTIONS

## 1.1 Introduction

This chapter contains all the details about how to operate your programmable power supply. There are two main sections:

Section 1.2: Operating locally using the keys and the display.

Section 1.3: Programming remotely via a GPIB controller (commands/queries).


## 1.2 Local operating instructions

The keys described in this chapter are listed in the order as numbered on next page. Following pages give a functional description of each individual key. Each key description starts on a new page and consists of the following:


- **Key legend**
- **Action:** Describes the function of the key.
- **Display:** Response on the display.
- **Description:** Additional information.
- **Example:** Sample use.
- **Errors:** Error conditions and error messages.

- Notes:**
- *In general you can assume that an operating function that is started by pressing a function key can be terminated by pressing the ENTER key or another function key.*
  - *For a single output model, the displayed indication *n* will be a space.*
  - *For a multiple output model, the displayed indication *n* is the output channel selected.*
  - *For most of the reference descriptions it is assumed that the power supply is in the OPERATE mode.*
  - *A key is active only in the LOCAL mode, except for the LCL key.*

## 1.2.1 Key references

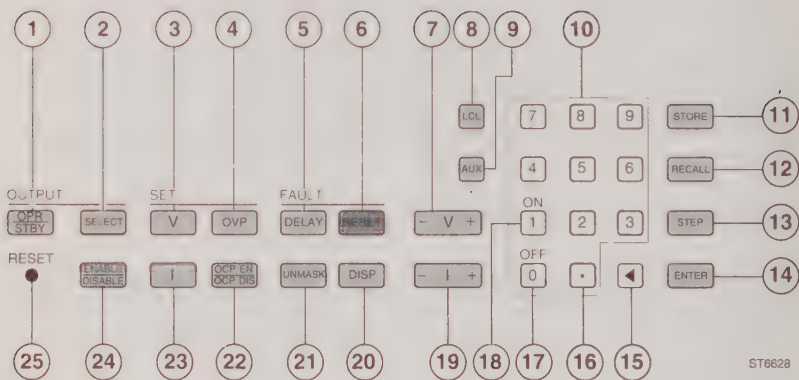

## Display

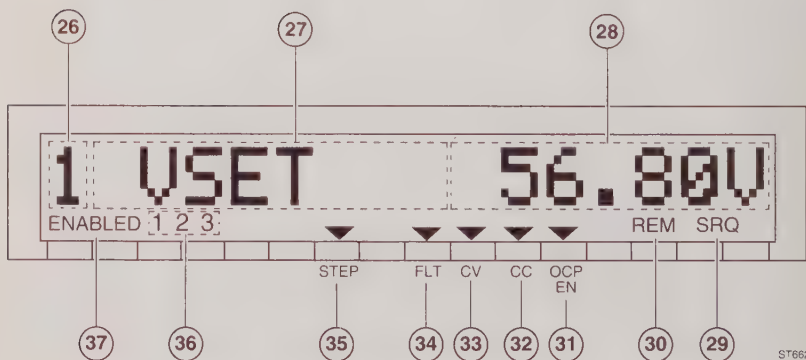



**Action:** Controls all output channels of the power supply at the same time. All output channels will go into the OPERATE mode or into the STANDBY mode.

**Display:** In the STANDBY mode with output channel n selected:

n S T A N D B Y

In the OPERATE mode with output channel n enabled and selected:

n d d . d d V d d . d d A

In the OPERATE mode with output channel n disabled and selected:

n D I S A B L E D

**Description:**

If an individual output was disabled, it will remain disabled when your power supply goes into the OPERATE mode. When your power supply is in the STANDBY mode, it will behave as if it was programmed to zero volts and zero amperes.


By switching from the OPERATE mode to the STANDBY mode the protection of all output channels is reset. The fault register(s) will not be cleared.

**Example:**

Press  to select output 1 (for multiple output models only)

Press  to enable output 1 (for multiple output models only)

Press  to enter the OPERATE mode.



**Action:** Selects the next output channel.


**Display:** The number of the selected output channel is shown on the display as the leftmost character. For a single output model, the output channel number is not displayed.

**Description:**

This key is applicable only for multiple output channel models. The selection of the output channels is in a forward and cyclic sequence when pressing the SELECT key sequentially, i.e., output 1 first, then output 2, output 3, and output 1 again.

**Example:**

This key is useful for verifying the settings of all output channels. It is also useful for examining the operating status of all output channels, i.e., to check which annunciators are displayed.



**Action:** Verifies or sets the output voltage of the selected output channel.  
The voltage can be set when this key is used with the numerical input keys.  
In step mode the active voltage is shown when pressing this key.

**Display:** n V S E T d d . d d V

**Description:**

Your power supply will round off the entered voltage setting  $V_{\text{set}}$  to the nearest multiple of the resolution of the selected output channel.

OUTPUT CHANNEL:      RESOLUTION OF THE VOLTAGE:

30V/10A                      7.5 mV

60V/5A                      15 mV

60V/10A                    15 mV

If a value outside the valid range is entered, it will be ignored, and the display will show: V S E T M A X = d d V

For a 30V/ 10A module: dd= 30 V

For a 60V/ 5A module: dd= 60 V

For a 60V/ 10A module: dd= 60 V

This function is active in the STANDBY mode as well as in the OPERATE mode. Press the SELECT key to select one of the output channels (n).

When the V key is used in the step mode, the actual output voltage is displayed (in the OPERATE mode) or the voltage setting (in the STANDBY mode).

**Example:**

Press V

The display will show: n V S E T d d . d d V

Press 1 2 . 3 4

The display will show: n V S E T 1 2 . 3 4 V

Press ENTER to enter the programmed output voltage.

If the output channel is in OPERATE mode and in CV mode, the display will show: n 1 2 . 3 4 V d d . d d A

**OVP****4**

**Action:** Verifies or sets the overvoltage trip level of the selected output channel. The overvoltage trip level can be set with the numerical input keys.

**Display:** `n O V S E T d d . d d V`

**Description:**

Your power supply will round off the entered overvoltage level OVset to the nearest multiple of the resolution of the selected output channel.

| <u>OUTPUT CHANNEL:</u> | <u>RESOLUTION OF THE OVERVOLTAGE:</u> |
|------------------------|---------------------------------------|
| 30V/10A                | 120 mV                                |
| 60V/ 5A                | 240 mV                                |
| 60V/10A                | 240 mV                                |

The programmable overvoltage protection guards the load against excessive voltages. If the overvoltage level is exceeded, the output channel will be shut down, i.e. the output reduced to zero volts and zero amperes. Also the message OVERVOLTAGE will be displayed. If a value outside the valid range is input, it will not be accepted and the display will show:

`O V S E T M A X = d d V`

For a 30V/10A module dd = max. 32 V and min. 2 V

For a 60V/ 5A module dd = max. 62 V and min. 2 V

For a 60V/10A module dd = max. 62 V and min. 2 V

Recovery from this fault situation can be accomplished by removing the cause of the overvoltage protection tripping and by pressing the RESET key.

Press the SELECT key to select one of the output channels.

When COUPLED PROTECTION is on, the output channel may also be shut down if another coupled output channel is shut down because of any protection tripping.

### Example:

There is an overvoltage situation that must be reset. The output voltage setting = 18 V. Therefore, proceed by setting the overvoltage trip level higher than the programmed voltage setting:

- Press
- Press  and check the overvoltage setting.
- The display will show: n O V S E T 2 0 . 0 0 V
- Press . The overvoltage level remains at 20 V.
- Press  to reset the overvoltage situation.

### Errors:

If the programmed value is higher than the maximum allowed value, the following is displayed: O V S E T M A X = n n V

If the programmed value is lower than the minimum allowed value, the following is displayed: O V S E T M I N = n V

If another coupled output channel has been shut down and the DEN bit has been unmasked, the following is displayed only once after a reset:

n F A U L T O U T P U T m



5

**Action:** Verifies or changes the reprogramming delay time in units of 0.001 seconds from 0.01 to 60.00 seconds.

**Display:** n DELAY 0.01 s

The display shows the actual setting, which can be changed by pressing the numeric entry keys, then pressing the ENTER key.

**Description:**

When the setting of an output channel is altered or after a protection reset, your power supply may change modes momentarily. To prevent the reporting of faults during this momentary switching, a delay can be programmed. This reprogramming delay specifies the time period in which the CV, CC, and UNR bits in the status register will be masked from being reported in the fault register and from activating the overcurrent protection circuit. If a value outside the valid range is input, it will not be accepted and the display will show:

DELAY MAX = 60 s

The reprogramming delay is active when a function is executed, that is activated by means of the following keys:



**Example:**

The power supply must be in the local mode, i.e., the text REM may not be displayed.

Press

The display will show: n DELAY dd . dd s

Press

The display will show: n DELAY 1 . s

Press

The display will show: n DELAY 1 . 23 s

Press to enter the reprogramming delay of 1.23 seconds.



**Action:** Resets the selected output channel to its programmed operating mode.

**Description:**

The following protection features will be reset in the OPERATE mode:

- overvoltage
- overcurrent
- overtemperature
- open sense terminals or excessive sense capability

Before any protection can be reset, the condition(s) that activated the protection must be removed, e.g.:

- In the case of an overvoltage or overcurrent situation, the load conditions must be changed or the output settings must be adjusted.
- In the case of overtemperature, the internal reference temperature has to become lower than the specified release temperature of  $60^{\circ}\text{C} \pm 5^{\circ}\text{C}$ .
- In the case of open sense, the sensing circuit must be checked or the wire resistance must be lowered.

*Note: A fault indication in the status register will not be reset by pressing the RESET key. Reset of a fault indication will occur only after the fault register has been read.*

**Example:**

There is an overvoltage situation, which must be reset. Proceed by setting the overvoltage trip level 20 % higher than the programmed voltage of 50 V:

- Press
- The display will show: n O V S E T 6 0 . 0 0 V
- Press  to enter the overvoltage trip level.
- Press  to reset the overvoltage protection circuit.



**Action:** Adjusts the output voltage setting.

**Display:** The actual output voltage and current will be displayed if the power supply is in the OPERATE mode.

**Description:**

The output voltage setting will be decreased when you press the left part (- V), and will be increased when you press the right part (V +). The change in voltage setting depends on the programming resolution.

For 30V/ 10A/ 60W : LSB = 0.0075 V

For 60V/ 5A/ 60W : LSB = 0.015 V

For 60V/ 10A/ 120W : LSB = 0.015 V

(LSB = least significant bit)

The change of the output voltage can be monitored on the display, if the power supply is in the constant voltage (CV) mode of operation. This key is active only in the OPERATE mode.

*Note: Keeping the left or the right part of the key depressed will cause the output voltage setting to automatically decrease or increase at a rate of 4 times per second after  $\frac{1}{2}$  second with its LSD value, and after 3 seconds with 10 times its LSD value (LSD = least significant digit).*

Increasing the output voltage setting is possible until one of the following conditions occurs:

- The maximum setting of the output voltage is reached.
- The maximum setting of the output power ( $I_{set} \times V_{set}$ ) is reached. In this case there are two possibilities, i.e.:
  - COUPLED\_PARAMETERS = ON:  
The power supply will adjust the current setting  $I_{set}$  along the constant power characteristic, until the maximum setting of the output power is reached. Every time the current setting is adapted, the CP bit in the status register is set.
  - COUPLED\_PARAMETERS = OFF:  
The power supply will not adjust the settings. The output voltage increasing will stop at its maximum possible value.

If the constant voltage (CV) mode is entered, the annunciator above the text CV is displayed.

Note: If  is pressed while the voltage is not displayed, the adjustment of the output voltage setting goes on!

**Example:**

For this example your power supply must be in the OPERATE mode and in the Constant Voltage mode of operation, i.e., the annunciator above the text CV should be displayed.

The display will show, e.g.: n    a a . a a V    d d . d d .

Press the right part of the – V + key 6 times.

The display will show, e.g.: n    b b . b b V    d d . d d .

For a 60V/5A output channel, the value of bb.bb should be approximately  $6 \times 0.015 = 0.09$  volt higher than aa.aa.



**Action:** Obtains local control of the power supply.

**Display:** The text REM will no longer be displayed.

**Description:**

When the keyboard was locked in the remote state, it will automatically be unlocked again if the LCL key is pressed.


The display will be turned on if it was turned off during remote operation.

Local control cannot be obtained, if your power supply has been programmed in the 'local lockout' state.



9

**Action:** Executes auxiliary interface and control functions. Those functions are presented in a main menu/submenu structure. Each time the AUX key is pressed, the next main menu or next submenu function is controlled. The first STEP submenu function is entered by pressing the ENTER key.

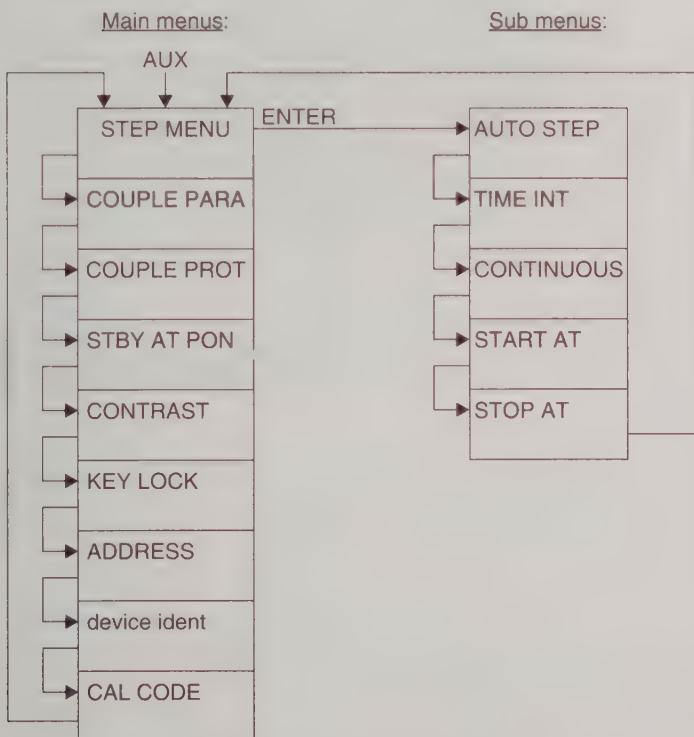

**Note:** The menu structure is exited when the ENTER key is pressed instead of the AUX key.

| STEP | FUNCTION                | FRONT PANEL KEYS TO BE USED     |
|------|-------------------------|---------------------------------|
| 1    | STEP MENU               | ENTER (goto 1a)<br>AUX (goto 2) |
| a    | • AUTO STEP             | ON, OFF                         |
| b    | • step TIME INterval    | 0 ... 9 + ENTER                 |
| c    | • CONTINUOUS step       | ON, OFF                         |
| d    | • sequence START AT     | 0 ... 9 + ENTER                 |
| e    | • sequence STOP AT      | 0 ... 9 + ENTER                 |
| 2    | COUPLE PARAMeters       | ON, OFF                         |
| 3    | COUPLE PROTection       | ON, OFF                         |
| 4    | StandBY AT Power ON     | ON, OFF                         |
| 5    | display CONTRAST        | 0 ... 9 + ENTER                 |
| 6    | KEYboard LOCK           | ON, ENTER                       |
| 7    | GPIB interface ADDRESS  | 0 ... 9 + ENTER                 |
| 8    | device identification   | SELECT                          |
| 9    | CALibration access CODE | 0 ... 9 + ENTER                 |

*Note: ON is the 1 key, and OFF is the 0 key.*

**Display:** The following functional text will be displayed: (with default values)

```

1 :   S T E P   M E N U
1a :   A U T O   S T E P           O F F
1b :   T I M E   I N T           0 . 1 5
1c :   C O N T I N U O U S       O F F
1d :   S T A R T   A T           1
1e :   S T O P   A T             9 9
2 :   C O U P L E   P A R A       O F F
3 :   C O U P L E   P R O T       O F F
4 :   S T B Y   A T   P O N       O N
5 :   C O N T R A S T             8
6 :   K E Y   L O C K             O F F
7 :   A D D R E S S             2 8
8 :   P M 2 8 1 x   S y . y   N : z z

```

*Notes: x is the last digit of the type number.*

*y,y is the version of the processor software.*

*zz is the software version of output channel N.*

```

9 :   C A L   C O D E

```

## **Description:**

The sequence of functions in the menu is fixed. The subsequent data for each function can be verified or changed without leaving the menu. This makes it possible to view and change all the functions in one session. The sequence of functions after pressing the AUX key is as follows:

### **1: STEP MENU**

This function consists of five subfunctions to define the STEP function. Press the ENTER key to enter the first submenu function. Press the AUX key to enter the next main menu.

#### **1a AUTO STEP**

The auto-step function can be set on or off, using the ON(1) or OFF(0) key. If auto-step is on, the AUTO\_STEP function is executed as soon as the power supply enters the OPERATE mode. If the AUTO\_STEP function is executed, it is not possible to step manually by using the STEP key. The AUTO\_STEP function can be exited by setting the AUTO\_STEP to OFF or by pressing the ◀ (backspace) key. During the execution of the AUTO\_STEP function, the annunciator above the text STEP on the front panel is displayed.

#### **1b TIME INT**

The step interval time can be set. The range of the setting is from 0.1 to 60.0 seconds, in steps of 0.1 second. If auto-step is on and the OPERATE mode is entered, the AUTO\_STEP function is executed. The AUTO\_STEP function is not executed in the STANDBY mode.

#### **1c CONTINUOUS**

The continuous step function can be set on or off, using the ON(1) or OFF(0) key. If continuous step is on, the preprogrammed STEP sequence is executed continuously. If continuous step is off, one preprogrammed STEP sequence is executed, starting with the start step address and stopping at the stop step address.

#### **1d START AT**

The start address of the step sequence can be set. The range of the setting is from 1 to 99. The start address indicates the beginning of the sequence.

#### **1e STOP AT**

The stop address of the step sequence can be set. The range of the setting is from 1 to 99. The stop address indicates the end of the sequence.

*Note: The stop address (e.g., 20) may be smaller than the start address (e.g., 50). If this is the case, the sequence will be 50, 51 to 98, 99, 1, 2 to 19, 20.*

## 2: COUPLE PARA

This function allows the coupling between the programmed voltage and current setting of an output channel by using the ON(1) or OFF(0) key. If the coupling is on, the programmed voltage or current setting will be adjusted to maximum power if one of these settings would cause maximum power to exceed. If the voltage-current coupling is on, it is applicable for all output channels.

## 3: COUPLE PROT

This function allows the coupling between the protection mechanisms of all available output channels, using the ON(1) or OFF(0) key. If one of the enabled output channels shuts down because of OVP, OCP or FAIL, all enabled output channels will be shut down too. This situation can be reset by removing the cause of the shutdown and by resetting the protection circuitry of the output channel that caused the shutdown. This will switch on all output channels again to output their programmed values.

## 4: STBY AT PON

This function defines the 'power on' behavior of your power supply. You can program that behavior to be one of two modes, i.e. the STANDBY mode (press the ON (1) key) or the mode that your supply was in at the moment of power off (press the OFF (0) key).

## 5: CONTRAST

This function enables you to adjust the contrast of the display by programming a number between 0 and 9. The number 0 presents the lowest contrast and the number 9 presents the highest contrast.

## 6: KEY LOCK

This function enables you to lock the keyboard to prevent unauthorized operation. The message KEY LOCK OFF will be displayed. To lock the keyboard, the key ON (1) must be pressed. This will set the display to its previous state. If any key is pressed, the message KEY LOCK ON will be displayed. To unlock the keyboard, the ENTER key must be pressed for at least 5 seconds. If the keyboard has been locked, it is not possible to verify any programmed settings.

## 7: ADDRESS

This function allows you to verify and/or change the GPIB interface address. The display shows the current address as an integer in the range from 0 to 30. The address can be changed using the numeric keys, followed by pressing the

ENTER key. If a value outside the valid range is input, it will be ignored and the display will show: ADDRESS MAX = 30

*Note: Address 0 is often used as GPIB controller address.*

#### 8: instrument identification

This function displays the identity of your power supply. The display will show:

P M 2 8 x x S Y . y N : z z

x x are the last digits of the instruments type number.

y . y is the version of the central processor software.

zz indicates the software version of the output N.

For a multiple output model, the output channel N can be changed using the SELECT key. This enables you to verify the software version of all output channels.

#### 9: CAL CODE

This function allows you to verify and/or set the 4 digit access code, used as password to enter the calibration mode. This code is initially set at the instrument type number, e.g. 2811. If the correct code is typed, followed by pressing the ENTER key, a request for a new code is done. After the new code has been typed, followed by pressing the ENTER key, a request to verify the code is done. If the new code is typed again, followed by pressing the ENTER key, then the new code is accepted as the new calibration access code. If a new code is not wanted, press the key ENTER after the request for a new code.

*Note: Please note down your (new) calibration code. If you forgot your calibration code, refer to section 2.3.1 "Troubleshooting".*

Pressing the AUX key again, starts the menu from the beginning. You can exit the menu by pressing the ENTER key once or twice.

If you turn the power on, while keeping the AUX key depressed, your power supply will ask you for the calibration access code before it enters the CALIBRATION mode. By pressing the SELECT key, you can select the output channel to be calibrated. Refer to chapter 2 "MAINTENANCE".

## Errors:

When the maximum step interval time has been exceeded.

When the maximum start address of the step sequence has been exceeded.

When the maximum stop address of the step sequence has been exceeded.

When the maximum GPIB interface address has been exceeded.

**0** to **9** (numeric keys) **10**

**Action:** Enter decimal figures.

**Display:** The decimal figure will be displayed.

**Description:**

These keys can be used to enter one of the decimal figures 0, 1, 2, 3, 4, 5, 6, 7, 8, or 9.

**Example:**

Press V 1

The display will show: n

Press 2

The display will show: n

Press ☐

The display will show: n

Press 

The display will show: n

Press 4

The display will show: n

Press ENTER

The display will show: n

(if in the OPERATE mode)

**STORE**

11

**Action:** Stores the actual voltage and current settings of all output channels into the recall memory.

**Display:** S T O R E

**Description:**

A recall memory consists of 99 addresses, numbered from 1 to 99. A recall memory address contains space for the voltage and current setting of all available output channels.

After a group of settings has been stored, it can be recalled using the RECALL key. If a value outside the valid range is input, it will not be accepted and the display shows: S T O R E M A X = 9 9

**CAUTION:** The voltage and current settings of all output channels are stored to the memory address specified.

**Example:**

Press **STORE**

The display will show: S T O R E

Press **5** **4**

The display will show: S T O R E 5 4

Press **ENTER**

Now the voltage and current setting of all output channels are stored at memory address 54.

Change the voltage and current setting of the selected output channel by pressing the V and I key + the numeric keys + the ENTER key.

Press **RECALL** **5** **4**

Press **ENTER** to recall the voltage and current setting of all output channels.

Press **V** to check that the previously stored voltage setting of the selected output channel has been restored.

Press **I** to check that the previously stored current setting of the selected output channel has been restored.

RECALL

12

**Action:** Recalls the stored voltage and current settings of all output channels from the recall memory.

**Display:** R E C A L L

**Description:**

A recall memory consists of 99 addresses, numbered from 1 ... 99. A recall memory address contains space for the voltage and current setting of all available output channels.

After a group of settings is recalled, the display will show the new output voltage and current when your supply is in the OPERATE mode. When your supply is in the STANDBY mode, the new output settings will become active as soon as the OPERATE mode is entered. If a value outside the valid range is input, it will not be accepted, and the display shows:

R E C A L L M A X = 9 9

**Note:** When a memory address is recalled, the voltage and current setting of all output channels is restored from that address.

**Example:**

Press STORE 5 4 ENTER

Now the voltage and current setting of all output channels are stored at memory address 54.

Change the voltage and current setting of the selected output channel using the V and I key + the numeric keys + the ENTER key.

Press RECALL

The display will show: R E C A L L

Press 5 4

The display will show: R E C A L L 5 4

Press ENTER to recall the voltage and current setting of all output channels.

Press V to check that the previously stored voltage setting of the selected output channel has been restored.

Press I to check that the previously stored current setting of the selected output channel has been restored.

**Action:** Steps from one recalled group of settings to the next one. This makes it easy to verify or sequentially execute a number of predefined settings.

**Display:**

- after 1x STEP key : n S T E P T O 1
- address aa + ENTER key : n S T E P a a d d . d d V  
Check that the annunciator above the text STEP is displayed.
- after I key : n S T E P a a e e . e e A
- after V key : n S T E P a a d d . d d V
- after STEP key : n S T E P b b d d . d d V

**Notes:** aa is the recall address from 1 to 99.

dd.dd is the new voltage setting

ee.ee is the new current setting

bb is the address after aa, i.e.  $bb = aa + 1$

In the STANDBY mode, only the new voltage and current setting are shown. In the OPERATE mode the new voltage and current setting are recalled and the read back displayed.

### Description:

After pressing , the message STEP TO aa (aa is the previous recall address) is displayed. This address can be changed by pressing the numeric keys. The new address is entered by pressing . Then the annunciator above the text STEP on the front panel will be displayed to indicate that the step function is entered.

The voltage or current value to be displayed can be selected at any time by pressing the V or the I key. Any next activation of the STEP key increments the step address. A sequence may be accessed at any address within the predefined range, which is defined in the STEP submenu of the AUX function key (START AT and STOP AT). If an address is entered outside the predefined range, the message INVALID STEP is displayed.

The STEP function can be entered in the OPERATE as well as the STANDBY mode and can be exited by pressing  or . The last recalled voltage and current remain actual.

In the OPERATE mode the output settings are updated according to the recalled settings. In the STANDBY mode the contents of the recall addresses can be verified.

The message STEP MAX= 99 is displayed if an address outside the possible range (1 to 99) is entered.

**Example:**

Press  in order to enter the step function.

Press    to select address 20.

Sequence:

Select the output channel by pressing .

Check the voltage by pressing .

Check the current by pressing .

Press  to examine the next address.

Repeat this sequence as many times as necessary.

**Error:**

I N V A L I D   S T E P

is displayed if an address is entered  
outside the valid range

S T E P       M A X =    9 9

is displayed if an address is entered  
outside the possible range



**Action:** Executes a command or a function.

**Description:**

By pressing this key a function will be terminated or a programmed value will be entered.

This key can also be used for removing an error message from the display.

**Example:**

Press

The display will show: n V S E T 1 V

Press

The display will show: n V S E T 1 2 . 3 4 V

Press

The display will show: n 1 2 . 3 4 V d d . d d A

(if in the OPERATE mode and in the CV mode of operation)



**Action:** Erases the input of the previous keystroke.

**Display:** The text from the last key will be erased from the display.

### Description:

This key can be used to correct a wrong keystroke by pressing the backspace key, followed by pressing the correct key.

This key is also used to leave the step function. Manual as well as automatic stepping through a number of voltage/current settings is aborted by pressing this key.

### Example 1:

Press

The display will show: n V S E T 1 3 V

Press

The display will show: n V S E T 1 2 V

Press

The voltage setting has not been changed.

### Example 2:

Press

The display will show: n V S E T a a . a a V

Press

The display will show: n V S E T V

*Note: The actual value has been erased from the display*

Press

Now the latest voltage is actual again, i.e., the voltage setting has not been changed.



16

**Action:** Enters a decimal point.

**Display:** The display will show the decimal point.

**Description:**

This key can be used to insert a decimal point into a value to be input.

**Example:**

Press

The display will show: n V S E T 1 V

Press

The display will show: n V S E T 1 2 V

Press

The display will show: n V S E T 1 2 . V

Press

The display will show: n V S E T 1 2 . 3 V

Press

The display will show: n 1 2 . 3 0 V d d . d d A  
(only in the OPERATE mode)

OFF



ON



**Action:** Sets a predefined function or value off or on.

**Description:**

The OFF key is the same as the 0 key.

The ON key is the same as the 1 key.

**Example:**

Press  twice.

Press  to set the UNMASK-DEN bit ON.

Press 

Press  to set the UNMASK-CP bit OFF.

Press 



19

**Action:** Adjusts the output current setting.

**Display:** The actual output voltage and current will be displayed if the power supply is in the OPERATE mode.

**Description:**

The output current setting will be decreased when you press the left part (- |), and will be increased when you press the right part (| +). The change in current setting depends on the programming resolution.

For 30V/ 10A/ 60W : LSB = 0.04 A

For 60V/ 5A/ 60W : LSB = 0.02 A

For 60V/ 10A/ 120W : LSB = 0.04 A

(LSB = least significant bit)

The change of the output current can be monitored on the display, if the power supply is in the constant current (CC) mode of operation. This key is active only in the OPERATE mode.

*Note: Keeping the left or the right part of the key depressed will cause the output current setting to automatically decrease or increase at a rate of 4 times per second after  $\frac{1}{2}$  second with its LSD value, after 3 seconds with 10 times its LSD value (LSD = least significant digit).*

Increasing the output current setting is possible until one of the following conditions occurs:

- The maximum setting of the output current is reached.
- The maximum setting of the output power (Iset x Vset) is reached. In this case there are two possibilities:
  - COUPLED\_PARAMETERS = ON:  
The power supply will adjust the voltage setting Vset along the constant power characteristic until the maximum setting of the output power is reached. Every time the voltage setting is adapted, the CP bit in the status register is set.
  - COUPLED\_PARAMETERS = OFF:  
The power supply will not adjust the settings. The output current increasing will stop at its maximum possible value.

If the constant current (CC) mode is entered before the maximum output power is reached, the annunciator above the text CC is displayed. If the

overcurrent protection was enabled in this case, the protection becomes active and the output voltage and current will be reduced to zero.

*Note: If  is pressed while the current is not displayed, the adjustment of the output current setting goes on!*

### **Example:**

For this example your power supply must be in the OPERATE mode and in the Constant Current mode of operation, i.e. the annunciator above the text CC should be displayed.

The display will show, e.g.: n    a a . a a V    d d . d d A

Press the right part of the **- I +** key 6 times.

The display will show, e.g.: n    a a . a a V    e e . e e A

For a 60V/5A output channel, the value of ee.ee should be approximately  $6 \times 0.02 = 0.12\text{A}$  higher than dd.dd.

**Action:** Displays the bits in the fault register for the selected output channel and clears the fault register.

[illegible]

**Description:**

The unmasked events are accumulated in the fault register. The decimal number displayed (ddd) represents the sum of the individual bit values:


| <u>BIT:</u>      | <u>VALUE:</u> | <u>MEANING:</u>                             |
|------------------|---------------|---------------------------------------------|
| bit 0 = 1 adds   | 1             | CV Constant Voltage                         |
| bit 1 = 1 adds   | 2             | CC Constant Current                         |
| bit 2 = 1 adds   | 4             | OV Over Voltage                             |
| bit 3 = 1 adds   | 8             | OC Over Current                             |
| bit 4 = 1 adds   | 16            | FL Failure (overtemperature or sense break) |
| bit 5 = 1 adds   | 32            | UNR Unregulated output                      |
| bit 6 = 1 adds   | 64            | CP Coupled Parameters                       |
| bit 7 = not used |               | No meaning                                  |
| <hr/>            |               |                                             |
| total max. =     | 127           |                                             |

Pressing the DISP key again will show whether a bit in the fault register has been set (ON) or not set (OFF). Each time the DISP key is pressed, the next bit will be displayed from the CP up to the CV bit. When a new fault occurs during displaying of the fault register (bits), the new contents of the fault register will be shown by pressing the DISP key again. If no new fault occurred during the displaying, the message NO FAULT will be displayed at the end. The DISP function is exited by pressing the ENTER key.

After having displayed the fault register, the bits in the fault register are cleared.

Press the SELECT key to select one of the output channels (n).  
For unmasking of the bits, refer to the UNMASK key.

The following diagram shows the relation between the STATUS, UNMASK, and FAULT registers: (STATUS and UNMASK = FAULT)

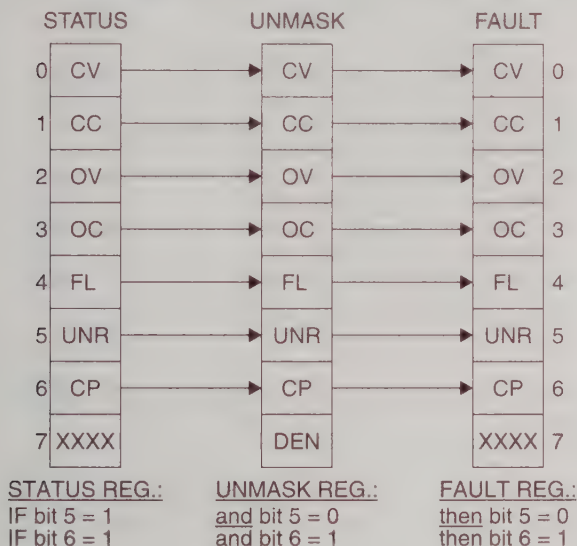

*Note:* The bits in the fault register have been accumulated in order of occurrence. The sequence of the occurrences cannot be determined from the bit settings.

### Example:

Press DISP

The display will show, e.g.: n F A U L T 4 1

The decimal figure 41 is the sum of 32 + 8 + 1.

This means: 1 = bit 0 set, i.e., constant voltage mode

8 = bit 3 set, i.e., overcurrent detected

32 = bit 5 set, i.e., unregulated output

### Errors:

After a fault in the selected output channel, the annunciator above the text FLT will be displayed.

**Action:** Displays or sets the actual unmask setting of the selected output channel.

|                 |             |                     |       |
|-----------------|-------------|---------------------|-------|
| <b>Display:</b> | 1st time: n | U N M A S K         | d d d |
|                 | 2nd time: n | U N M A S K - D E N | O F F |
|                 | 3rd time: n | U N M A S K - C P   | O F F |
|                 | 4th time: n | U N M A S K - U N R | O F F |
|                 | 5th time: n | U N M A S K - F L   | O F F |
|                 | 6th time: n | U N M A S K - O C   | O F F |
|                 | 7th time: n | U N M A S K - O V   | O F F |
|                 | 8th time: n | U N M A S K - C C   | O F F |
|                 | 9th time: n | U N M A S K - C V   | O F F |

#### Description:

If a value outside the valid range is input, it will be ignored and the display will show: U N M A S K M A X = 2 5 5

The meaning of the status unmask bits is as follows:

bit 7 = 128 = DEN : Enable the display of a fault message of another output channel (only for multiple output models).

bit 6 = 64 = CP : Coupled parameters have been adapted.

bit 5 = 32 = UNR : Output is unregulated.

bit 4 = 16 = FL : Output channel is in overtemperature or sense break (fail).

bit 3 = 8 = OC : Output channel is in overcurrent.

bit 2 = 4 = OV : Output channel is in overvoltage.

bit 1 = 2 = CC : Output channel is in constant current mode.


bit 0 = 1 = CV : Output channel is in constant voltage mode.

The setting can be changed in two ways:

- I) Program a decimal number as the sum of the decimal values of the bits to be set. Programming a 0 clears all the bits in the unmask register, i.e., the status register cannot set any bit in the fault register.
- II) Press the key UNMASK sequentially. This will show all the programmable unmask bits that can be set or reset individually, using the ON (1) and OFF (0) keys. Setting a bit ON allows the corresponding bit in the status register to set the corresponding bit in the fault register. Setting a bit OFF disables the corresponding bit in the status register from setting the corresponding bit in the fault register.

Press the SELECT key to select one of the output channels. The menu can be exited by pressing the ENTER key.

The following diagram shows the relation between the STATUS, UNMASK and FAULT registers: (STATUS and UNMASK = FAULT)

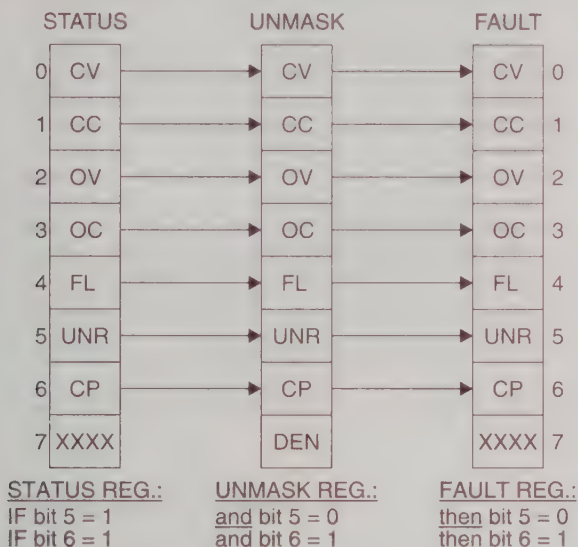

*Note: The bits in the fault register have been accumulated in order of occurrence. The sequence of the occurrences cannot be determined from the bit settings.*

Consider carefully which bits should be masked or not from being reported. The FL bit (Failure) and the UNR bit (unregulated output) should always be kept unmasked, i.e., ON.

**Example:** (using decimal values)

Set the bits 6, 5 and 4 in the unmask register.

The decimal value of bit 6 =  $2^6 = 64$

The decimal value of bit 5 =  $2^5 = 32$

The decimal value of bit 4 =  $2^4 = 16$

total = 112

Press

The display will show: n    U N M A S K    d d d

Press

The display will show: n    U N M A S K    1 1 2

Press  to enter the unmask setting.

**Example:** (using the ON (1) and OFF (0) keys)

Set the bits 6, 5 and 4 in the unmask register as follows:

Press

Press   (bit 7 = 0)

Press   (bit 6 = 1)

Press   (bit 5 = 1)

Press   (bit 4 = 1)

Press   (bit 3 = 0)

Press   (bit 2 = 0)

Press   (bit 1 = 0)

Press   (bit 0 = 0)

Press  and check that the unmask setting = 112.

Press  to end the unmask setting.



22

**Action:** Disables or enables the overcurrent protection.

**Display:** If enabled, the annunciator pointing at the text **OCP EN** will be displayed.  
If enabled and an overcurrent situation has occurred, the following message is displayed: **n O V E R C U R R E N T**

**Description:**

When the overcurrent protection has been enabled and the selected output channel outputs a current that exceeds the programmed output current limit, the output channel will be shut down, i.e., the output is reduced to zero volts and zero amperes. Also the message **OVERCURRENT** will be displayed. Recovery from this fault situation can be accomplished by removing the cause of the overcurrent, than pressing the **RESET** key.

When **COUPLED PROTECTION** is on, the output channel may also be shut down if another coupled output channel is shut down because of an activated protection.

**Example:**

The power supply is in the Constant Current mode of operation.

Press  to enable the overcurrent protection.

The overcurrent protection circuit for the selected output channel will immediately be activated and the message **OVERCURRENT** will be displayed. Also the annunciator above the text **OCP EN** will be displayed.

Press  to disable the overcurrent protection.

Press  to reset the overcurrent protection circuit.

Now the power supply is back in Constant Current mode. The annunciator above the text **OCP EN** is no longer displayed.

**Error:**

If another coupled output channel has been shut down and the **DEN** bit has been unmasked, the following is displayed only once after a reset:

**n F A U L T O U T P U T m**



23

**Action:** Verifies or sets the current level of the selected output channel. The output current can be set by pressing the numerical input keys. In step mode the active current is shown when pressing this key.

**Display:** n I S E T d d . d d A

**Description:**

Your power supply will round off the entered current setting  $I_{set}$  to the nearest multiple of the resolution of the selected output channel.

| <u>OUTPUT CHANNEL:</u> | <u>RESOLUTION OF THE CURRENT:</u> |
|------------------------|-----------------------------------|
| 30V/10A                | 40 mA                             |
| 60V/ 5A                | 20 mA                             |
| 60V/10A                | 40 mA                             |

If a value outside the valid range is entered, it is ignored and the display shows: I S E T M A X = d d A

For a 30V/10A module: dd = 10 A

For a 60V/ 5A module: dd = 5 A

For a 60V/10A module: dd = 10 A

This function is active in the STANDBY mode as well as in the OPERATE mode. Press the SELECT key to select one of the output channels (n).

When  is pressed in the step mode, the actual output current is displayed (in the OPERATE mode), or the current setting is displayed (in the STANDBY mode).

**Example:**

Press 

The display will show: n I S E T d d . d d A

Press    

The display will show: n I S E T 1 . 2 3 A

Press  to enter the programmed maximum current level.

If the output channel is in the OPERATE mode and in the CC mode, the display will show: n d d . d d V 1 . 2 3 A



24

**Action:** Enables or disables the selected output channel. The enable status of each output channel is indicated on the display by appearance of the output channel number after the text **ENABLED**.

**Display:** If output 1 has been disabled: 1 D I S A B L E D  
(and in OPERATE mode) ENABLED  
If output 1 was enabled: 1 d d . d d V d d . d d A  
(and in OPERATE mode) ENABLED 1

### Description:

This key is applicable only for multiple output channel models. A maximum of three output channels can be enabled. This will be indicated on the display as follows: **ENABLED 123**. In this way you can quickly verify which output channels have been enabled to output power.

The enable function, however, is overruled in the **STANDBY** mode of the power supply, which is selected by pressing the **OPR/STBY** key. When the output has been disabled, it will behave as if it was programmed to zero volts and zero amperes.

Press the **SELECT** key to select one of the output channels (n).

### Example:

Press **SELECT** to select output 1 (only applicable for multiple output channel models).

Press **ENABLE/DISABLE** to enable output 1 (only applicable for multiple output channel models).

Press **OPR/STBY** to set the power supply in the **OPERATE** mode.

The display will show: 1 d d . d d V d d . d d A  
ENABLED 1

## RESET



**Action:** Resets your power supply to power-on conditions when the recessed RESET button is activated with a pencil-point.


**Description:**

This feature has been implemented to reset your power supply without the need to switch the power off and on.

All programmed values before the system reset remain actual.

The reset behavior can be programmed using the STBY AT PON menu of the AUX function, i.e., continue in the STANDBY mode or in the mode that the power supply was in at the moment of RESET.

## 1.2.2 Display indicators

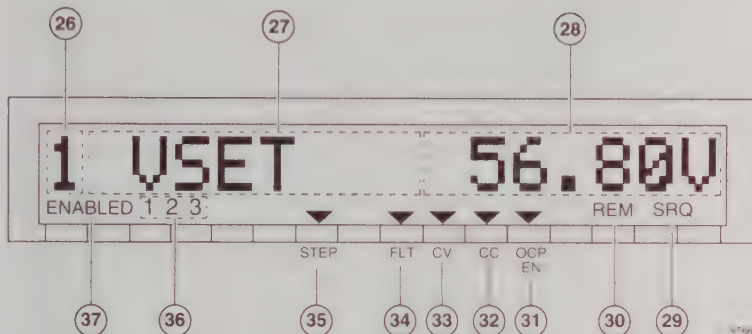

- ②⑥ This digit indicates the channel number.
- ②⑦②⑧ Setting information or actual output values.
- ②⑨ **SRQ**  
When the text SRQ is displayed, your power supply is requesting for service, i.e., has a message or data for the controller.
- ③⑩ **REM**  
When the text REM is displayed, your power supply is in the remote mode, i.e. programmed via the GPIB bus.
- ③① **OCP EN**  
When the annunciator above the text OCP EN is displayed, the overcurrent protection for the selected output channel has been enabled.
- ③② **CC**  
When the annunciator above the text CC is displayed, the selected output channel is in the Constant Current mode of operation.
- ③③ **CV**  
When the annunciator above the text CV is displayed, the selected output channel is in the Constant Voltage mode of operation.

34

**FLT**

When the annunciator above the text FLT is displayed, a bit is set in the fault register of the selected output channel.

35

**STEP**

When the annunciator above the text STEP is displayed, the step function is active.

36

**1, 2, 3**

The displayed figures indicate which output channels have been enabled. This text is applicable only for multiple output models.

Example:

The display shows **ENABLED2**

This means that output channel 2 has been enabled.

37

**ENABLED**

The text ENABLED is displayed for multiple output models.

## 1.3 Remote operating instructions

This section describes each command and query for the programmable power supplies in detail. The commands and queries have been grouped into functional subsystems and have been specified in numerical/alphabetical order. First the IEEE.2 commands/queries (beginning with \*) are listed followed by the PPS-specific SCPI commands/queries. Each command description starts on a new page and consists of the following:

- **NAME**
- **Action:** Describes what the command/query does.
- **Syntax:**

The syntax of the command/query indicates the character sequence that must be placed on the GPIB. Different programming languages (such as BASIC, C, PASCAL) have different ways of representing data that is to be output onto the GPIB. It is up to the programmer to determine the methods to output the character sequence required for the programming language used.

Commands must be sent to the instrument for which they are intended. This means GPIB devices address information must be included before the command sequence. Again the programmer must determine how the programming language can pass this information onto the GPIB.

- Rules:
- Common commands begin with an asterisk (\*).
  - Queries end with a question mark (?).
  - Subsystem command/query parts start with a semicolon (;).
  - The first semicolon (;) in a command may be left out.
  - UPPER case letters in mnemonics are mandatory (short form); lower case letters may be left out or must be specified completely (long form).  
Example:     **:INSTrument** (long form) has the same effect as **:INST** (short form)
  - Commands/queries may be given in uppercase or lowercase characters through one another.  
Example: **SoUrCe** is allowed.
  - Text between [ and ] is optional text.  
Example:     **:INST[SEL]** has the same effect as **:INST**

- Text between { and } may be repeated.  
Example: **<id>{,<id>}** means that the <id> parameter can be repeated, e.g. **<id>,<id>,<id>**
- A choice is indicated by means of a | sign.  
Example: **0 | 1** means **0 or 1**
- Values can be given in:
  - decimal           <value>, e.g. 10
  - hexadecimal #h<value>, e.g. #hA
  - octal            #q<value>, e.g. #q12
  - binary           #b<value>, e.g. #b1010

- Response: (only in the case of a query)
- Description: (additional information)
- Example: (sending commands and reading responses)

Program examples are included with each command description.

**ONLY THE COMMAND STRING IS GIVEN.** No other programming details are shown, because the method used to send the command string will differ depending upon the GPIB drivers and programming language used.

The following example sends the command \*CLS to the power supply.

**Send → \*CLS**

The following example reads the response from the power supply


**Read ← <response>**

- Errors: (possible error numbers + their meaning)  
For not mentioned errors, refer to appendix D "Error messages".

*Note: In the remote mode the front panel keys will have no effect on programmed settings. It is, however, possible to view the actual settings on the front panel display, using the front panel keys SELECT, V, I, OVP, DELAY, UNMASK, DISP, and AUX.*



# REGISTER STRUCTURE

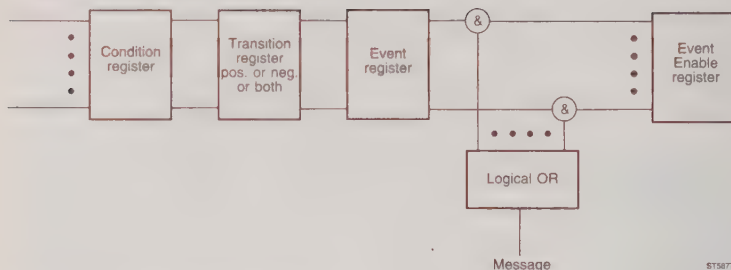

ST5877

Figure 1.3.2 Register structure

Each of the following registers contain the above structure:

|              |            |
|--------------|------------|
| QUEStionable | OPERation  |
| INSTRument   | INSTRument |
| ISUMmary     | ISUMmary   |

The conditions can be filtered with the transition register for POSitive, NEGative or both transitions. The resulting Events may be enabled or disabled by the Event Enable register.

*Remark: According to the SCPI status structure, the status of output channel 1 is accessible with the ISUMmary as well as with the QUEStionable (resp. OPERation) register. The status of the output channels 2 and 3 are accessible only through the ISUMmary register.*

### 1.3.1 Command/query references (incl. limited key/display)

The following summary is an alphabetical list of all programmable commands and queries:

#### COMMON IEEE 488.2 commands/queries

| <u>Query:</u> | <u>Command:</u> |
|---------------|-----------------|
|               | *CLS            |
| *ESE?         | *ESE            |
| *ESR?         |                 |
| *IDN?         |                 |
| *OPC?         | *OPC            |
| *PSC?         | *PSC            |
|               | *RCL            |
|               | *RST            |
|               | *SAV            |
| *SRE?         | *SRE            |
| *STB?         |                 |
|               | *TRG            |
| *TST?         |                 |
|               | *WAI            |

#### SCPI SUBSYSTEM commands/queries

| <u>Query:</u>                  | <u>Command:</u>               |
|--------------------------------|-------------------------------|
|                                | :ABORt                        |
|                                | :CALibration:AUTO             |
| :CALibration:STATe?            | :CALibration:STATe            |
|                                | :CALibration:VALue            |
| :DISplay:CONTRast?             | :DISplay:CONTRast             |
| :DISplay:ENABle?               | :DISplay:ENABle               |
| :DISplay[:WINDow]:TEXT[:DATA]? | :DISplay[:WINDow]:TEXT[:DATA] |
| :INITiate:CONTInuous?          | :INITiate:CONTInuous          |
|                                | :INITiate[:IMMEDIATE]         |

### Query:

:INSTrument:CATalog?  
:INSTrument:DEFine?

:INSTrument:NSElect?  
:INSTrument[:SElect]?  
:INSTrument:STATe?

:MEASure[:SCALar]:CURRent[:DC]?  
:MEASure[:SCALar]:VOLTage[:DC]?

:OUTPut:PROTection:COUPling[:INST]?  
:OUTPut:PROTection:COUPling:STATe?  
:OUTPut:PROTection:TRIPped?  
:OUTPut[:STATe]?

[:SOURce]:CURRent[:LEV:IMM:AMPL]?  
[:SOURce]:CURR[:LEV:IMM:AMPL]:AUTO?  
[:SOURce]:CURRent:LIMit:HIGH?  
[:SOURce]:CURRent:LIMit:LOW?  
[:SOURce]:CURRent:PROTection:DElay?  
[:SOURce]:CURRent:PROTection:STATe?  
[:SOURce]:CURRent:PROTection:TRIPped?  
[:SOURce]:FUNction:MODE?

[:SOURce]:LIST:CURRent:POINts?  
[:SOURce]:LIST:GENeration?  
[:SOURce]:LIST:INDEx[:NSElect]?  
[:SOURce]:LIST:SEqueNce:STARt?  
[:SOURce]:LIST:SEqueNce:STOP?  
[:SOURce]:LIST:SOURce?  
[:SOURce]:LIST:TIMer?

[:SOURce]:LIST:VOLTage:POINts?  
[:SOURce]:POWER:LIMit:HIGH?  
[:SOURce]:VOLTage[:LEV:IMM:AMPL]?  
[:SOURce]:VOLT[:LEV:IMM:AMPL]:AUTO?  
[:SOURce]:VOLTage:LIMit:HIGH?  
[:SOURce]:VOLTage:LIMit:LOW?  
[:SOURce]:VOLTage:PROTection[:LEV]?  
[:SOURce]:VOLTage:PROTection:TRIPped?

### Command:

:INSTrument:DEFine  
:INSTrument:DELeTe[:NAME]  
:INSTrument:DELeTe:ALL  
:INSTrument:NSElect  
:INSTrument[:SElect]  
:INSTrument:STATe

:OUTPut:PROTection:CLEar  
:OUTPut:PROTection:COUPling[:INST]  
:OUTPut:PROTection:COUPling:STATe  
:OUTPut[:STATe]

[:SOURce]:CURRent[:LEV:IMM:AMPL]  
[:SOURce]:CURR[:LEV:IMM:AMPL]:AUTO  
[:SOURce]:CURRent:PROTection:DElay  
[:SOURce]:CURRent:PROTection:STATe

[:SOURce]:LIST:CURRent  
[:SOURce]:LIST:GENeration  
[:SOURce]:LIST:INDEx[:NSElect]  
[:SOURce]:LIST:SEqueNce:STARt  
[:SOURce]:LIST:SEqueNce:STOP  
[:SOURce]:LIST:SOURce  
[:SOURce]:LIST:TIMer  
[:SOURce]:LIST:VOLTage

[:SOURce]:VOLTage[:LEV:IMM:AMPL]  
[:SOURce]:VOLT[:LEV:IMM:AMPL]:AUTO  
[:SOURce]:VOLTage:PROTection[:LEV]

### Query:

:STATus:OPERation:CONDition?  
:STATus:OPERation:ENABle?  
:STATus:OPERation[:EVENT]?  
:STATus:OPERation:INSTrument:CONDition?  
:STATus:OPERation:INST:ENABle?  
:STATus:OPERation:INST[:EVENT]?  
:STATus:OPERation:INST:ISUMmary:COND?  
:STATus:OPERation:INST:ISUM:ENAB?  
:STATus:OPERation:INST:ISUM[:EVENT]?  
:STATus:OPERation:INST:ISUM:NTR?  
:STATus:OPERation:INST:ISUM:PTR?  
:STATus:OPERation:INST:NTRansition?  
:STATus:OPERation:INST:PTRansition?  
:STATus:OPERation:NTRansition?  
:STATus:OPERation:PTRansition?

:STATus:OPERation:QUEue[:NEXT]?  
:STATus:QUEStionable:CONDition?  
:STATus:QUEStionable:ENABle?  
:STATus:QUEStionable[:EVENT]?  
:STATus:QUEStionable:INSTrument:CONDition?  
:STATus:QUEStionable:INST:ENABle?  
:STATus:QUEStionable:INST[:EVENT]?  
:STATus:QUEStionable:INST:ISUMmary:COND?  
:STATus:QUEStionable:INST:ISUM:ENAB?  
:STATus:QUEStionable:INST:ISUM[:EVENT]?  
:STATus:QUEStionable:INST:ISUM:NTR?  
:STATus:QUEStionable:INST:ISUM:PTR?  
:STATus:QUEStionable:INST:NTRansition?  
:STATus:QUEStionable:INST:PTRansition?  
:STATus:QUEStionable:NTRansition?  
:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:ENABle?  
:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:STATus:QUEStionable:PTRansition?

:SYSTem:ERRor?

:SYSTem:KLOCK?

:SYSTem:POCLear?

:SYSTem:SET?

:SYSTem:UNPRotect:SElect?

:SYSTem:UNPRotect[:STATe]?  
:SYSTem:VERSion?

:SYSTem:VERSion?

:TEST:INSTrument?

:TEST:SYSTem?

### Command:

:STATus:OPERation:ENABle

:STATus:OPERation:INST:ENABle

:STATus:OPERation:INST:ISUM:ENAB

:STATus:OPERation:INST:ISUM:NTR

:STATus:OPERation:INST:ISUM:PTR

:STATus:OPERation:INST:NTRansition

:STATus:OPERation:INST:PTRansition

:STATus:OPERation:NTRansition

:STATus:OPERation:PTRansition

:STATus:OPERation:PREset

:STATus:QUEStionable:ENABle

:STATus:QUEStionable:INST:ENABle

:STATus:QUEStionable:INST:ISUM:ENAB

:STATus:QUEStionable:INST:ISUM:NTR

:STATus:QUEStionable:INST:ISUM:PTR

:STATus:QUEStionable:INST:NTRansition

:STATus:QUEStionable:INST:PTRansition

:STATus:QUEStionable:NTRansition

:STATus:QUEStionable:PTRansition

:SYSTem:KLOCK

:SYSTem:POCLear

:SYSTem:SET

:SYSTem:UNPRotect:PWOrd

:SYSTem:UNPRotect:SElect?

:SYSTem:UNPRotect[:STATe]

:SYSTem:VERSion

## **\*CLS      Clear Status Command**

**Action:**        Clears the status data structures.

**Command:**    \*CLS

### **Description:**

The \*CLS command forces the device in the 'operation complete idle' and the 'operation query idle' state and performs the following:

1. Clears all Event Registers summarized in the Status Byte Register.
2. Empties all Queues, which are summarized in the Status Byte Register. The Output Queue, which is summarized in the MAV-bit, will be cleared only when the \*CLS command is the only or the first command in a program message.

### **Example:**

Send → \*CLS

## \*ESE      Standard Event Status Enable Command

**Action:**      Sets the ESE (standard Event Status Enable) register bits to enable the Standard Events to be summarized in the Status Byte Register.

**Command:**    \*ESE <integer>

<integer>      A whole positive number in the range 0 to 255.


**Query:**        \*ESE?

**Response:**    <integer>

### Description:

The contents of the Standard Event Status Enable Register (\*ESE) determines which bits in the Standard Event Status Register (\*ESR) are enabled to be summarized in the Status Byte Register (\*STB).

Suppose you want to enable the DDE (Device Dependent Enable) bit to be summarized in the Status Byte Register. Then you have to set bit 3 in the \*ESE register by sending the following command string: \*ESE 8  
When you want to enable also the OPC (Operation Complete) bit, the command string to send must be: \*ESE 9

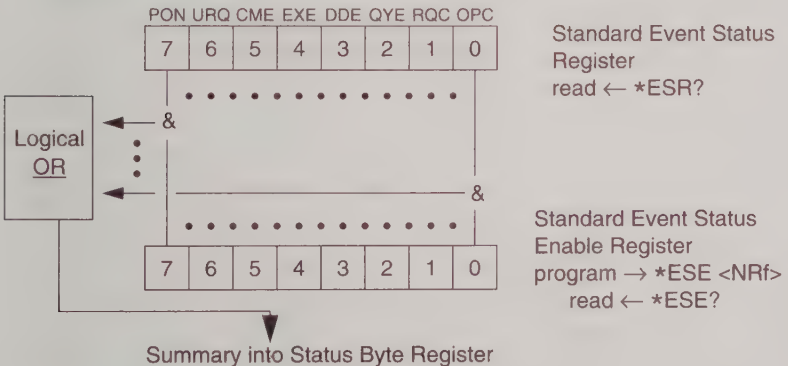

### Example:

Send → \*ESE 255      Bits 0 to 7 are enabled

Send → \*ESE?

Read ← <response> = 255

## \*ESR?     Standard Event Status Register Query

**Action:**       Reports the contents of the standard Event Status Register (ESR) and clears it.

**Query:**        \*ESR

**Response:**    <integer>

<integer>     A whole decimal number in the range 0 to 255.

### Description:

Send → \*ESR?

Read ← 28

The response 28 equals the binary value 00011100 (= 16 + 8 + 4 decimal). So the bits 4 (EXE bit), 3 (DDE bit) and 2 (QYE bit) have been set. This means that an Execution Error, a Device Dependent Error, and a Query Error occurred since the last time this register was read.

PON URQ CME EXE DDE QYE RQC OPC

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 |

Standard Event Status  
Enable Register  
read ← \*ESE?

### Example:

Send → \*ESE 255

Bits 0 to 7 are enabled

Send → \*ESR?

Read Event Status Register

Read ← 255

## **\*IDN?      Identification Query**

**Action:**        Reports the identification of the instrument.

**Query:**        \*IDN?

**Response:**    <identity string>

                 <identity string> =  
                 <Manufacturer>,<Model>,<Serial Number> , <Firmware level>

### **Description:**

The Serial Number and Firmware level data are optional, but if the instrument does not report this data, an ASCII character 0 is returned instead.

### **Example:**

Send → \*IDN?

Read ← PHILIPS,PM2812/11,0,V1.0

## \*OPC      Operation Complete Command

**Action:** Causes the instrument to set the operation complete bit (OPC) in the standard Event Status Register (ESR) when all pending operations have been finished.

**Command:** \*OPC

**Query:** \*OPC?

**Response:** 1

### Description:

When the \*OPC command is sent to a unit, it will set the **OPC** bit (=bit 0) in the \*ESR register when all pending operations have been completed.

PON URQ CME EXE DDE QYE RQC **OPC**

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|

Standard Event Status  
Enable Register  
read ← \*ESE?

The OPC bit is cleared along with the other bits in the \*ESR register, when the \*ESR? query is executed. Another way to wait for the completion of an operation is to use the \*WAI command.

### Example:

Send → \*OPC

Send → \*ESR?

Read ← 0

Indicates that the instrument is busy performing programmed actions.

Send → \*ESR?

Read ← 1

Indicates that the instrument has finished the previously programmed actions.

*Note: You may repeat the \*ESR? query and read the response until the OPC bit is 1, but you can also use the \*OPC? query. The response from the \*OPC? query (which is always an ASCII character 1) holds up the GPIB until the previous operations have been completed.*

**Example:**

Send → <command 1>

Send → \*OPC?

Read ← 1

This response is held off until the action performed by <command 1> is completed.

## **\*PSC      Power on Status Clear Command**

**Action:**            Disables or enables the clearing of the SRE (Service Request Enable register) and the ESE (standard Event Status Enable register) after power on.

**Command:**    \*PSC <integer>  
                         <integer>    A whole decimal number in the range -32767 to 32767

**Query:**            \*PSC?

**Response:**    0 if disabled  
                         1 if enabled

### **Description:**

This command enables or disables the clearing of the status registers after power on. If a zero is programmed, the clearing will be disabled. If an integer not equal to zero is programmed, the clearing will be enabled.

*Note:    If \*PSC was set false (disabled) and a power-up is detected, the status information may be invalid. If this is the case, a device dependent error is generated (-300, "Device-specific error"). The user can test on this event (bit 3 in the ESR register) by reading the ESR register (\*ESR?), which indicates the validity of the status structure.  
          If bit 3 (DDE) is set, the status structure is invalid. The suggested action is sending a \*CLS (which clears the status structure). If bit 3 (DDE) is reset, the status structure is valid.*

### **Examples:**

Send → \*PSC 1      Clearing enabled.

Send → \*PSC -34    Clearing enabled.

Send → \*PSC 0      Clearing disabled.

Send → \*PSC?

Read ← 0            No clearing after power on.

## **\*RCL      Recall Command**

**Action:**            Restores the programmable settings of the instrument from a specified location in the local memory.

**Command:**    \*RCL <location>

                    <location>      A whole decimal number in the range 0 to 9

### **Description:**

- <location> is rounded to a whole number.
- Memory location 0 will select the power-on settings.
- The scope of \*RCL is the same as the scope of the \*RST command.

For storing the programmable settings, refer to the \*SAV command.

### **Example:**

Send → \*SAV 4      Stores the current settings in memory location 4.

.

.

Send → \*RCL 4      Recalls the settings previously stored in memory location 4.

.

.

Send → \*RCL 0      Restores the power-on settings

## \*RST      Reset Command

**Action:**        Resets the instrument.

**Command:**    \*RST

### Description:

The scope of the \*RST command is specified by the following:

- sets the instrument in the power-on default state.

The \*RST command **will not affect:**

- the contents of the Output Queue (see Device Clear)
- the Service Request Enable (\*SRE) register
- the standard Event Status Enable (\*ESE) register
- the state of the IEEE 488.1 interface
- the power-on status clear flag
- calibration data that affects the device specifications
- the contents of the recall memory locations

The \*RST command results in the following settings:

|                                                |                  |    |
|------------------------------------------------|------------------|----|
| :INSTRument:NSElect                            | 1                |    |
| :INSTRument:STATe                              | OFF (= STANDBY)  |    |
| :OUTPut:STATe                                  | OFF (= DISABLED) |    |
| :OUTPut:PROTEction:COUPLing:STATe              | OFF              |    |
| :SOURce:VOLTage:LEVel:IMMediate:AMPLitude      | MIN              | 1) |
| :SOURce:VOLTage:LEVel:IMMediate:AMPLitude:AUTO | OFF              |    |
| :SOURce:VOLTage:PROTEction:LEVel               | MAX              | 2) |
| :SOURce:CURREnt:LEVel:IMMediate:AMPLitude      | MIN              | 3) |
| :SOURce:CURREnt:LEVel:IMMediate:AMPLitude:AUTO | OFF              |    |
| :SOURce:CURREnt:PROTEction:STATe               | OFF              |    |
| :SOURce:CURREnt:PROTEction:DELAy               | DEF              | 4) |
| :SOURce:LIST:INDEX:NSElect                     | MIN (=1)         |    |
| :SOURce:LIST:SEQUence:START                    | MIN (=1)         |    |
| :SOURce:LIST:SEQUence:STOP                     | MAX (=99)        |    |
| :SOURce:LIST:SOURce                            | EXT              |    |
| :SOURce:LIST:TIMER                             | 0.1 s            |    |
| :INITiate:CONTinuous                           | ON               |    |
| :DISPlay:ENABle                                | ON               |    |
| :DISPlay:CONTRast                              | MAX (= 9)        |    |
| :SYSTem:KLOCK                                  | OFF              |    |
| :SYSTem:POCLear                                | ON               |    |
| :CALibration:STATe                             | ON               |    |

| COMMAND<br>(SHORT FORM)* | 30V/10A/60W | 60V/5A/60W | 60V/10A/120W |
|--------------------------|-------------|------------|--------------|
| 1) :VOLT MIN             | 0.0V        | 0.0V       | 0.0V         |
| 2) :VOLT:PROT MAX        | 32V         | 62V        | 62V          |
| 3) :CURR MIN             | 0.04A       | 0.02A      | 0.04A        |
| 4) :CURR:PROT:DEL DEF    | 0.05s       | 0.1s       | 0.1s         |

\* Default nodes are omitted

1) to 4) See previous page.

**Example:**

Send → \*RST

## **\*SAV      Save Command**

**Action:**            Stores the actual settings of the instrument in a specified location in the local memory.

**Command:**    \*SAV <location>

                    <location>      A whole decimal number in the range 0 to 9.

### **Description:**

- <location> is rounded to a whole number
- Memory location 0 will select the current settings to be the power-on setup.
- The scope of \*SAV is the same as the scope of the \*RST command.

For recalling the settings, refer to the \*RCL command.

### **Example:**

Send → \*SAV 4      Stores the actual settings in memory location 4.

Send → \*RCL 4      Restores the settings previously stored in memory location 4.

Send → \*SAV 0      Stores the actual settings of the instrument in memory location 0. These settings are selected as the power-on settings.

## \*SRE      Service Request Enable Command

**Action:**            Sets the Service Request Enable (SRE) register.

**Command:**    \*SRE <integer>

                         <integer>      A whole decimal number in the range 0 to 255.


**Query:**            \*SRE?

**Response:**    <integer>

### Description:

The bits in the Service Request Enable register (\*SRE) (see the figure below) determine:

- which corresponding bits in the SStatus Byte register (\*STB) will cause a service request from the instrument.
- which corresponding bits in the Service Request Enable register (\*SRE) will be summarized in the MSS bit in the \*STB register.

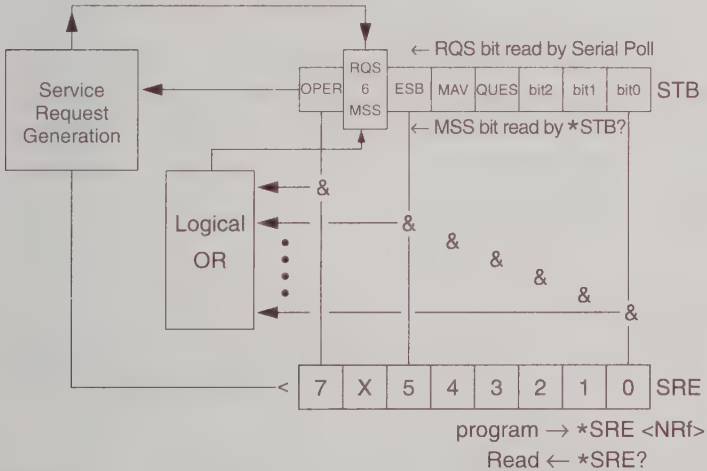

### Example:

Send → \*SRE 32 This will set bit 5 in the Service Request Enable register (SRE).

*Note:* You cannot set or clear bit 6 (decimal value 64). This bit is 'don't care'.

## \*STB?      Read Status Byte Query

**Action:**                Reports the contents of the SStatus Byte (STB) register, in which bit 6 reports the MSS (Master Summary Status).


**Query:**                \*STB?

**Response:**            <integer>

                                 <integer>      A whole decimal number in the range 0 to 255.

### Description:

The SStatus Byte register contains the summary status of all overlaying status registers and queues. The bits 0 to 5 and bit 7 of this register are summarized in the MSS bit (bit 6); see also the \*SRE command. When the Status Byte Register is read by the IEEE 448.1 Serial Poll, then the RQS (Requested Service) bit is returned in bit 6. The \*STB query returns the MSS bit in bit 6.



OPER    = OPERation status bit  
RQS     = ReQuested Service  
MSS     = Master Summary Status  
ESB     = Event Summary Bit  
MAV     = Message AAvailable  
QUES    = QUEStionable status bit

### Example:

Send → \*STB?

Read ← 16

the MAV bit is set, indicating that there is response data available in the unit's Output Queue.

## **\*TRG      Trigger Command**

**Action:**            Triggers the instrument. This command performs the same as the GPIB defined Group Execute Trigger (= GET) command.

**Command:**    \*TRG

### **Description:**

The trigger command \*TRG or GET can be used for synchronization of device actions. The \*TRG command is an addressed command, just like all other SCPI common commands. This means, the trigger command is sent to a certain GPIB address, which means that only one address at a time will receive this trigger. The GET is also an addressed command, but you can send this code to a group of instruments simultaneously. The way this is done depends on the controller language used.

For the programmable power supplies a trigger command is used to execute the next step during execution of the step function. For further information, refer to section 5.5.5.3 "External step functions" in the Operation Manual.

### **Example:**

Send → \*TRG      The addressed instrument will receive a trigger command.

## **\*TST?      Self-Test Query**

**Action:**            Returns the result of the power-on self-tests.

**Query:**            \*TST?

**Response:**    0 | 1

0    The self-test is completed successfully.

1    The self-test has failed.

### **Description:**

The following self-tests are performed after power-on:

- ROM test
- RAM test
- GPIB controller test
- Microprocessor timer test
- Communication (D<sup>2</sup>B) test
- Display controller test
- ADDA output channel(s) test

The only failure that is reported is the display controller test failure. All other failures will be blocked from being reported. To detect which self-test failed, refer to section 3.6.1 "Brief check" of the acceptance tests in the Operation Manual.

The self-test will not change any internal instrument settings.

### **Example:**

Send → \*TST?

Read ← 1            Self-test failed.

turn power off and on again

Send → \*TST?

Read ← 0            Self-test completed successfully.

## **\*WAI      Wait-to-Continue Command**

**Action:**            Makes the instrument wait until all the previous commands or queries have been completed.

**Command:**    \*WAI

### **Description:**

The \*WAI command can be used for guaranteed sequential execution of commands and queries. On receipt of the \*WAI command, the unit will execute all previous commands and queries before it can execute the next command or query.

### **Example:**

Send → <command 1>

Send → \*WAI

Send → <command 2>

Command 2 will be executed only after the action of command 1 has been completed.

*Note: The \*OPC? query can also be used to achieve the same effect, but then you must read and wait for the response from this query until the previous programmed command 1 action has been completed.*

## :ABORt

**Action:** Stops the execution of the step function.

**Command:** :ABORt

### Description:

This command can be used to abort the execution of the step function of the power supply (remote equivalent of the (backspace) key). Refer to example 1. This command, in combination with the \*SAV and \*RCL commands, can also be used to create a pause in the execution of the step function and to restart the step function at a later time. Refer to example 2.

### Example 1:

|                   |                                              |
|-------------------|----------------------------------------------|
| Send → :INIT:CONT | Step function will be executed continuously. |
| Send → :INIT      | Step function is started (initiated).        |
| .                 |                                              |
| .                 |                                              |
| Send → :ABOR      | Step function is stopped (aborted).          |

### Example 2:

|                      |                                      |
|----------------------|--------------------------------------|
| Send → *SAV 1;:ABOR  | Step function is stored and stopped. |
| .                    |                                      |
| break period (pause) |                                      |
| .                    |                                      |
| Send → *RCL 1        | Step function is restarted.          |

## :CALibration:AUTO

**Action:** Calibrates the overvoltage protection automatically.

**Command:** :CALibration:AUTO [ONCE]

ONCE Automatic overvoltage calibration is done only once.

### Description:

This command is used to automatically calibrate the overvoltage trip level. This command is accepted only when the necessary calibrate conditions are fulfilled. (Refer to chapter 2 MAINTENANCE.) The execution of this command will take a few seconds.

### Example:

Send → :INST:NSEL 2                      Select output channel 2

Calibrate the voltage and the current.

Set the minimum calibration point at approximate 10 % of I<sub>max</sub>.

Send → :SOUR:CURREN:LIM:HIGH?

Read ← I<sub>max</sub>

Send → :SOUR:CURREN:<I<sub>max</sub>/10>

Send → :SOUR:FUNC:MODE?      Ask for output mode.

Read ← <mode>

IF <mode> = "VOLT" THEN Send → :CAL:AUTO ONCE

This will automatically calibrate the overvoltage for output channel 2.

## :CALibration:STATe

**Action:** Selects if the calibration data is applied or not.

**Command:** :CALibration:STATe <boolean>

<boolean> ON | 1 The power supply will use the calibration data for correction.

OFF | 0 The power supply will not make any correction using the calibration data.

**Query:** :CALibration:STATe?

**Response:** <boolean>

### Description:

With this command the calibration data can be enabled or disabled to be used. In the normal mode the calibration data has to be used. In the calibration mode, the calibration data must not be used, because it will be calibrated.

### Example:

Send → :SYST:UNPR ON Enables to unprotect calibration.

Send → :SYST:UNPR:SEL 2812 Unprotects the calibration of the power supply by sending the password as calibration access code; default = 2812.

If the password was not correct, error code -221 (Settings conflict) will be generated. This error can be read using the :SYST:ERR? query.

Send → :SYST:UNPR:SEL? Check that the power supply is in the CAL mode; the response must be: CAL.

Send → :INST:NSEL 1 Selects output channel 1.

Send → :OUTP:STAT ON Enables output channel 1.

Send → :CAL:STAT OFF Disables the calibration data to be used.

. perform the calibration

Send → :OUTP:STAT OFF Disables the selected output channel.

Send → :SYST:UNPR OFF Disables the unprotection of the calibration, i.e. the next calibration is protected again.

Send → :CAL:STAT ON Terminates calibration for the selected output channel, i.e. enables the calibration data to be used again.

## :CALibration:VALue

**Action:** Sends a reference voltage or current to the power supply in the calibration mode.

**Command:** :CALibration:VALue <num\_value>

<num\_value>      Numeric value representing the reference voltage or current for calibration.

### Description:

With this command a reference voltage or current value, measured by a connected multimeter, can be sent to the power supply. This reference value is used to calibrate the voltage or current of the selected output channel. If the output channel mode is VOLTage, the reference value is regarded as a calibrated voltage. If the output channel mode is CURRent, the reference value is regarded as a calibrated current.

This command is effective only in the calibration mode.

### Example:

Send → :INST:NSEL 2                      Select output channel 2.

Set the minimum calibration point at approximate 10 % of I<sub>max</sub>.

Send → :SOUR:CURREN:LIM:HIGH?

Read ← I<sub>max</sub>

Send → :SOUR:CURREN:VAL<I<sub>max</sub>/10>

Send → :SOUR:VOLT:MIN                  Set the minimum output voltage.

Send → :SOUR:FUNC:MODE?              Ask for output channel mode.

Read ← <mode>

IF <mode> = "VOLT" THEN measure the minimum output voltage using a  
voltage meter; result = <meas\_voltage>

Send → :CAL:VAL <meas\_voltage>

Now the minimum calibration point for the output voltage of output channel 2 has been set.

## **:DISPlay:CONTrast**

**Action:** Sets the contrast of the display.

**Command:** :DISPlay:CONTrast <num\_value>  
                  <num\_value>      Number from 0.0 to 0.9.

**Query:** :DISPlay:CONTrast?

**Response:** <num\_value>

### **Description:**

The number 0.0 presents the lowest contrast and the number 0.9 presents the highest contrast.

### **Example:**

Send → :DISP:CONT .9      Text on the display of the power supply is displayed with the highest contrast

## :DISPlay:ENABle

**Action:** Turns the display of the power supply on or off.

**Command:** :DISPlay:ENABle <boolean>

|           |         |                        |
|-----------|---------|------------------------|
| <boolean> | ON   1  | Display is turned on.  |
|           | OFF   0 | Display is turned off. |

**Query:** :DISPlay:ENABle?

**Response:** <boolean>

### Description:

If the value of the boolean is a number > 1 (e.g. 34), the display will be turned on.

Returning to the local state will turn on the display automatically.

### Example:

Send → :DISP:ENAB ON      Display is turned on.

## **:DISPlay[:WINDow]:TEXT[:DATA]**

**Action:** Displays a message of max. 16 characters.

**Command:** :DISPlay[:WINDow]:TEXT[:DATA] <char\_string>  
<char\_string> String of 16 characters maximum.

**Query:** :DISPlay[:WINDow]:TEXT[:DATA]?

**Response:** <char\_string>

### **Description:**

This command allows you to display a message on the display of your power supply.

*Note:* The message is cleared by pressing the ENTER key.

### **Example:**

Send → :DISP:ENAB ON

Send → :DISP:TEXT "PPS IS IN USE"

Now the message: **PPS IS IN USE** will be displayed on the display of the power supply.

## :INITiate:CONTInuous

**Action:** Controls the execution of the step function to be performed continuously or only once.

**Command:** :INITiate:CONTInuous <boolean>

|           |         |                                                  |
|-----------|---------|--------------------------------------------------|
| <boolean> | ON   1  | The sequence list will be executed continuously. |
|           | OFF   0 | The sequence list will be executed once only.    |

**Query:** :INITiate:CONTInuous?

**Response:** <boolean>

### Description:

This command is used to control the execution of the step function. If this function is ON, the step function continues its execution after having reached the stop address. If this function is OFF, the step function halts execution after the stop address has been reached. In this case the step function is left with the output settings of the stop address.

### Example:

|                          |                                                  |
|--------------------------|--------------------------------------------------|
| Send → :LIST:SEQ:STAR 10 | Start address = 10.                              |
| Send → :LIST:SEQ:STOP 19 | Stop address = 19.                               |
| Send → :LIST:SOUR TIM    | Trigger source = internal timer.                 |
| Send → :LIST:TIM 1.5     | Interval time = 1.5 seconds.                     |
| Send → :INIT:CONT 1      | Continuous execution = ON.                       |
| Send → :INIT             | Starts execution of the automatic step function. |

## **:INITiate[:IMMediate]**

**Action:** Starts the execution of the step function.

**Command:** :INITiate[:IMMediate]

### **Description:**

This command is used to start (initiate) the execution of the step function. The step function starts executing at the programmed start address of the sequence list. Refer to example 1.

The :ABORt command, in combination with the \*SAV and \*RCL commands, can be used to halt and restart the execution of the step function. Refer to example 2.

### **Example 1:**

|                          |                                                  |
|--------------------------|--------------------------------------------------|
| Send → :LIST:SEQ:STAR 10 | Start address = 10.                              |
| Send → :LIST:SEQ:STOP 19 | Stop address = 19.                               |
| Send → :LIST:SOUR TIM    | Trigger source = internal timer.                 |
| Send → :LIST:TIM 1.5     | Interval time = 1.5 seconds.                     |
| Send → :INIT:CONT 1      | Continuous execution = ON.                       |
| Send → :INIT             | Starts execution of the automatic step function. |

### **Example 2:**

|                           |                                      |
|---------------------------|--------------------------------------|
| Send → *SAV 1;;ABOR       | Step function is stored and stopped. |
| .<br>break period (pause) |                                      |
| .<br>Send → *RCL 1        | Step function is restarted.          |

## :INSTrument:CATalog?

**Action:** Reports the actual predefined <identifier> for each output channel number.

**Query:** :INSTrument:CATalog?

**Response:** <char\_string>{,<char\_string>}

### Description:

Per available output channel the latest defined identifier will be returned. The returned output channel identifiers are separated by commas. An empty string is returned, if no logical name has been defined (see example).

### Example:

Send → :INST:DEL:ALL

Deletes previously defined names.

Send → :INST:DEF OUT 1,1

Defines OUT 1 as identifier for output channel 1.

Send → :INST:CAT?

Queries the defined identifiers.

Read ← "OUT 1", "", ""

OUT 1 is the identifier for output channel 1. There is no identifier defined for output channels 2 and 3.

## :INSTrument:DEFine

**Action:** Defines a logical name for an output channel.

**Command:** :INSTrument:DEFine <identifier>,<num\_value>

<identifier> Logical name

<num\_value> 1 (for single output models)  
1 or 2 (for dual output models)  
1, 2, or 3 (for triple output models)

**Query:** :INSTrument:DEFine? <num\_value>|<identifier>

**Response:** <identifier> | <num\_value>

### Description:

Every output channel has been assigned to a fixed number. With this command an output channel number is assigned to a logical name. Only the last defined logical name for an output channel is valid.

The defined logical names remain unchanged after a \*RST command.

The response to the query is the <identifier> if the query contains the <num\_value> parameter. Conversely, the response to the query will be the number of the output channel in <num\_value> if the query contains the defined <identifier> as the parameter.

### Examples:

Send → :INST:DEF OUT2,2      Defines OUT2 as output channel 2.  
Send → :INST OUT2            Selects output channel 2.

Send → :INST:DEF OUT1,1      Defines OUT1 as output channel 1.  
Send → :INST:DEF? 1  
Read ← OUT1  
Send → :INST:DEF? OUT1  
Read ← 1

# :INSTrument:DELeTe

**Action:** Deletes one or all defined logical names for the output channel(s) concerned.

**Command:** :INSTrument:DELeTe:ALL  
:INSTrument:DELeTe[:NAME] <identifier>

ALL Delete all defined names for all output channels.

[:NAME] <identifier> Delete the name <identifier>.

**Description:**

An output channel can be assigned to a logical name. With this command the logical name for an output channel or all logical names for all output channels can be deleted.

**Example:**

Send → :INST:DEL OUT1 Deletes the defined name OUT1.  
Send → :INST:DEL:ALL Deletes all defined names for all available output channels.

## :INSTrument:NSElect

**Action:** Selects the output channel, specified by a number, to be addressed during remote operation.

**Command:** INSTrument:NSElect <num\_value>

<num\_value> A numeric value specifying which output channel is selected. The range of the numeric value will depend upon the number of output channels the power supply has.

**Query:** INSTrument:NSElect?

**Response:** <num\_value>

### Description:

Each separate output channel and its controlling circuitry has been assigned to a numeric value. Before a command can be sent to an output channel, it must be selected. An output channel remains selected until another output channel is selected.

*Note: The locally and remotely selected output channel does not have to be the same.*

### Example:

|                      |                                         |
|----------------------|-----------------------------------------|
| Send → :INST:NSEL 1  | Selects output channel 1.               |
| Send → :OUTP ON      | Enables output channel 1.               |
| Send → :SOUR:VOLT 10 | Sets 10 V output voltage for channel 1. |
| Send → :INST:NSEL?   | Reads back the selected output channel. |
| Read ← 1             |                                         |

## :INSTrument[:SElect]

**Action:** Selects the output channel, specified by a logical name, to be addressed during remote operation.

**Command:** INSTrument[:SElect] <identifier>

<identifier> A logical name specifying which logical output channel is selected.

**Query:** INSTrument[:SElect]?

**Response:** <identifier>

### Description:

Before a command can be sent to an output channel, it must be selected. An output channel remains selected until another output channel is selected. The <identifier> in this command must first be defined by the INSTrument:DEFine command.

*Note: The locally and remotely selected output channel does not have to be the same.*

### Example:

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| Send → :INST:DEF out1,1 | Defines 'out1' as the logical name for output channel 1. |
| Send → :INST:SEL out1   | Select output channel 1.                                 |
| Send → :OUTP ON         | Enable output channel 1.                                 |
| Send → :SOUR:VOLT 10    | Set 10 V output voltage for channel 1.                   |
| Send → :INST?           | Queries the selected output identifier.                  |
| Read ← "OUT 1"          |                                                          |

## :INSTrument:STATe

**Action:** Places the instrument in the OPERATE or in the STANDBY mode.

**Command:** :INSTrument:STATe <boolean>

|           |         |               |
|-----------|---------|---------------|
| <boolean> | 0   OFF | STANDBY mode. |
|           | 1   ON  | OPERATE mode. |

**Query:** :INSTrument:STATe?

**Response:** <boolean>

### Description:

When the power supply is in the STANDBY mode all output channels within the power supply are placed in their inactive state. Instrument settings can be changed but remain inactive until the power supply is placed in the OPERATE mode again.

The mode which the power supply must be in after power on, can be defined with the :SYSTem:POCLear command. At delivery the power supply is factory set at STANDBY after power on.

### Example:

Send → :INST:STAT ON      The power supply enters the OPERATE mode.

Send → :INST:STAT OFF      The power supply enters the STANDBY mode.

Send → :INST:STAT?      Queries the mode.

Read ← 1      The power supply is in the OPERATE mode.

## :MEASure[:SCALar]:CURRent[:DC]?

**Action:** Returns the measured current of the selected output channel.

**Query:** :MEASure[:SCALar]:CURRent[:DC]? [<exp\_value>[,<resol>]]

<exp\_value>      An estimation of the expected value.  
(not used for the power supply)

<resol>            The resolution of the expected value.  
(not used for the power supply)

**Response:** <meas\_current>    The measured current.

### Description:

The actual output current of the selected output channel is returned. The parameters <exp\_value> and <resol> have no meaning for the programmable power supply. So independent of the contents of both parameters, the read back current is always returned.

### Example:

Send → :MEAS:CURR?

Read ← <meas\_value>

Print <meas\_value> on the screen of the controller

## :MEASure[:SCALar]:VOLTage[:DC]?

**Action:** Returns the measured voltage of the selected output channel.

**Query:** :MEASure[:SCALar]:VOLTage[:DC]? [<exp\_value>[,<resol>]]

<exp\_value>      An estimation of the expected value.  
                    (not used for the power supply)

<resol>            The resolution of the expected value.  
                    (not used for the power supply)

**Response:** <meas\_value>    The measured voltage.

### Description:

The actual output current of the selected output channel is returned. The parameters <exp\_value> and <resol> have no meaning for the programmable power supply. So independent of the contents of both parameters, the read back voltage is always returned.

### Example:

Send → :MEAS:VOLT?

Read ← <meas\_value>

Print <meas\_value> on the screen of the controller.

## **:OUTPut:PROTection:CLEAr**

**Action:** Resets the protection circuits of the selected output channel.

**Command:** OUTPut:PROTection:CLEAr

### **Description:**

When an overvoltage, overcurrent, overtemperature, open sense or coupled protection is detected, the associated protection circuit is tripped and the output voltage and current is reduced to zero. With this command the protection circuit is reset and the output voltage and current restored again. If the protection was caused by 'coupled protection' (refer to the :OUTP:PROT:COUPLing commands/queries), an output channel will be reset if the output channel that caused the protection to be tripped has been reset.

### **Example:**

The output channels 1, 2 and 3 have been coupled.

If channel 1 trips because of overvoltage, output channel 2 and 3 also trip, causing the output voltage and current to be reduced to zero.

If the cause of the overvoltage for output channel 1 is removed and the protection circuitry reset, the protection circuitry for output channel 2 and 3 is also reset, causing the output voltage and current to be restored again.

*Note: If the cause of a protection tripping has not been removed, before reset of the protection circuitry, the protection circuit will immediately trip again.*

### **Example:**

In the case of 22 V output and 20 V overvoltage protection trip:

Send → :SOUR:VOLT:PROT 23      Overvoltage trip level = 23 V.

Send → :OUTP:PROT:CLE      Reset overvoltage protection.

In the case of an overcurrent protection trip:

Send → :SOUR:CURRE:PROT:STAT 0      Set overcurrent protection off.

Send → :OUTP:PROT:CLE      Reset overcurrent protection.

# :OUTPut:PROTectio:n:COUPling[:INSTrument]

**Action:** Specifies the coupling of the protection circuits of the selected output channel with one or more other output channels within the same power supply.

**Command:** :OUTPut:PROTectio:n:COUPling[:INSTrument]  
                  <id>{,<id>} | <num>{,<num>} | ALL | NONE

|       |                                                                         |                      |
|-------|-------------------------------------------------------------------------|----------------------|
| <id>  | Logical name for an output channel.                                     | } order is arbitrary |
| <num> | Numeric value for an output channel, e.g. 1, 2 or 3.                    |                      |
| ALL   | All channels are coupled.                                               |                      |
| NONE  | No channels are coupled, i.e. all previously defined couplings deleted. |                      |

**Query:** :OUTPut:PROTectio:n:COUPling[:INSTrument]?

**Response:** <num>{,<num>}

## Description:

In one command as many output channels can be coupled as there are present in the power supply. For a dual output model two output channels can be coupled and for a triple output model three output channels can be coupled.

The result of a coupling is that when the protection circuit of one of the coupled output channels trips, the other coupled output channel(s) also trip and behave as if they were disabled. The coupling definition is mutually applicable. This command defines only the coupled output channels. To make the coupling active, refer to the :OUTP:PROT:COUP:STAT command.

**Note:** *The coupling mechanism for remote operation differs from the local coupling mechanism. The local coupling mechanism is valid for all available output channels. The remote coupling mechanism can be specified per output channel. Be aware of this when switching from local to remote or vice versa !*

**Example:** (for a multiple output model)

Send → :INST:NSEL 1

Output channel 1 selected.

Send → :OUTP:PROT:COUP 2,3

Output channel 1 coupled to output channel 2 and 3.

Send → :OUTP:PROT:COUP:STAT 1

Coupling becomes active.

If output channel 2 trips, the output channels 1 and 3 also trip.

(the same coupling is obtained by sending :OUTP:PROT:COUP ALL)

Send → :OUTP:PROT:COUP:STAT 0

Coupling becomes non-active.

Send → :OUTP:PROT:COUP NONE

Coupling definition is deleted.

## :OUTPut:PROTection:COUPLing:STaTe

**Action:** Enables or disables the predefined coupling of protection mechanisms.

**Command:** :OUTPut:PROTection:COUPLing:STATe <boolean>

```
<boolean> 0 | OFF  Coupling mechanism disabled.
           1 | ON   Coupling mechanism enabled.
```

Query: :OUTPut:PROTection:COUPling:STATe?

**Response:** <boolean>

**Description:**

This command enables or disables the protection mechanisms of the output channels, which have been coupled with the `OUTPut:PROtection:COUPling[:INSTrument]` command. After enabling the defined coupling is made active.

**Example:** (for a multiple output model)

|                                |                                                     |
|--------------------------------|-----------------------------------------------------|
| Send → :INST:NSEL 1            | Output channel 1 selected.                          |
| Send → :OUTP:PROT:COUP 2,3     | Output channel 1 coupled to output channel 2 and 3. |
| Send → :OUTP:PROT:COUP:STAT ON | Coupling becomes active.                            |

If output channel 3 trips, the output channels 1 and 2 also trip.

|                               |                                 |
|-------------------------------|---------------------------------|
| Send → :OUTP:PROT:COUP:STAT 0 | Coupling becomes non-active.    |
| Send → :OUTP:PROT:COUP NONE   | Coupling definition is deleted. |

## **:OUTPut:PROTection:TRIPped?**

**Action:** Reports the current state of the protection circuit of the selected output channel.

**Query:** :OUTPut:PROTection:TRIPped?

**Response:** 0|1

0 Protection circuit not tripped.

1 Protection circuit tripped.

### **Description:**

The execution of this query doesn't affect the protection itself. The reason that a protection circuit trips can be one of the following:

- overvoltage
- overcurrent
- overtemperature
- open sense connection
- coupled protection

### **Example:** (for a multiple output model)

Send → :INST:NSEL 1

Send → :OUTP:PROT:TRIP?

Read ← <trip1>

Send → :INST:NSEL 2

Send → :OUTP:PROT:TRIP?

Read ← <trip2>

IF <trip1> = 0 AND <trip2> = 0 THEN print "no output channel tripped"

## :OUTPut:[STATe]

**Action:** Enables or disables the selected output channel.

**Command:** :OUTPut[:STATe] OFF | ON

OFF | 0 Disables the output of the active output channel, i.e. sets it into the DISABLED state.

ON | 1 Enables the output of the active output channel, i.e. sets it into the ENABLED state.

**Query:** :OUTPut[:STATe]?

**Response:** 0|1

### Description:

The selected output channel will become active when it is enabled and when the power supply is in the OPERATE mode. If the selected output channel is enabled in the STANDBY mode, its output will become active as soon as the OPERATE mode is entered (see INSTRument:STATe command).

### Example:

```
Send → :INST:SEL 1           Select output channel 1.
Send → :OUTP ON              Enable output channel 1.
Send → :OUTP:PROT:TRIP?
Read ← <trip>
IF <trip> = 0 THEN continue processing
ELSE (examine if tripped because of other output channel)
  BEGIN
    Send → :OUTP:PROT:COUP:STAT?
    Read ← <couple>
    IF <couple> = 0 THEN Send → :OUTP OFF
    Protection circuitry of output channel 1 tripped, so disable output
    channel 1 and stop further processing.
    ELSE (another coupled output channel tripped)
      BEGIN
        Send → :OUTP:PROT:COUP:STAT OFF  Disable coupling.
        Send → :OUTP:PROT:CLE             Reset protection.
      END
    END
  continue processing
```

# [ :SOURce]:CURRent[:LEVel][:IMMediate][:AMPLitude]

**Action:** Sets the output current for the selected output channel.

**Command:** [:SOURce]:CURRent[:LEVEL][:IMMediate][:AMPLitude]  
<current> | MIN | MAX | DEF

|           |                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------|
| <current> | A numeric value in the range MIN to MAX output current of the output channel. After a *RST command the setting is MIN. |
| MIN       | This parameter will set the output current to its minimum level.                                                       |
| MAX       | This parameter will set the output current to its maximum, depending upon the maximum power and the voltage setting.   |
| DEF       | This parameter will set the output current to its actual value.                                                        |

**Query:** [:SOURce]:CURRent[:LEVEL][:IMMediate][:AMPLitude]?  
[MIN | MAX | DEF]

**Response:** <current>

**Description:**

The power supply will round off the <current> parameter to the nearest multiple of the resolution of the selected output channel.

|                        |                                          |
|------------------------|------------------------------------------|
| <u>output channel:</u> | <u>resolution of the output current:</u> |
| 30V/10A                | 40 mA                                    |
| 60V/ 5A                | 20 mA                                    |
| 60V/10A                | 40 mA                                    |

If a value outside the valid range is input, it will not be accepted and error -222 is reported.

For a 30V/10A module: MAX =10A and MIN = 0.04A

For a 60V/ 5A module: MAX = 5A and MIN = 0.02A

For a 60V/10A module: MAX =10A and MIN = 0.04A

The range of legal current settings is depending upon one of the following conditions:

- The maximum current of the output channel is exceeded. In this case the value is not accepted and error -222 is reported.

- The maximum power of the output channel ( $I_{set} \times V_{set}$ ) is exceeded. In this case there are 2 possibilities:
  - COUPLED PARAMETERS = ON:  
Your power supply will adapt its voltage setting  $V_{set}$  according the channel's constant power characteristics.
  - COUPLED PARAMETERS = OFF:  
Your power supply will not adapt its settings. This will be reported by error -222.

The COUPLED PARAMETERS can be set ON or OFF using the SOURCE subsystem command :CURRent[:LEVel][:IMMediate]:AUTO.

*Note: The coupling mechanism for remote operation differs from the local coupling mechanism. The local coupling mechanism is valid for all available output channels. The remote coupling mechanism can be specified per output channel. Be aware of this when switching from local to remote or vice versa!*

**Example:** (for a 60W output channel)

|                      |                                                   |
|----------------------|---------------------------------------------------|
| Send → *RST          | Output settings become MIN V and MIN A.           |
| Send → :CURR .5      | Output current becomes 0.5A.                      |
| Send → :VOLT 30      | Output voltage becomes 30V.                       |
| Send → :CURR:AUTO ON | Current/voltage coupling becomes active.          |
| Send → :CURR 3       | Output current becomes 3A.                        |
| Send → :VOLT?        | Read voltage setting.                             |
| Read ← <volt>        | <volt> will be $60W / 3A = 20V$ (instead of 30V). |

## **[[:SOURce]:CURRent[:LEVEL]][[:IMMediate]][[:AMPLitude]:AUTO**

**Action:** Enables or disables the coupling of the current and the voltage parameter.

**Command:** [[:SOURce]:CURRent[:LEVEL]][[:IMMediate]][[:AMPLitude]:AUTO <boolean>IONCE

|           |         |                              |
|-----------|---------|------------------------------|
| <boolean> | 0   OFF | Parameter coupling disabled. |
|           | 1   ON  | Parameter coupling enabled.  |

|      |                                                                   |
|------|-------------------------------------------------------------------|
| ONCE | Coupled only for the next voltage and/or current setting command. |
|------|-------------------------------------------------------------------|

**Query:** [[:SOURce]:CURRent[:LEVEL]][[:IMMediate]][[:AMPLitude]:AUTO?

**Response:** <boolean>

### **Description:**

The range of legal current settings has been related to the voltage setting and the maximum power of the output channel. If the product of a new current setting and voltage setting in one program message exceeds the maximum power, the last setting is not accepted and error - 221 is reported. This can be avoided by using this command to couple the current to the voltage, using this command. The result is that the actual voltage is adjusted according to the formula:

$$V_{\text{set}} = \frac{P_{\text{max}}}{I_{\text{Set}}}$$

The parameter ONCE is to be used when the current to voltage coupling has to be done only once for the next current or voltage programming.

If the current and voltage setting in one program message does not exceed the max. power, the settings will be accepted without change, e.g.:

- Suppose voltage = 10V and current = 3A.
- The program message :VOLT 30;:CURR 1 will be accepted.

**Note:** *The coupling mechanism for remote operation differs from the local coupling mechanism. The local coupling mechanism is valid for all available output channels. The remote coupling mechanism can be specified per output channel. Be aware of this when switching from local to remote or vice versa!*

**Example:** (for a 60W output channel)

|                      |                                                                       |
|----------------------|-----------------------------------------------------------------------|
| Send → :CURR 4       | Current becomes 4A.                                                   |
| Send → :CURR:AUTO ON | Current and voltage become coupled.                                   |
| Send → :VOLT 20      | Voltage becomes 20V.                                                  |
| Send → :CURR?        | Read current setting.                                                 |
| Read ← <curr>        | <curr> will be $60\text{W} / 20\text{V} = 3\text{A}$ (instead of 4A). |

## **[[:SOURce]:CURRent:LIMit:HIGH?**

**Action:** Returns the maximum current setting of the selected output channel.

**Query:** [[:SOURce]:CURRent:LIMit:HIGH?

**Response:** <max\_current>

<max\_current>      Maximum current setting.

### **Description:**

This query is used to request the maximum possible current for the selected output channel according to the output channel specific ratings.

### **Example:**

Send → :INST:NSEL 1      Selects output channel 1.  
Send → :CURR:LIM:HIGH?      Requests for highest current.  
Read ← <max\_current>  
Print "maximum current = ", <max\_current>

## **[[:SOURce]:CURRent:LIMit:LOW?**

**Action:** Returns the minimum current setting of the selected output channel.

**Query:** [[:SOURce]:CURRent:LIMit:LOW?

**Response:** <min\_current>

<min\_current> Minimum current setting.

### **Description:**

This query is used to request the minimum possible current setting for the selected output channel according to the output channel specific ratings.

### **Example:**

Send → :INST:NSEL 1                      Selects output channel 1.  
Send → :CURR:LIM:LOW?                  Requests for lowest current.  
Read ← <min\_current>  
Print "minimum current = ", <min\_current>

# [ :SOURce]:CURRent:PROTection:DELAy

**Action:** Sets the reprogramming delay time for the selected output channel.

**Command:** [ :SOURce]:CURRent:PROTection:DELAy <delay\_time>  
| MIN | MAX | DEF

<delay\_time> Numeric value in the range MIN to 60.0 seconds.  
The resolution is 1 millisecond. After a \*RST  
command the default setting is DEF.

MIN Sets the minimum delay time at 0.01 seconds.

MAX Sets the maximum delay time at 60 seconds.

DEF Sets the default value. For a 30 V output channel  
this is 0.05 seconds and for a 60 V output channel  
this is 0.1 seconds.

**Query:** [ :SOURce]:CURRent:PROTection:DELAy? [ MIN | MAX | DEF ]

**Response:** <delay\_time>

**Description:**

When the setting of an output channel is altered or after a protection reset, the power supply may change modes momentarily. To prevent the reporting of faults during this momentary switching, a delay can be programmed. This reprogramming delay specifies the time period in which the CC, CV and UNR bits in the status registers will be masked from being reported in the fault register and from activating the overcurrent protection circuit. If a value outside the valid range is input, it will be ignored and error -222 is reported.

The reprogramming delay is active when one of the following functions is executed:

- |                                              | <u>command:</u>          |
|----------------------------------------------|--------------------------|
| • $V_{\text{set}}$ (voltage setting).        | :SOURCE:VOLTAGE          |
| • $I_{\text{set}}$ (current setting).        | :SOURCE:CURRENT          |
| • ENABLE output channel.                     | :OUTPUT:STATE ON         |
| • Reset protection.                          | :OUTPUT:PROTECTION:CLEAR |
| • Enter OPERATE mode.                        | :INSTRUMENT:STATE ON     |
| • A recall of voltage /current settings.     |                          |
| • Stepping through voltage/current settings. |                          |

**Example:**

- |                            |                             |
|----------------------------|-----------------------------|
| Send → :INST:NSEL 2        | Selects output channel 2.   |
| Send → :CURR:PROT:DEL 2.25 | Delay becomes 2.25 seconds. |

## **[[:SOURce]:CURRent:PROTection:STATe**

**Action:** Enables or disables the overcurrent protection (OCP).

**Command:** [[:SOURce]:CURRent:PROTection:STATe OFF | ON

OFF | 0 This will disable the overcurrent protection (OCP).  
After a \*RST command the setting is OFF.

ON | 1 This will enable the overcurrent protection (OCP).

**Query:** [[:SOURce]:CURRent:PROTection:STATe?

**Response:** 0|1

### **Description:**

The overcurrent protection (OCP) can be enabled or disabled while the instrument is in the OPERATE or STANDBY mode (see INSTRument:STATE command). When the power supply is in the OPERATE mode and the output channel is enabled, the enabled overcurrent protection becomes active as soon as the reprogramming delay time has expired.

### **Example:**

Send → :INST:NSEL 2      Select output channel 2.  
Send → :CURR:PROT:STAT 1      Enable output channel 2.

## **[[:SOURce]:CURRent:PROTection:TRIPped?**

**Action:** Reports whether the overcurrent protection circuit has been tripped.

**Query:** [[:SOURce]:CURRent:PROTection:TRIPped?

**Response:** 0|1

0 Overcurrent protection circuit not tripped.

1 Overcurrent protection circuit tripped.

### **Description:**

The overcurrent protection (OCP) circuit has been tripped if the maximum current level has been exceeded and the overcurrent protection was enabled.

### **Example:**

Send → :CURR:PROT:TRIP?

Read ← <response>

IF <response> = 1 THEN

BEGIN

Send → :CURR:PROT:STAT 0 Sets the overcurrent protection off.

Send → :OUTP:PROT:CLE Resets the overcurrent protection circuitry.

END

## **[ :SOURce]:FUNCTION:MODE?**

**Action:** Reports the operating mode of the selected output channel.

**Query:** [ :SOURce]:FUNCTION:MODE?

**Response:** <character\_string>

<character\_string> The mode of an output channel can be:

VOLT Constant voltage output (CV mode).

CURR Constant current output (CC mode).

### **Description:**

If the power supply is in the STANDBY mode, the response will be VOLT.

### **Example:**

Send → :FUNC:MOD?

Read ← <response>

Send → :INST:NSEL?

Read ← <chan\_num>

Print "output channel ",<chan\_num>," = ",<response>

As a result the message "output channel N = VOLT" is printed if output channel N was in the CV mode.

## **[[:SOURce]:LIST:CURRent**

**Action:** Sets the specified list of dc current value(s) into subsequent memory addresses, starting from the defined entry address, for the current output channel.

**Command:** [[:SOURce]:LIST:CURRent <num\_val>{,<num\_val>}  
<num\_val> Numeric value for the programmed current in the range from MIN to the MAX output current possible. The memory contents are not affected by the \*RST command.

### **Description:**

In one command as many current values can be specified as there are addresses to be filled. The filling of addresses is incremental, i.e. 1, 2, 3, etc. After having filled the current of address 99, address 1 is the next one to be filled with the next current specified.

### **Example:**

Send → :INST:NSEL 2                      Select output channel 2.  
Send → :LIST:IND 10                      Select address 10 (entry address).  
Send → :LIST:CURR 1.0,1.1,1.2,1.3,1.4,1.5  
This will fill the addresses 10, 11, 12, 13, 14, and 15 with the currents 1.0A, 1.1A, 1.2A, 1.3A, 1.4A, and 1.5A, for the selected output channel 2.

## **[[:SOURce]:LIST:CURRent:POINts?**

**Action:** Returns the number of current points in the predefined sequence list for the selected output channel.

**Query:** [[:SOURce]:LIST:CURRent:POINts?

**Response:** <integer>

<integer> Number of points in the current list from the start address through the stop address.

### **Description:**

As many current points are returned as there are addresses specified from the start address through the stop address. The maximum number is 99.

### **Example:**

Send → :LIST:CURR:POIN?

Read ← <number>

print "the number of current points = "; <number>

## **[[:SOURce]:LIST:GENeration**

**Action:** Generates the default sequence list.

**Command:** [[:SOURce]:LIST:GENeration SEquence

SEquence The default sequence in the defined list.

**Query:** [[:SOURce]:LIST:GENeration?

**Response:** SEQ

### **Description:**

A sequence list begins at the start address and ends at the stop address. When a step function is executed, the sequence list with current and voltage values will be stepped through from the start address through the stop address. The default sequence list is the only possibility (this has been implemented for reasons of SCPI compatibility).

### **Example:**

Send → :LIST:GEN SEQ

Generates the default sequence list.

Send → :INIT

Starts the step function.

## **[[:SOURce]:LIST:INDex[:NSElect]**

**Action:** Selects an entry (index) in the recall memory for all output channels.

**Command:** [[:SOURce]:LIST:INDex[:NSElect] <integer>

<integer> An integer selecting an address in the range of memory addresses. The range is from 1 to 99.

**Query:** [[:SOURce]:LIST:INDex[:NSElect]]?

**Response:** <integer>

### **Description:**

When an entry address has been selected, the corresponding voltage and current for this address (and subsequent addresses if desired) can be programmed, using the LIST:VOLT and :LIST:CURR commands.

### **Example:**

|                               |                                                                         |
|-------------------------------|-------------------------------------------------------------------------|
| Send → :LIST:IND 10           | Selects memory address 10.                                              |
| Send → :LIST:VOLT 12.34,23.45 | Voltage at addr. 10 becomes 12.34V, voltage at addr. 11 becomes 23.45V. |
| Send → :LIST:CURR 1.23,1.34   | Current at addr. 10 becomes 1.23A, current at addr. 11 becomes 1.34A.   |

## **[[:SOURce]:LIST:SEQuence:STARt**

**Action:** Sets the start address of the sequence list which will be executed in the step mode.

**Command:** [[:SOURce]:LIST:SEQuence:STARt <num\_val>

<num\_val> A numeric value from 1 to 99 for the start address.  
The default address after the \*RST command is 1.

**Query:** [[:SOURce]:LIST:SEQuence:STARt?

**Response:** <num\_val>

### **Description:**

During stepping a sequential list of voltage and current settings can be executed. The sequence begins at the start address and ends at the stop address. In the continuous step mode, the sequence is repeated continuously. This sequence list is applicable for all enabled output channels. The start address can be specified in the local and in the remote mode of operation.

### **Example:**

|                          |                                                                 |
|--------------------------|-----------------------------------------------------------------|
| Send → :LIST:SOUR TIM    | TIMer mode. The next step is defined by the step interval time. |
| Send → :LIST:TIM 3.5     | Step time = 3.5 seconds.                                        |
| Send → :LIST:SEQ:STAR 10 | Start entry is address 10.                                      |
| Send → :LIST:SEQ:STOP 29 | Stop entry is address 29.                                       |
| Send → :INIT:CONT ON     | Continuous stepping.                                            |
| Send → :INIT             | Starts automatic stepping; sequence = 10 to 29, 10 to 29, etc.  |

## **[[:SOURce]:LIST:SEQuence:STOP**

**Action:** Sets the stop address of the sequence list, which will be executed in the step mode.

**Command:** [:SOURce]:LIST:SEQuence:STOP <num\_val>

<num\_val> A numeric value from 1 to 99 for the stop address.  
The default address after the \*RST command is 99.

**Query:** [:SOURce]:LIST:SEQuence:STOP?

**Response:** <num\_val>

### **Description:**

During stepping a sequential list of voltage and current settings can be executed. The sequence begins at the start address and ends at the stop address. In the continuous step mode, the sequence is repeated continuously. This sequence list is applicable for all enabled output channels. The stop address can be specified in the local and in the remote mode of operation.

### **Example:**

|                          |                                                                 |
|--------------------------|-----------------------------------------------------------------|
| Send → :LIST:SOUR TIM    | TIMER mode. The next step is defined by the step interval time. |
| Send → :LIST:TIM 3.5     | Step time = 3.5 seconds.                                        |
| Send → :LIST:SEQ:STAR 10 | Start entry is address 10.                                      |
| Send → :LIST:SEQ:STOP 29 | Stop entry is address 29.                                       |
| Send → :INIT:CONT ON     | Continuous stepping.                                            |
| Send → :INIT             | Starts automatic stepping; sequence = 10 to 29, 10 to 29, etc.  |

## **[[:SOURce]:LIST:SOURce**

**Action:** Sets the trigger source for the step function.

**Command:** [[:SOURce]:LIST:SOURce <character\_string>

|                    |     |                                                                                                                          |
|--------------------|-----|--------------------------------------------------------------------------------------------------------------------------|
| <character_string> | EXT | EXTERNAL means that the STEP- , trigger line or a GPIB trigger command becomes the source for the next step to be taken. |
|                    | BUS | BUS is identical to EXT                                                                                                  |
|                    | TIM | TIMER means that the interval timer determines the next step to be taken.                                                |

**Query:** [[:SOURce]:LIST:SOURce?

**Response:** <character\_string>

### **Description:**

Automatic stepping can be done in one of the following ways:

- **Automatically** In this case the next step is performed when the step interval time has expired. The step interval time for all output channels is defined by the :LIST:TIMER command.
- **Externally** In this case the next step is performed when a trigger pulse is entered via the STEP line BNC connector at the rear or when a trigger command is send via the GPIB interface. If the START line of the trigger bus is active (LOW), the STEP line is the trigger source. If the START line is not active (HIGH), the next step is performed at a GET or \*TRG command via the GPIB.

The default source setting after the \*RST command is TIMER.

### **Example:**

|                          |                                                                 |
|--------------------------|-----------------------------------------------------------------|
| Send → :LIST:SOUR TIM    | TIMER mode. The next step is defined by the step interval time. |
| Send → :LIST:TIM 3.5     | Step time = 3.5 seconds.                                        |
| Send → :LIST:SEQ:STAR 10 | Start entry is address 10.                                      |
| Send → :LIST:SEQ:STOP 29 | Stop entry is address 29.                                       |
| Send → :INIT:CONT ON     | Continuous stepping.                                            |
| Send → :INIT             | Starts automatic stepping; sequence = 10 to 29, 10 to 29, etc.  |

# **[[:SOURce]:LIST:TIMer**

**Action:** Sets the interval time between two consecutive steps.

**Command:** [[:SOURce]:LIST:TIMer <num\_value> | MIN | MAX | DEF

<num\_value> This parameter specifies the step interval time in units of 0.001 seconds.

MIN This parameter sets the minimum step interval time at 0.1 seconds.

MAX This parameter sets the maximum step interval time at 60 seconds.

DEF This parameter sets the default step interval time at 0.1 seconds.

**Query:** [[:SOURce]:LIST:TIMer? [MIN | MAX | DEF]

**Response:** <num\_value>

**Description:**

The time between two consecutive steps in a sequence list is defined by the interval time. The start and stop address of the sequence list are defined with the [[:SOUR]:LIST:SEQ:START and [[:SOUR]:LIST:SEQ:STOP commands.

*Note: Stepping is done for all output channels at the same time with the same start and stop address in the sequence list for each output channel.*

**Example:**

|                          |                                                                 |
|--------------------------|-----------------------------------------------------------------|
| Send → :LIST:SOUR TIM    | TIMer mode. The next step is defined by the step interval time. |
| Send → :LIST:TIM 3.5     | Step time = 3.5 seconds.                                        |
| Send → :LIST:SEQ:STAR 10 | Start entry is address 10.                                      |
| Send → :LIST:SEQ:STOP 29 | Stop entry is address 29.                                       |
| Send → :INIT:CONT ON     | Continuous stepping.                                            |
| Send → :INIT             | Starts automatic stepping; sequence = 10 to 29, 10 to 29, etc.  |
|                          |                                                                 |
| Send → :LIST:TIM MAX     |                                                                 |

## **[[:SOURce]:LIST:VOLTage**

**Action:** Sets the specified list of voltage value(s) into subsequent memory addresses, starting from the defined entry address, for the current output channel.

**Command:** [:SOURce]:LIST:VOLTage <num\_val>{,<num\_val>}

<num\_val> Numeric value for the programmed voltage in the range from MIN to the MAX output current possible. The memory contents are not affected by the \*RST command.

### **Description:**

In one command as many voltage values can be specified as there are addresses to be filled. The filling of addresses is incremental, i.e., 1, 2, 3, etc. After having filled the voltage of address 99, address 1 is the next one to be filled with the next voltage specified.

### **Example:**

Send → :INST:NSEL 2                      Select output channel 2.

Send → :LIST:IND 10                      Select address 10 (entry address).

Send → :LIST:VOLT 1.0,1.1,1.2,1.3,1.4,1.5

This will fill the addresses 10, 11, 12, 13, 14, and 15 with the voltages 1.0V, 1.1V, 1.2V, 1.3V, 1.4V, and 1.5V, for the selected output channel 2.

## **[ :SOURce]:LIST:VOLTage:POINts?**

**Action:** Returns the number of voltage points in the predefined sequence list for the selected output channel.

**Query:** [ :SOURce]:LIST:VOLTage:POINts?

**Response:** <integer>

<integer>      Number of points in the voltage list from the start address through the stop address.

### **Description:**

As many voltage points are returned as there are addresses specified from the start address through the stop address. The maximum number is 99.

### **Example:**

Send → :LIST:VOLT:POIN?

Read ← <number>

print "the number of voltage points = "; <number>

## **[[:SOURce]:POWer:LIMit:HIGH?**

**Action:** Returns the maximum available power of the selected output channel.

**Query:** [[:SOURce]:POWer:LIMit:HIGH?

**Response:** <max\_power>

<max\_power>      Maximum power available.

### **Description:**

This query is used to request the maximum available power for the selected output channel.

### **Example:**

Send → :INST:NSEL 1      Selects output channel 1.

Send → :POW:LIM:HIGH?      Requests for the highest possible power.

Read ← <max\_power>

print "max. power for channel 1 = "; <max\_power>; " Watt"

# [ :SOURce]:VOLTage[:LEVel][:IMMediate][:AMPLitude]

**Action:** Sets the output voltage for the selected output channel.

**Command:** [:SOURce]:VOLTage[:LEVEL][:IMMediate][:AMPLitude]  
<voltage> | MIN | MAX | DEF

|           |                                                                                                                              |
|-----------|------------------------------------------------------------------------------------------------------------------------------|
| <voltage> | A numeric value in the range 0 to the maximum output voltage of the output channel. After a *RST command the setting is MIN. |
| MIN       | This parameter will set the output voltage to its minimum level.                                                             |
| MAX       | This parameter will set the output voltage to its maximum level, depending upon the maximum power and the current setting.   |
| DEF       | This parameter will set the output to its actual value.                                                                      |

**Query:** [:SOURce]:VOLTage[:LEVEL][:IMMediate][:AMPLitude]?  
[MIN | MAX | DEF]

**Response:** <voltage>

**Description:**

Your power supply will round off the <voltage> parameter to the nearest multiple of the resolution of the selected output channel.

|                        |                    |
|------------------------|--------------------|
| <u>output channel:</u> | <u>resolution:</u> |
| 30V/10A                | 7.5 mV             |
| 60V /5A                | 15.0 mV            |
| 60V/10A                | 15.0 mV            |

If a value outside the valid range is input, it will not be accepted and error -222 is reported.

For a 30V/10A module: MAX= 30V and MIN = 0.0V

For a 60V/ 5A module: MAX= 60V and MIN = 0.0V

For a 60V/10A module: MAX= 60V and MIN = 0.0V

The range of legal voltage settings depends upon one of the following conditions:

- The maximum voltage of the output channel is exceeded. In this case the value is not accepted, and error -222 is reported.

- The maximum power of the output channel ( $I_{set} \times V_{set}$ ) is exceeded. In this case there are two possibilities:
  - COUPLED PARAMETERS = ON:  
Your power supply will adjust its current setting  $I_{set}$  according to the channel's constant power characteristics.
  - COUPLED PARAMETERS = OFF:  
Your power supply will not adjust its settings. This will be reported by error -222.

The COUPLED PARAMETERS can be set ON or OFF using the SOURCE subsystem command :VOLTage[:LEVel][:IMMediate]:AUTO.

*Note: The coupling mechanism for remote operation differs from the local coupling mechanism. The local coupling mechanism is valid for all available output channels. The remote coupling mechanism can be specified per output channel. Be aware of this when switching from local to remote or vice versa!*

**Example:** (for a 60W output channel)

|                      |                                                              |
|----------------------|--------------------------------------------------------------|
| Send → *RST          | Output settings become MINimum for both voltage and current. |
| Send → :CURR 2       | Output current becomes 2A.                                   |
| Send → :VOLT 30      | Output voltage becomes 30V.                                  |
| Send → :CURR:AUTO ON | Current/voltage coupling becomes active.                     |
| Send → :VOLT 60      | Output current becomes 60V.                                  |
| Send → :CURR?        | Read current setting.                                        |
| Read ← <curr>        | <curr> Will be $60W / 60V = 1A$ (instead of 2A).             |

## **[[:SOURce]:VOLTage[:LEVel]][:IMMediate]][:AMPLitude]:AUTO**

**Action:** Enables or disables the coupling of the voltage and the current parameter.

**Command:** [[:SOURce]:VOLTage[:LEVEL]][:IMMediate]  
[:AMPLitude]:AUTO <boolean>|ONCE

|           |         |                              |
|-----------|---------|------------------------------|
| <boolean> | 0   OFF | Parameter coupling disabled. |
|           | 1   ON  | Parameter coupling enabled.  |

|      |                                                                   |
|------|-------------------------------------------------------------------|
| ONCE | Coupled only for the next voltage and/or current setting command. |
|------|-------------------------------------------------------------------|

**Query:** [[:SOURce]:VOLTage[:LEVEL]][:IMMediate]][:AMPLitude]:AUTO?

**Response:** <boolean>

### **Description:**

The range of legal voltage settings has been related to the current setting and the maximum power of the output channel. If the product of a new current setting and voltage setting in one program message exceeds the maximum power, the last setting is not accepted and error - 221 is reported. This can be avoided by using the command to couple the voltage to the current. The result is that the actual current is adjusted according to the formula:

$$V_{\text{set}} = \frac{P_{\text{max}}}{V_{\text{Set}}}$$

The parameter ONCE is to be used when the voltage to current coupling has to be done only once for the next current or voltage programming.

If the current and voltage setting in one program message does not exceed the maximum power, the settings will be accepted without change, e.g.:

- suppose voltage = 30V and current = 2A
- the program message :CURR 3;:VOLT 20 will be accepted

**Note:** *The coupling mechanism for remote operation differs from the local coupling mechanism. The local coupling mechanism is valid for all available output channels. The remote coupling mechanism can be specified per output channel. Be aware of this when switching from local to remote or vice versa!*

**Example:** (for a 60W output channel)

|                      |                                                   |
|----------------------|---------------------------------------------------|
| Send → :VOLT 20      | Voltage becomes 20V.                              |
| Send → :CURR:AUTO ON | Current and voltage become coupled.               |
| Send → :CURR 4       | Current becomes 4A.                               |
| Send → :VOLT?        | Read voltage setting.                             |
| Read ← <volt>        | <volt> Will be $60W / 4A = 15V$ (instead of 20V). |

## **[ :SOURce]:VOLTage:LIMit:HIGH?**

**Action:** Returns the maximum voltage setting of the selected output channel.

**Query:** [:SOURce]:VOLTage:LIMit:HIGH?

**Response:** <max\_voltage>

<max\_voltage>      Maximum voltage.

### **Description:**

This query requests the maximum possible voltage for the selected output channel, according to the output channel specific ratings.

### **Example:**

```
Send → :INST:NSEL 1           Selects output channel 1.
Send → :VOLT:LIM:HIGH?        Requests for highest voltage.
Read ← <max_voltage>
print "maximum voltage = ", <max_voltage>
```

## **[[:SOURce]:VOLTage:LIMit:LOW?**

**Action:** Returns the minimum voltage setting of the selected output channel.

**Query:** [[:SOURce]:VOLTage:LIMit:LOW?

**Response:** <min\_voltage>

<min\_voltage> Minimum voltage.

### **Description:**

This query requests the minimum possible voltage setting for the selected output channel, according to the output channel specific ratings.

### **Example:**

Send → :INST:NSEL 1 Selects output channel 1.

Send → :VOLT:LIM:LOW? Requests for lowest voltage.

Read ← <min\_voltage>

print "minimum voltage = ", <min\_voltage>

## [:SOURce]:VOLtage:PROTection[:LEVel]

**Action:** Sets the overvoltage level of the selected output channel.

**Command:** [:SOURce]:VOLTage:PROTection[:LEVEL] <overvoltage>IMINIMAXIDEF

<overvoltage> Numeric value in the range MINimum to the MAXimum overvoltage of the output channel. After a \*RST command the setting is MAX.

**MIN** Sets the overvoltage level at the minimum (2V).

**MAX** Sets the overvoltage level at the maximum (2V above the maximum output rating).

|     |                                       |
|-----|---------------------------------------|
| DEF | This parameter sets the actual value. |
|-----|---------------------------------------|

**Query:** [:SOURce]:VOLTage:PROTection[:LEVEL]? [ MIN | MAX | DEF ]

**Response:** <overvoltage>

**Description:**

Your power supply will round off the <overvoltage> parameter to the nearest multiple of the resolution of the selected output channel.

output channel: resolution of the overvoltage:

30V/10A 120 mV

60V/ 5A 240 mV

60V/10A 240 mV

The range of legal overvoltage settings is depending upon the maximum overvoltage of the output channel. If this range is exceeded, the overvoltage is not accepted and error -222 is reported.

**Example:**

Send → :VOLT 10      Voltage becomes 10 volt.

Send → :VOLT:PROT 10.15      Overvoltage becomes 10.15 volt.

## **[[:SOURce]:VOLTage:PROTection:TRIPped?**

**Action:** Reports whether or not the overvoltage protection circuit has been tripped.

**Query:** [[:SOURce]:VOLTage:PROTection:TRIPped?

**Response:** 0|1

0 Overvoltage protection circuit not tripped.

1 Overvoltage protection circuit tripped.

### **Description:**

If the overvoltage level  $OV_{set}$  has been exceeded, the overvoltage protection (OVP) circuit is tripped

### **Example:**

Send → :VOLT:PROT:TRIP?

Read ← <response>

IF <response> = 1 THEN

BEGIN

Send → :VOLT:PROT MAX      Sets overvoltage protection level at MAX.

Send → :OUTP:PROT:CLE      Resets overvoltage protection circuit.

END

## :STATus:OPERation:CONDition?

**Action:** Reports the contents of the Operation Condition Register.

**Query:** :STATus:OPERation:CONDition?

**Response:** <cond\_data>

<cond\_data> The contents of the Operation Condition Register expressed as an integer value in the effective range 0 to 8960 decimal (allowed = 0 to 65535).

### Description:

This query returns the current contents of the Operation Condition Register. The decimal value that is returned, is the summation of the decimal value (bit weight) of the individual bits that have been set.

The bits in the Operation Condition Register have the following meaning:

| BIT<br>NUMBER | <cond_data><br>DECIMAL | VALID CONDITIONS                              |
|---------------|------------------------|-----------------------------------------------|
| 8             | 256                    | Output channel 1 is in constant voltage mode. |
| 9             | 512                    | Output channel 1 is in constant current mode. |
| 13            | 8192                   | INSTrument summary (all Output Channels).     |
| other         |                        | ----- Not used. Zero is returned -----        |

### Example:

Send → :STAT:OPER:COND?

Read ← 8704

The returned value 8704 equals 8192 (bit 13) + 512 (bit 9). This means the INSTrument summary bit is set and Output channel 1 is in constant current mode.

# :STATus:OPERation:ENABLE

**Action:** Sets the enable mask, allowing events that are true in the Operation Event Register to be reported by the Operation summary bit in the Status Byte Register.

**Command:** :STATus:OPERation:ENABLE <enable\_mask>

<enable\_mask> Integer value in the range 0 to 65535 decimal.  
The binary representation of the value is placed in the Enable Register and used as the enable mask. Each bit that is set to 1 in the enable mask will enable the corresponding bit in the Operation Event Register to be included in the Operation summary bit. Default = 0.

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:ENABLE?

**Response:** <enable\_mask>

## Description:

The enable mask allows the actual true conditions in the Operation Event Register to be reported in the Operation summary bit, i.e. bit 7 in the Status Byte Register.

| BIT NUMBER | <enable_mask> DECIMAL | ENABLES THE FOLLOWING EVENTS                      |
|------------|-----------------------|---------------------------------------------------|
| 8          | 256                   | Constant voltage mode change of Output channel 1. |
| 9          | 512                   | Constant current mode change of Output channel 1. |
| 13         | 8192                  | INSTrument summary change (all Output Channels).  |
| other      |                       | ----- Don't care -----                            |

## Example:

Send → :STAT:OPER:ENAB 256

This example will enable the event of entering/leaving the Constant Voltage mode of Output channel 1 to be reported by the Operation summary bit (bit 7) in the Status Byte Register. See also the table under :STATus:OPERation:CONDition?

## :STATus:OPERation[:EVENT]?

**Action:** Reports the contents of the Operation Event Register.

**Query:** :STATus:OPERation[:EVENT]?

**Response:** <event\_data>

<event\_data> The contents of the Operation Event Register expressed as an integer value in the effective range 0 to 8960 decimal (allowed = 0 to 65535).

### Description:

This query returns the current contents of the Operation Event Register. The decimal value that is returned is the summation of the decimal value (bit weight) of the individual bits that have been set.

The Operation Event Register is cleared when it is read. The key word EVENT is an optional command part.

The event bits have the following meaning:

| BIT NUMBER | <event_data> DECIMAL | A CHANGE OCCURRED IN ONE OF THE FOLLOWING CONDITIONS |
|------------|----------------------|------------------------------------------------------|
| 8          | 256                  | Output channel 1 constant voltage changed.           |
| 9          | 512                  | Output channel 1 constant current changed.           |
| 13         | 8192                 | INSTRument summary bit of all output channels.       |
| other      |                      | ----- Not used. Zero is returned -----               |

### Example:

Send → :STAT:OPER?

Read ← 8448

The returned decimal value 8448 equals 8192 (bit 13) + 256 (bit 8). This means that Output Channel 1 changed Constant Voltage mode and the Instrument Summary bit changed (has been set or reset).

## :STATus:OPERation:INSTrument:CONDition?

**Action:** Reports the contents of the Operation Instrument Condition Register.

**Query:** :STATus:OPERation:INSTrument:CONDition?

**Response:** <cond\_data>

<cond\_data> The contents of the Operation Instrument Condition Register expressed as an integer value in the range 0 to 14 decimal.

### Description:

This query returns the contents of the Operation Instrument Condition Register.

| BIT<br>NUMBER | <cond_data><br>DECIMAL | VALID CONDITIONS                       |
|---------------|------------------------|----------------------------------------|
| 1             | 2                      | Summary of Output channel 1.           |
| 2             | 4                      | Summary of Output channel 2.           |
| 3             | 8                      | Summary of Output channel 3.           |
| other         |                        | ----- Not used. Zero is returned ----- |

### Example:

Send → :STAT:OPER:INST:COND?

Read ← 12

The returned value 12 equals 4 + 8 (bit 2 and 3 set). This means that the Summary bit of the Output Channels 2 and 3 have been set.

# :STATus:OPERation:INSTrument:ENABLE

**Action:** Sets the enable mask, which allows events in the Operation Instrument Event Register to be reported in the Instrument summary bit.

**Command:** :STATus:OPERation:INSTrument:ENABLE <enable\_mask>

<enable\_mask> Decimal number in the effective range 0 to 14 (allowed = 0 to 65535); default = 32767

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:INSTrument:ENABLE?

**Response:** <enable\_mask>

## Description:

This command sets the enable mask, which allows true conditions in the Operation Instrument Event Register to be reported in the Instrument summary bit, i.e. bit 13 in the Operation Status Register.

| BIT NUMBER | <enable_mask> DECIMAL | ENABLES THE FOLLOWING EVENTS:        |
|------------|-----------------------|--------------------------------------|
| 1          | 2                     | Summary of Output channel 1 changed. |
| 2          | 4                     | Summary of Output channel 2 changed. |
| 3          | 8                     | Summary of Output channel 3 changed. |
| other      |                       | ----- Don't care -----               |

## Example:

Send → STAT:OPER:INST:ENAB 12

This enables a change of the summary bit of the Output channels 2 and 3 to be reported in the (operation and questionable) Instrument Summary bit (bit 13).

## STATus:OPERation:INSTRument[:EVENt]?

**Action:** Reports the contents of the Operation Instrument Event Register.

**Query:** STATus:OPERation:INSTRument[:EVENt]?

**Response:** <event\_data>  
The contents of the Operation Instrument Event Register expressed as an integer value in the effective range 0 to 14 decimal (allowed – 0 to 65535).

### Description

This query returns the contents of the Operation Instrument Event Register. The contents of this register indicates which Output channel has reported an event.

The event register is cleared when it has been read.

| BIT NUMBER | <event_data> DECIMAL | A CHANGE OCCURRED IN ONE OF THE FOLLOWING CONDITIONS |
|------------|----------------------|------------------------------------------------------|
| 1          | 2                    | Summary of Output channel 1 Operation events.        |
| 2          | 4                    | Summary of Output channel 2 Operation events.        |
| 3          | 8                    | Summary of Output channel 3 Operation events.        |
| other      |                      | Not used. Zero is returned.                          |

### Example

```
Send > STATus:OPERation:INSTR?
Read < 12
```

The returned value 12 equals 4 (bit 2 set) + 8 (bit 3 set). This means that Output Channels 2 and 3 reported some event(s).

## :STATus:OPERation:INSTrument:ISUMmary:CONDition?

**Action:** Reports the contents of an Output channel's Summary Condition Register.

**Query:** :STATus:OPERation:INSTrument:ISUMmary<suffix>:CONDition?

**Response:** <cond\_data>

<suffix> Specifies the Output channel number 1 2 or 3

<cond\_data> The contents of the Instrument Summary Condition Register expressed as an integer value in the effective range 0 to 768 decimal (allowed = 0 to 65535).

### Description:

This query returns the contents of an Output channel's Summary Condition Register.

| BIT<br>NUMBER | <cond_data><br>DECIMAL | THE OUTPUT CHANNEL, SPECIFIED BY <suffix>,<br>REPORTS THE FOLLOWING CONDITIONS: |
|---------------|------------------------|---------------------------------------------------------------------------------|
| 8             | 256                    | CV - Constant Voltage mode.                                                     |
| 9             | 512                    | CC - Constant Current mode.                                                     |
| other         |                        | ----- Not used. Zero is returned -----                                          |

### Example:

Send → :STAT:OPER:INST:ISUM1:COND?

This query requests the contents of the Summary Condition Register of Output channel 1.

Read ← 512

The value 512 equals 2 to the power 9, i.e., bit 9 is true, indicating that the Output channel 1 is in constant current mode.

## :STATus:OPERation:INSTrument:ISUMmary:ENABle

**Action:** Sets the enable mask, which allows events in the Operation Instrument Summary Event Register to be reported in the Operation Instrument Register.

**Command:** :STATus:OPERation:INSTrument:ISUMmary<suffix>  
:ENABle <enable\_mask>

<suffix> Specifies the Output channel number 1, 2, or 3.

<enable\_mask> Decimal number in the effective range 0 to 768 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:INSTrument:ISUMmary<suffix>:ENABle?

**Response:** <enable\_mask>

### Description:

This command sets the enable mask, which allows true conditions in the Operation Instrument Summary Event Registers to be reported in the Operation Instrument Register bit 1 (when <suffix> =1), bit 2 (when <suffix> =2) or bit 3 (when <suffix> =3).

| BIT NUMBER | <enable_mask> DECIMAL | THE FOLLOWING EVENTS, REPORTED BY THE OUTPUT CHANNEL, SPECIFIED BY <suffix>, ARE ENABLED: |
|------------|-----------------------|-------------------------------------------------------------------------------------------|
| 8          | 256                   | CV - Constant Voltage mode change.                                                        |
| 9          | 512                   | CC - Constant Current mode change.                                                        |
| other      |                       | ----- Don't care -----                                                                    |

### Example:

Send → :STAT:OPER:INST:ISUM2:ENAB 256

This enables a change of the Constant Voltage mode of Output Channel 2 to be reported in the Operation Instrument Register bit 2.

# :STATus:OPERation:INSTrument:ISUMmary[:EVENT]?

**Action:** Reports the contents of an Output channel's Summary Event Register.

**Query:** :STATus:OPERation:INSTrument:ISUMmary<suffix>[:EVENT]?

**Response:** <event\_data>

<suffix> Specifies the Output channel number 1, 2 or 3.

<event\_data> The contents of the Instrument Summary Event Register expressed as an integer value in the effective range 0 to 768 decimal (allowed = 0 to 65535).

**Description:**

This query returns the contents of an Output channel's Summary Event Register. This register collects changes to the contents of the :STATus:OPERation:INSTrument:ISUMmary:CONDition register. The changes are propagated through the transition filters, depending on their settings. The event register is cleared when it has been read.

| BIT NUMBER | <event_data><br>DECIMAL | THE OUTPUT CHANNEL, SPECIFIED BY <suffix>, REPORTS A CHANGE IN ONE OF THE FOLLOWING CONDITIONS: |
|------------|-------------------------|-------------------------------------------------------------------------------------------------|
| 8          | 256                     | CV - Constant Voltage mode.                                                                     |
| 9          | 512                     | CC - Constant Current mode.                                                                     |
| other      |                         | ----- Not used. Zero is returned -----                                                          |

**Example:**

Send → :STAT:OPER:INST:ISUM1?

This query requests for the contents of the Summary Event Register of Output channel 1.

Read ← 512

The value 512 equals 2 to the power 9, i.e., bit 9 is true, indicating that Output channel 1 entered or left the constant current mode determined by the settings of the transition filters.

## :STATus:OPERation:INSTrument:ISUMmary:NTRansition

**Action:** Sets an Output Channel's Operation Instrument Summary Negative Transition Filter.

**Command:** :STATus:OPERation:INSTrument:ISUMmary<suffix>  
:NTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0 to 768 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:INSTrument:ISUMmary<suffix>:NTRansition?

**Response:** <filter\_setting>

### Description:

This Negative Transition Filter specifies which bits in the Operation Instrument Condition Register, that make a negative (1 → 0) transition, will set the corresponding bit in the Operation Instrument Event Register. For example, when you set bit 8 in this filter, it will set bit 8 in the Operation Instrument Event Register at the time bit 8 in the Operation Instrument Condition Register is reset, i.e., changed from 1 to 0.

| BIT NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS, WHICH OCCURRED IN THE OUTPUT CHANNEL SPECIFIED BY <suffix>, ARE PASSED ON TO ITS OPERATION INSTRUMENT SUMMARY EVENT REGISTER: |
|------------|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 8          | 256                         | CV - Output Channel leaves the Constant Voltage mode.                                                                                               |
| 9          | 512                         | CC - Output Channel leaves the Constant Current mode.                                                                                               |
| other      |                             | ----- Don't care -----                                                                                                                              |

**Example:**

Send → :STAT:OPER:INST:ISUM2:NTR 768

This will set the bits 8 and 9 (256+512) in the Operation Instrument Summary Negative Transition Filter associated with Output Channel 2. Now when Output Channel 2 leaves either the Constant Voltage mode or the Constant Current mode, this event will be propagated to the Operation Instrument Summary 2 Event Register.

## :STATus:OPERation:INSTrument:ISUMmary:PTRansition

**Action:** Sets an Output Channel's Operation Instrument Summary Positive Transition Filter.

**Command:** :STATus:OPERation:INSTrument:ISUMmary<suffix>  
:PTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0 to 768 (allowed = 0 to 65535); default = 32767

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:INSTrument:ISUMmary<suffix>:PTRansition?

**Response:** <filter\_setting>

### Description:

This Positive Transition Filter specifies which bits in the Operation Instrument Condition Register, that make a positive (0 → 1) transition, will set the corresponding bit in the Operation Instrument Event Register. For example, when you set bit 8 in this filter, it will set bit 8 in the Operation Instrument Event Register at the time bit 8 in the Operation Instrument Condition Register is set, i.e. changed from 0 to 1.

| BIT<br>NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS, WHICH OCCURRED IN<br>THE OUTPUT CHANNEL SPECIFIED BY <suffix>,<br>ARE PASSED ON TO ITS OPERATION<br>INSTRUMENT SUMMARY EVENT REGISTER: |
|---------------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8             | 256                         | CV - Output Channel leaves the Constant<br>Voltage mode.                                                                                                     |
| 9             | 512                         | CC - Output Channel leaves the Constant<br>Current mode.                                                                                                     |
| other         |                             | ----- Don't care -----                                                                                                                                       |

**Example:**

Send → :STAT:OPER:INST:ISUM2:PTR 768

This will set bits 8 and 9 (256+512) in the Operation Instrument Summary Positive Transition Filter associated with Output Channel 2. Now when Output Channel 2 enters either the Constant Voltage mode or the Constant Current mode, this event will be propagated to the Operation Instrument Summary 2 Event Register.

## :STATus:OPERation:INSTrument:NTRansition

**Action:** Sets the Operation Instrument Negative Transition Filter.

**Command:** :STATus:OPERation:INSTrument:NTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0, to 14 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:INSTrument:NTRansition?

**Response:** <filter\_setting>

### Description:

This Negative Transition Filter specifies which bits in the Operation Instrument Condition Register, that make a negative (1 → 0) transition, will set the corresponding bit in the Operation Instrument Event Register. For example, when you set bit 1 in this filter, it will set bit 1 in the Operation Instrument Event Register at the time bit 1 in the Operation Instrument Condition Register is reset, i.e., changed from 1 to 0.

| BIT NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO<br>THE OPERATION INSTRUMENT EVENT REGISTER: |
|------------|-----------------------------|-----------------------------------------------------------------------------------|
| 1          | 2                           | Summary of Output channel 1 changed from 1 to 0.                                  |
| 2          | 4                           | Summary of Output channel 2 changed from 1 to 0.                                  |
| 3          | 8                           | Summary of Output channel 3 changed from 1 to 0.                                  |
| other      |                             | ----- Don't care -----                                                            |

### Example:

Send → :STAT:OPER:INST:NTR 4

This will set bit 2 in the Operation Negative Transition Filter. Now when the summary bit of Output Channel 2 changes from 1 to 0, this event is propagated to the Operation Instrument Event Register.

**:STATus:OPERation:INSTrument:PTRansition**

**Action:**        Sets the Operation Instrument Positive Transition Filter.

**Command:**    :STATus:OPERation:INSTrument:PTRansition <filter setting>

                 <filter setting>    Whole decimal number in the effective range 0 to 14 (allowed = 0 to 65535); default = 32767

                 Values can be given in:

- decimal    <value>
- hexadec.   #h<value>
- octal       #q<value>
- binary      #b<value>

**Query:**        :STATus:OPERation:INSTrument:PTRansition?

**Response:**    <filter\_setting>

**Description:**

This Positive Transition Filter specifies which bits in the Operation Instrument Condition Register, that make a positive (0 → 1) transition, will set the corresponding bit in the Operation Instrument Event Register. For example, when you set bit 1 in this filter, it will set bit 1 in the Operation Instrument Event Register at the time bit 1 in the Operation Instrument Condition Register is set, i.e., changed from 0 to 1.

| BIT NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO THE OPERATION INSTRUMENT EVENT REGISTER: |
|------------|-----------------------------|--------------------------------------------------------------------------------|
| 1          | 2                           | Summary of Output channel 1 changed from 1 to 0.                               |
| 2          | 4                           | Summary of Output channel 2 changed from 1 to 0.                               |
| 3          | 8                           | Summary of Output channel 3 changed from 1 to 0.                               |
| other      |                             | ----- Don't care -----                                                         |

**Example:**

Send → :STAT:OPER:INST:PTR 4

This will set bit 2 in the Operation Positive Transition Filter. Now when the summary bit of Output Channel 2 changes from 0 to 1, this event is propagated to the Operation Instrument Event Register.

## :STATus:OPERation:NTRansition

**Action:** Sets the Operation Negative Transition Filter.

**Command:** :STATus:OPERation:NTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0, to 8960 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:OPERation:NTRansition?

**Response:** <filter\_setting>

### Description:

This Negative Transition Filter specifies which bits in the Operation Condition Register, that make a negative (1 → 0) transition, will set the corresponding bit in the Operation Event Register. For example when you set bit 8 in this filter, it will set bit 8 in the Operation Event Register at the time bit 8 in the Operation Condition Register is reset, i.e. changed from 1 to 0.

| BIT<br>NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO<br>THE OPERATION EVENT REGISTER: |
|---------------|-----------------------------|------------------------------------------------------------------------|
| 8             | 256                         | Output channel 1 leaves constant voltage mode.                         |
| 9             | 512                         | Output channel 1 leaves constant current mode.                         |
| 13            | 8192                        | INSTrument summary Condition bit becomes FALSE.                        |
| other         |                             | ----- Don't care -----                                                 |

### Example:

Send → :STAT:OPER:NTR 512

This will set bit 9 in the Operation Negative Transition Filter. When Output Channel 1 leaves Constant Current mode, this event is propagated to the Operation Event Register.

**:STATus:OPERation:PTRansition**

**Action:**        Sets the Operation Positive Transition Filter.

**Command:**    :STATus:OPERation:PTRansition <filter\_setting>

                 <filter\_setting>    Whole decimal number in the effective range 0 to 8960 (allowed = 0 to 65535); default = 32767  
                 Values can be given in:    • decimal    <value>  
                                                        • hexadec.    #h<value>  
                                                        • octal        #q<value>  
                                                        • binary      #b<value>

**Query:**        :STATus:OPERation:PTRansition?

**Response:**    <filter\_setting>

**Description:**  
This Positive Transition Filter specifies which bits in the Operation Condition Register, that make a positive (0 → 1) transition, will set the corresponding bit in the Operation Event Register. For example, when you set bit 8 in this filter, it will set bit 8 in the Operation Event Register at the time bit 8 in the Operation Condition Register is set, i.e. changed from 0 to 1.

| BIT NUMBER | <filter_setting> DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO THE OPERATION EVENT REGISTER: |
|------------|--------------------------|---------------------------------------------------------------------|
| 8          | 256                      | Output channel 1 enters constant voltage mode.                      |
| 9          | 512                      | Output channel 1 enters constant current mode.                      |
| 13         | 8192                     | INSTrument summary Condition bit becomes TRUE.                      |
| other      |                          | ----- Don't care -----                                              |

**Example:**  
Send → :STAT:OPER:PTR 512

This will set bit 9 in the Operation Positive Transition Filter. When Output Channel 1 enters Constant Current mode, this event is propagated to the Operation Event Register.

## :STATus:PRESet

**Action:** Presets the following status registers to all zeros or all ones:

- OPERation
- QUEStionable
- ISUMmary
- INSTRument

**Command:** :STATus:PRESet

### Description:

By sending this command the following status registers are preset as follows:

|                |             |                                 |
|----------------|-------------|---------------------------------|
| - OPERation    | ENABLE      | All bits preset to zero.        |
|                | PTRansition | All bits preset to one (32767). |
|                | NTRansition | All bits preset to zero.        |
| - QUEStionable | ENABLE      | All bits preset to zero.        |
|                | PTRansition | All bits preset to one (32767). |
|                | NTRansition | All bits preset to zero.        |
| - ISUMmary     | ENABLE      | All bits preset to zero.        |
|                | PTRansition | All bits preset to one (32767). |
|                | NTRansition | All bits preset to zero.        |
| - INSTRument   | ENABLE      | All bits preset to one (32767). |
|                | PTRansition | All bits preset to one (32767). |
|                | NTRansition | All bits preset to zero.        |

### Example:

Send → :STAT:PRES Presets the status registers as indicated above.

## :STATus:QUEue[:NEXT]?

**Action:** Reports the next error message held in the instrument's error queue.

**Query:** :STATus:QUEue[:NEXT]?

**Response:** <error\_number>,<error\_message>

<error\_number> This is an integer value in the range -32768 to 23767. The meaning of each error value that can be returned is described in Appendix F "Error Messages". If 0 (zero) is returned, there are no errors in the queue.

<error\_message> This is a character sequence which briefly describes the error. When there are no errors in the queue, the error message will be "No error".

### Description:

The error queue can hold errors that have occurred. These can be command or execution errors. The error queue is a "first-in first-out" queue. Therefore, the error query returns the oldest error. Once an error is read, it is removed from the queue, and the next error message is made available. When all the error messages have been read from the error queue, the message [0, "No error"] will be returned.

The error queue will be cleared after power-up, after a device reset, and when a \*CLS command is received.

If there are more errors than the queue can hold, it will overflow. The oldest errors stay in the queue, but the most recent error is discarded and the latest error written in its place. When this happens, the last position in the queue contains a "Queue overflow" message.

This query is the equivalent of the :SYST:ERR? query.

### Example:

Send → :STAT:QUE?

Read ← -222,"Data out of range"

## :STATus:QUESTionable:CONDition?

**Action:** Reports the contents of the Questionable Condition Register.

**Query:** :STATus:QUESTionable:CONDition?

**Response:** <cond\_data>

<cond\_data> The contents of the Questionable Condition Register expressed as an integer value in the range 0 to 8467 decimal.

### Description:

This query returns the current contents of the Questionable Condition Register. The decimal value that is returned is the summation of the decimal value (bit weight) of the individual bits that have been set.

The bits in the Questionable Condition Register have the following meaning:

| BIT NUMBER | <cond_data> DECIMAL | VALID CONDITIONS:                                             |
|------------|---------------------|---------------------------------------------------------------|
| 0          | 1                   | Output channel 1 OverVoltage Protection active.               |
| 1          | 2                   | Output channel 1 OverCurrent Protection active.               |
| 4          | 16                  | Output channel 1 has an open Sense, or is in overtemperature. |
| 8          | 256                 | Calibration value of Output channel 1 is invalid or lost.     |
| 13         | 8192                | INSTrument summary (related to the Output channels).          |
| other      |                     | ----- Not used. Zero is returned -----                        |

### Example:

Send → :STAT:QUES:COND?

Read ← 256

The returned value 256 equals 2 to the power 8 (bit 8 is set). This means that Output channel 1 has invalid calibration data or has lost its calibration data.

# :STATus:QUESTionable:ENABLE

**Action:** Sets the enable mask, allowing events that are true in the Questionable Event Register to be reported by the Questionable summary bit in the Status Byte Register.

**Command:** :STATus:QUESTionable:ENABLE <enable\_mask>

<enable\_mask> Integer value in the range 0 to 65535 decimal.  
The binary representation of the value is placed in the Enable Register and used as the enable mask. Each bit that is set to 1 in the enable mask will enable the corresponding bit in the Questionable Event Register to be included in the Questionable summary bit. Default = 0.  
Values can be given in: 

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:QUESTionable:ENABLE?

**Response:** <enable\_mask>

**Description:**  
The enable mask allows the actual true conditions in the Questionable Event Register to be reported in the Questionable summary bit, i.e. bit 5 in the Status Byte Register.

| BIT NUMBER | <enable_mask><br>DECIMAL | ENABLES THE FOLLOWING EVENTS:                                                                                                                        |
|------------|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0          | 1                        | Output channel 1 OverVoltage Protection becomes active or is deactivated.                                                                            |
| 1          | 2                        | Output channel 1 OverCurrent Protection becomes active or is deactivated.                                                                            |
| 4          | 16                       | The Sense input of Output channel 1 becomes open, or is closed, or there is an over-temperature in Output Channel 1, or this situation is recovered. |
| 8          | 256                      | Calibration value of Output channel 1 is invalid or becomes valid again.                                                                             |
| 13         | 8192                     | INSTrument summary bit is set or reset                                                                                                               |
| other      |                          | ----- Don't care -----                                                                                                                               |

**Example:**

Send → :STAT:QUES:ENAB 256

This example will enable Constant Current mode event of Output channel 1 to be reported by the Questionable summary bit (bit 3) in the Status Byte Register.

# :STATus:QUESTionable[:EVENT]?

**Action:** Reports the contents of the Questionable Event Register.

**Query:** :STATus:QUESTionable[:EVENT]?

**Response:** <event\_data>

<event\_data> The contents of the Questionable Event Register expressed as an integer value in the effective range 0 to 8467 decimal (allowed = 0 to 65535).

## Description:

This query returns the current contents of the Questionable Event Register. The decimal value that is returned is the summation of the decimal value (bit weight) of the individual bits that have been set. The Questionable Event Register is cleared when it is read. The keyword EVENT is an optional command part. The event bits have the following meaning:

| BIT NUMBER | <event_data> DECIMAL | OUTPUT CHANNEL 1 REPORTS A CHANGE IN ONE OF THE FOLLOWING CONDITIONS: |
|------------|----------------------|-----------------------------------------------------------------------|
| 0          | 1                    | OverVoltage Protection active.                                        |
| 1          | 2                    | OverCurrent Protection active.                                        |
| 4          | 16                   | Open Sense or over-temperature.                                       |
| 8          | 256                  | Calibration value invalid or lost.                                    |
| 13         | 8192                 | INSTrument summary bit set.                                           |
| other      |                      | ----- Not used. Zero is returned -----                                |

## Example:

Send → :STAT:QUES?  
Read ← 256

The returned value 256 equals 2 to the power 8, which means that bit 8 is set. This indicates that Output Channel 1 has invalid calibration data or that data was lost.

## :STATus:QUESTionable:INSTrument:CONDition?

**Action:** Reports the contents of the Questionable Instrument Condition Register.

**Query:** :STATus:QUESTionable:INSTrument:CONDition?

**Response:** <cond\_data>

<cond\_data> The contents of the Questionable Instrument Condition Register expressed as an integer value in the effective range 0 to 14 decimal (allowed = 0 to 65535)

### Description:

This query returns the contents of the Questionable Instrument Condition Register.

| BIT NUMBER | <cond_data> DECIMAL | VALID CONDITIONS                       |
|------------|---------------------|----------------------------------------|
| 1          | 2                   | Summary of Output channel 1.           |
| 2          | 4                   | Summary of Output channel 2.           |
| 3          | 8                   | Summary of Output channel 3.           |
| other      |                     | ----- Not used. Zero is returned ----- |

### Example:

Send → :STAT:QUES:INST:COND?

Read ← 12

The returned value 12 equals 4 + 8 (bit 2 and 3 set). This means that the summary bits of the Output Channels 2 and 3 have been set.

# :STATus:QUESTionable:INSTrument:ENABLE

**Action:** Sets the enable mask, which allows events in the Questionable Instrument Event Register to be reported in the Instrument summary bit.

**Command:** :STATus:QUESTionable:INSTrument:ENABLE <enable\_mask>

<enable\_mask> Decimal number in the effective range 0 to 14 (allowed = 0 to 65535); default = 32767

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:QUESTionable:INSTrument:ENABLE?

**Response:** <enable\_mask>

**Description:**

This command sets the enable mask, which allows true conditions in the Questionable Instrument Event Register to be reported in the Instrument summary bit, i.e., bit 13 in the Questionable Status Register.

| BIT<br>NUMBER | <enable_mask><br>DECIMAL | ENABLES THE FOLLOWING EVENTS:        |
|---------------|--------------------------|--------------------------------------|
| 1             | 2                        | Summary of Output channel 1 changed. |
| 2             | 4                        | Summary of Output channel 2 changed. |
| 3             | 8                        | Summary of Output channel 3 changed. |
| other         |                          | ----- Don't care -----               |

**Example:**

Send → STAT:QUES:INST:ENAB 12

This enables a change of the summary bit of the Output channels 2 and 3 to be reported in the Instrument Summary bit (bit 13).

## :STATus:QUESTIONable:INSTrument[:EVENT]?

**Action:** Reports the contents of the Questionable Instrument Event Register.

**Query:** :STATus:QUESTIONable:INSTrument[:EVENT]?

**Response:** <event\_data>

<event\_data> The contents of the Questionable Instrument Event Register expressed as an integer value in the range 0 to 14 decimal.

### Description:

This query returns the contents of the Questionable Instrument Event Register. The contents indicate which Output channel reported a Questionable event.

The event register is cleared when it has been read.

| BIT<br>NUMBER | <event_data><br>DECIMAL | A CHANGE OCCURRED IN ONE OF THE<br>FOLLOWING CONDITIONS: |
|---------------|-------------------------|----------------------------------------------------------|
| 1             | 2                       | Summary of Output channel 1 Questionable events.         |
| 2             | 4                       | Summary of Output channel 2 Questionable events.         |
| 3             | 8                       | Summary of Output channel 3 Questionable events.         |
| other         |                         | ----- Not used. Zero is returned -----                   |

### Example:

Send → :STAT:QUES:INST?

Read ← 8

The returned value 8 indicates that bit 3 is set. This means that Output channel 3 reported some Questionable event.

# :STATus:QUESTionable:INSTrument:ISUMmary:CONDition?

- Action:** Reports the contents of an Output channel's Summary Condition Register.
- Query:** :STATus:QUESTionable:INSTrument:ISUMmary<suffix>:CONDition?
- Response:** <cond\_data>
- <suffix> Output channel number 1, 2, or 3.
- <cond\_data> The contents of the Instrument Summary Condition Register expressed as an integer value in the range 0 to 275 decimal.

**Description:**  
This query returns the contents of the Summary Condition Register of the specified output channel.

| BIT NUMBER | <cond_data> DECIMAL | THE OUTPUT CHANNEL, SPECIFIED BY <suffix>, REPORTS THE FOLLOWING CONDITIONS: |
|------------|---------------------|------------------------------------------------------------------------------|
| 0          | 1                   | OVP - OverVoltage Protection active.                                         |
| 1          | 2                   | OCP - OverCurrent Protection active.                                         |
| 4          | 16                  | FAIL- Open sense or over-temperature.                                        |
| 8          | 256                 | CAL - Calibration invalid or lost.                                           |
| other      |                     | ----- Not used. Zero is returned -----                                       |

**Example:**  
Send → :STAT:QUES:INST:ISUM1:COND?

This asks the contents of the Questionable Instrument Summary Condition Register of Output channel 1.

Read ← 256

The value 256 equals 2 to the power 8, i.e. bit 8 is true, indicating that the Output channel 1 has invalid Calibration data.

**:STATus:QUESTIONable:INSTrument:ISUMmary:ENABLE**

**Action:** Sets the enable mask, which allows events in the Questionable Instrument Summary Event Register to be reported in the Questionable Instrument Register.

**Command:** :STATus:QUESTIONable:INSTrument:ISUMmary<suffix>  
:ENABLE <enable\_mask>

<suffix> Output channel number 1, 2, or 3.

<enable\_mask> Decimal number in the effective range 0 to 275 (allowed = 0 to 65535); default = 0  
Values can be given in: • decimal <value>  
• hexadec. #h<value>  
• octal #q<value>  
• binary #b<value>

**Query:** :STATus:QUESTIONable:INSTrument:ISUMmary<suffix>:ENABLE?

**Response:** <enable\_mask>

**Description:**

This command sets the enable mask, which allows true conditions in the Questionable Instrument Summary Event Registers to be reported in the Questionable Instrument Register bit 1 (when <suffix> =1), bit 2 (when <suffix> =2) or bit 3 (when <suffix> =3).

| BIT NUMBER | <enable_mask> DECIMAL | THE FOLLOWING EVENTS, REPORTED BY THE OUTPUT CHANNEL, SPECIFIED BY <suffix>, ARE ENABLED: |
|------------|-----------------------|-------------------------------------------------------------------------------------------|
| 0          | 1                     | OVP - OverVoltage Protection becomes active or is deactivated.                            |
| 1          | 2                     | OCP - OverCurrent Protection becomes active or is deactivated.                            |
| 4          | 16                    | FAIL- Open sense appears or is removed. Overtemperature arises or ceases to exist.        |
| 8          | 256                   | CAL - Calibration value becomes invalid or becomes valid again.                           |
| other      |                       | ----- Don't care -----                                                                    |

**Example:**

Send → :STAT:QUES:INST:ISUM2:ENAB 256

This enables the event of Calibration data becoming valid or invalid in Output Channel 2 to be reported in the Questionable Instrument Register bit 2.

**:STATus:QUESTIONable:INSTRument:ISUMmary[:EVENT]?**

- Action:** Reports the contents of an Output channel's Summary Event Register.
- Query:** :STATus:QUESTIONable:INSTRument:ISUMmary<suffix>[:EVENT]?
- Response:** <event\_data>
- <suffix> Specifies the Output channel number 1, 2, or 3.
- <event\_data> The contents of the Instrument Summary Event Register expressed as an integer value in the range 0 to 275 decimal.

**Description:**

This query returns the contents of the Summary Event Register of the specified output channel.  
The event register is cleared when it has been read.

| BIT NUMBER | <event_data> DECIMAL | THE OUTPUT CHANNEL, SPECIFIED BY <suffix>, REPORTS A CHANGE IN ONE OF THE FOLLOWING CONDITIONS: |
|------------|----------------------|-------------------------------------------------------------------------------------------------|
| 0          | 1                    | OVP - OverVoltage Protection active.                                                            |
| 1          | 2                    | OCP - OverCurrent Protection active.                                                            |
| 4          | 16                   | FAIL - Open sense or overtemperature.                                                           |
| 8          | 256                  | CAL - Calibration invalid.                                                                      |
| other      |                      | ----- Not used. Zero is returned -----                                                          |

**Example:**

Send → :STAT:QUES:INST:ISUM1?

This asks the contents of the Summary Event Register of Output channel 1.

Read ← 256

The returned decimal value 256 indicates that the Calibration data of Output Channel 1 have been lost or became invalid, or the Calibration data becomes valid again after being lost or invalid.

# :STATus:QUESTionable:INSTrument:ISUMmary:NTRansition

**Action:** Sets the Questionable Instrument Negative Transition Filter.

**Command:** :STATus:QUESTionable:INSTrument:ISUMmary<suffix>  
:NTRansition <filter\_setting>

<suffix> Specifies the Output channel number 1, 2, or 3.

<filter\_setting> Whole decimal number in the effective range 0 to 275 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:QUESTionable:INSTrument:ISUMmary<suffix>:NTRansition?

**Response:** <filter\_setting>

## Description:

This Negative Transition Filter specifies which bits in the Questionable Instrument Condition Register, that make a negative (1 → 0) transition, will set the corresponding bit in the Questionable Instrument Event Register. For example, when you set bit 4 in this filter, it will set bit 4 in the Questionable Instrument Event Register at the time bit 4 in the Questionable Instrument Condition Register is reset (changed from 1 to 0).

| BIT NUMBER | <filter_setting> DECIMAL | THE FOLLOWING EVENTS, WHICH OCCURRED IN THE OUTPUT CHANNEL SPECIFIED BY <suffix>, ARE PASSED ON TO ITS OPERATION INSTRUMENT SUMMARY EVENT REGISTER: |
|------------|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 0          | 1                        | OVP - OverVoltage Protection is deactivated.                                                                                                        |
| 1          | 2                        | OCP - OverCurrent Protection is deactivated.                                                                                                        |
| 4          | 16                       | FAIL- Open sense is removed or overtemperature ceases to exist.                                                                                     |
| 8          | 256                      | CAL - Calibration data becomes valid again.                                                                                                         |
| other      |                          | ----- Don't care -----                                                                                                                              |

**Example:**

Send → :STAT:QUES:INST:ISUM2:NTR 256

This will set bit 8 in the Questionable Instrument Summary Negative Transition Filter associated with Output Channel 2. Now when the calibration data of Output Channel 2 become valid again (after being lost or becoming invalid), this event will be propagated to the Questionable Instrument Summary 2 Event Register.

# :STATus:QUESTionable:INSTrument:ISUMmary:PTRansition

**Action:** Sets the Questionable Instrument Positive Transition Filter.

**Command:** :STATus:QUESTionable:INSTrument:ISUMmary<suffix>  
:PTRansition <filter\_setting>

<suffix> Specifies the Output channel number 1, 2 or 3.

<filter\_setting> Whole decimal number in the range 0 to 275;  
default = 32767

**Query:** :STATus:QUESTionable:INSTrument:ISUMmary<suffix>:PTRansition?

**Response:** <filter\_setting>

**Description:**

This Positive Transition Filter specifies which bits in the Questionable Instrument Condition Register, that make a positive (0 → 1) transition, will set the corresponding bit in the Questionable Instrument Event Register. For example, when you set bit 4 in this filter, it will set bit 4 in the Questionable Instrument Event Register at the time bit 4 in the Questionable Instrument Condition Register is set, i.e. changed from 0 to 1.

| BIT<br>NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS, WHICH OCCURRED IN<br>THE OUTPUT CHANNEL SPECIFIED BY <suffix>,<br>ARE PASSED ON TO ITS OPERATION INSTRUMENT<br>SUMMARY EVENT REGISTER: |
|---------------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0             | 1                           | OVP - OverVoltage Protection becomes active.                                                                                                                 |
| 1             | 2                           | OCP - OverCurrent Protection becomes active.                                                                                                                 |
| 4             | 16                          | FAIL- Open sense or overtemperature occurs.                                                                                                                  |
| 8             | 256                         | CAL - Calibration data becomes invalid.                                                                                                                      |
| other         |                             | ----- Don't care -----                                                                                                                                       |

**Example:**

Send → :STAT:QUES:INST:ISUM2:PTR 256

This will set bit 8 in the Questionable Instrument Summary Positive Transition Filter associated with Output Channel 2. Now when the calibration data of Output Channel 2 becomes invalid, this event will be propagated to the Questionable Instrument Summary 2 Event Register.

# :STATus:QUEStionable:INSTRument:NTRansition

**Action:** Sets the Questionable Instrument Negative Transition Filter.

**Command:** :STATus:QUEStionable:INSTRument:NTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0, to 14 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:QUEStionable:INSTRument:NTRansition?

**Response:** <filter\_setting>

**Description:**

This Negative Transition Filter specifies which bits in the Questionable Instrument Condition Register, that make a negative (1 → 0) transition, will set the corresponding bit in the Questionable Instrument Event Register. For example, when you set bit 4 in this filter, it will set bit 4 in the Questionable Instrument Event Register at the time bit 4 in the Questionable Instrument Condition Register is reset (changed from 1 to 0).

| BIT NUMBER | <filter_setting><br>DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO THE QUESTIONABLE INSTRUMENT EVENT REGISTER: |
|------------|-----------------------------|-----------------------------------------------------------------------------------|
| 1          | 2                           | Summary of Output channel 1 changed from 1 to 0.                                  |
| 2          | 4                           | Summary of Output channel 2 changed from 1 to 0.                                  |
| 3          | 8                           | Summary of Output channel 3 changed from 1 to 0.                                  |
| other      |                             | ----- Don't care -----                                                            |

**Example:**

Send → :STAT:QUES:INST:NTR 4

This will set bit 2 in the Questionable Negative Transition Filter. Now when the summary bit of Output Channel 2 changes from 1 to 0, this event is propagated to the Questionable Instrument Event Register.

**:STATus:QUESTionable:INSTrument:PTRansition**

**Action:**            Sets the Questionable Instrument Positive Transition Filter.

**Command:**        :STATus:QUESTionable:INSTrument:PTRansition <filter setting>

                     <filter\_setting>    Whole decimal number in the effective range 0 to 14 (allowed = 0 to 65535); default = 32767  
                                             Values can be given in:   • decimal    <value>  
                                                                             • hexadec.   #h<value>  
                                                                             • octal       #q<value>  
                                                                             • binary     #b<value>

**Query:**            :STATus:QUESTionable:INSTrument:PTRansition?

**Response:**        <filter\_setting>

**Description:**

This Positive Transition Filter specifies which bits in the Questionable Instrument Condition Register, that make a positive (0 → 1) transition, will set the corresponding bit in the Questionable Instrument Event Register. For example, you set bit 4 in this filter, it will set bit 4 in the Questionable Instrument Event Register at the time bit 4 in the Questionable Instrument Condition Register is set (changed from 0 to 1).

| BIT NUMBER | <filter_setting> DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO THE QUESTIONABLE INSTRUMENT EVENT REGISTER: |
|------------|--------------------------|-----------------------------------------------------------------------------------|
| 1          | 2                        | Summary of Output channel 1 changed from 0 to 1.                                  |
| 2          | 4                        | Summary of Output channel 2 changed from 0 to 1.                                  |
| 3          | 8                        | Summary of Output channel 3 changed from 0 to 1.                                  |
| other      |                          | ----- Don't care -----                                                            |

**Example:**

Send →    :STAT:QUES:INST:PTR 4

This will set bit 2 in the Questionable Positive Transition Filter. Now when the summary bit of Output Channel 2 changes from 0 to 1, this event is propagated to the Questionable Instrument Event Register.

## :STATus:QUESTIONable:NTRansition

**Action:** Sets the Questionable Negative Transition Filter.

**Command:** :STATus:QUESTIONable:NTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0 to 8467 (allowed = 0 to 65535); default = 0

Values can be given in:

- decimal <value>
- hexadec. #h<value>
- octal #q<value>
- binary #b<value>

**Query:** :STATus:QUESTIONable:NTRansition?

**Response:** <filter\_setting>

### Description:

This Negative Transition Filter specifies which bits in the Questionable Condition Register, that make a negative (1 → 0) transition, will set the corresponding bit in the Questionable Event Register. For example, when you set bit 4 in this filter, it will set bit 4 in the Questionable Event Register at the time bit 4 in the Questionable Condition Register is reset, i.e., changed from 1 to 0.

| BIT NUMBER | <filter_setting> DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO THE QUESTIONABLE EVENT REGISTER:                                 |
|------------|--------------------------|--------------------------------------------------------------------------------------------------------|
| 0          | 1                        | Output channel 1 OverVoltage Protection is deactivated.                                                |
| 1          | 2                        | Output channel 1 OverCurrent Protection is deactivated.                                                |
| 4          | 16                       | Output channel 1 open sense is no longer present, or Output channel 1 is no longer in overtemperature. |
| 8          | 256                      | Calibration value of Output channel 1 is valid again.                                                  |
| 13         | 8192                     | INSTRument summary is reset.                                                                           |
| other      |                          | ----- Don't care -----                                                                                 |

### Example:

Send → :STAT:QUES:NTR 256

This will set bit 8 in the Questionable Negative Transition Filter. Now when the Calibration value of Output Channel 1 becomes valid again, this event is propagated to the Questionable Event Register.

**:STATus:QUESTionable:PTRansition**

**Action:** Sets the Questionable Positive Transition Filter.

**Command:** :STATus:QUESTionable:PTRansition <filter\_setting>

<filter\_setting> Whole decimal number in the effective range 0 to 8467 (allowed = 0 to 65535); default = 32767  
Values can be given in: • decimal <value>  
• hexadec. #h<value>  
• octal #q<value>  
• binary #b<value>

**Query:** :STATus:QUESTionable:PTRansition?

**Response:** <filter\_setting>

**Description:**

This Positive Transition Filter specifies which bits in the Questionable Condition Register, that make a positive (0 → 1) transition, will set the corresponding bit in the Questionable Event Register. For example, when you set bit 4 in this filter, it will set bit 4 in the Questionable Event Register at the time bit 4 in the Questionable Condition Register is set, i.e., changed from 0 to 1.

| BIT NUMBER | <filter_setting> DECIMAL | THE FOLLOWING EVENTS ARE PASSED ON TO THE QUESTIONABLE EVENT REGISTER:              |
|------------|--------------------------|-------------------------------------------------------------------------------------|
| 0          | 1                        | Output channel 1 OverVoltage Protection becomes active.                             |
| 1          | 2                        | Output channel 1 OverCurrent Protection becomes active.                             |
| 4          | 16                       | Output channel 1 open sense occurs, or Output channel 1 becomes in overtemperature. |
| 8          | 256                      | Calibration value of Output channel 1 becomes invalid.                              |
| 13         | 8192                     | INSTrument summary is set.                                                          |
| other      |                          | ----- Don't care -----                                                              |

**Example:**

Send → :STAT:QUES:PTR 256

This will set bit 8 in the Questionable Positive Transition Filter. Now when the Calibration value of Output Channel 1 becomes invalid, this event is propagated to the Questionable Event Register.

## :SYSTem:ERRor?

**Action:** Reports the next error message held in the instrument's error queue.

**Query:** :SYSTem:ERRor?

**Response:** <error\_number>,<error\_message>

<error\_number> This is an integer value in the range -32768 to 23767. The meaning of each error value that can be returned is described in Appendix F "Error Messages". If 0 (zero) is returned, there are no errors in the queue.

<error\_message> This is a character sequence that briefly describes the error. When there are no errors in the queue, the error message will be "No error".

### Description:

The error queue can hold errors that have occurred. These can be command or execution errors. The error queue is a "first-in first-out" queue; therefore, the error query returns the oldest error. Once an error is read, it is removed from the queue, and the next error message is made available. When all the error messages have been read from the error queue, the message [0, "No error"] will be returned.

The error queue will be cleared after power-up, after a device reset, and when a \*CLS command is received.

If there are more errors than the queue can hold, it will overflow. The oldest errors stay in the queue but the most recent error is discarded and the latest error written in its place. When this happens, the last position in the queue contains a "Queue overflow" message.

### Example:

Send → :SYST:ERR?

Read ← -222,"Data out of range"

# :SYSTem:KLOCK

**Action:** Locks or unlocks the keyboard.

**Command:** :SYSTem:KLOCK <boolean>

<boolean> =      0 (=OFF)    Keyboard unlocked.  
                  1 (=ON)     Keyboard locked.

The default setting after \*RST is 0 (OFF).

**Query:** :SYSTem:KLOCK?

**Response:** <boolean>

**Description:**

The power supply will enter the remote state of operation as soon as a command or query is send. In this remote state the front panel keys cannot be used for settings. Only the LCL key can be used to return to the local state, i.e. use the keys again.

With this command the control of the keyboard can be enabled (unlocked) or disabled (locked) from being used locally. The state in which the keyboard cannot be used, is called the 'local lockout' state. This state can be entered by sending the LLO-code (decimal 17) to the power supply. When the LCL key on the front panel is pressed in the 'local lockout' state, the power supply will remain in the remote mode of operation.

Pressing any key while the keyboard has been locked will cause the display to show the message KEYLOCK ON for a short time.

*Note: The keyboard can be unlocked again by pressing the ENTER key for at least 5 seconds.*

**Example:**

Send → :SYST:KLOC ON            only remote control possible, i.e., the keyboard has been locked

.

Send → :SYST:KLOC OFF          local control can be obtained, i.e., the keyboard has been unlocked

Press the LCL key to go into the local state of operation.

## :SYSTem:POCLear

**Action:** Defines the 'Power On CLear" behavior of the power supply.

**Command:** :SYSTem:POCLear <boolean>

<boolean> 1 (=ON) Sets the power supply in the STANDBY mode.

0 (=OFF) Sets the power supply in the mode that it was in at the moment of 'power off', i.e., the STANDBY or the OPERATE mode.

**Query:** :SYSTem:POCLear?

**Response:** <boolean>

### Description:

This command is very useful to define the operating mode of your power supply in the case of power loss. So when your power supply recovers after a period of no power, it will continue in the STANDBY mode or in the mode that it was in just before the power off happened.

After the \*RST command, the mode becomes STANDBY.

### Example:

|                             |                                             |
|-----------------------------|---------------------------------------------|
| Send → *RST                 | Mode becomes STANDBY.                       |
| Send → :INST:STAT?          |                                             |
| Read ← 1                    | Operating mode = STANDBY.                   |
| Send → :INST:STAT ON        | Power supply enters the OPERATE mode.       |
| Send → :SYST:POCL OFF       | 'power on clear' mode becomes OPERATE mode. |
| Switch off the power supply |                                             |
| Switch on the power supply  | Operating mode becomes OPERATE.             |

## :SYSTem:SET

**Action:** Sets the instrument functions, using the block\_data, which was previously retrieved by the :SYSTem:SET? query.

**Command:** :SYSTem:SET <block\_data>

<block\_data> = <arbitrary\_block\_program\_data>

This equals the following:

#<number><length><8-bit databytes>

where,

<number> = The number of digits in <length>.

<length> = The number of 8-bit databytes in  
<8-bit databytes>.

<8-bit databytes> = A sequence of 8-bit bytes in the range 00 to FF (or 0 to 255 decimal). Be aware that these bytes can be unprintable characters.

**Query:** :SYSTem:SET?

**Response:** <block\_data>

### Description:

This command quickly sets all programmable functions, using the definite-length <arbitrary block response data>, previously retrieved with the :SYSTem:SET? query. It is the functional equivalent of the common command \*RCL, except that the data is not saved in the memory of the power supply, but in the memory of the GPIB controller.

### Example:

Send → :SYST:SET?

Read ← <settings>

.

Send → :SYST:SET <settings>

## :SYSTem:UNPRotect:PWORd

**Action:** Defines a new password to the optional handle.

**Command:** :SYSTem:UNPRotect:PWORd <password> [, <handle>]

|            |                                                                              |
|------------|------------------------------------------------------------------------------|
| <password> | 4-Digit admission code;<br>Default = number in type-number, e.g., 2811.      |
| <handle>   | Option handle to be selected;<br>CAL(ibration) is the only available option. |

### Description:

Before a new password is accepted, the following must be unprotected:

- Send → :SYST:UNPR ON Enables to unprotect calibration.
- Send → :SYST:UNPR:SEL <pw> Unprotects the calibration by sending the password <pw>.

If the password was not correct, error code -221 (Settings conflict) will be generated. This error can be read using the :SYST:ERR? query.

### Example:

For a PM2811 power supply with the default calibration password.

Send → :SYST:UNPR ON Enables to unprotect calibration.

Send → :SYST:UNPR:SEL 2812 Unprotects the calibration of the power supply by sending the password as calibration access code; default = 2812.

Send → :SYST:ERR?

Read ← <error>

IF <error> = -221 THEN print "password not correct" STOP

Send → :SYST:UNPR:PWOR 1234

The calibration password has been changed from 2811 to 1234.

**Note:** Please write down your (new) calibration code. If you forgot your calibration code, refer to chapter 2 "MAINTENANCE".

## **:SYSTem:UNPRotect:SElect**

**Action:**      Selects a handle to become unprotected.

**Command:**    :SYSTem:UNPRotect:SElect <password>[,<handle>]

                 <password>      4-Digit admission code;  
                                      Default = number in type-number, e.g., 2811 for  
                                      the PM2811 power supply.

                 <handle>        Option handle to be selected;  
                                      CAL(ibration) is the only available handle option.

**Query:**        :SYSTem:UNPRotect:SElect?

**Response:**    <handle>

### **Description:**

With this command a handle can be selected, which is to be excluded from protection, i.e., becomes unprotected. After the command :SYST:UNPRotect[:STATe] ON, the selected handle becomes unprotected. After the command :SYSTem:UNPRotect[:STATe] OFF, all handles become protected again.

### **Example:**

For a PM2811 power supply with the default calibration password.

Send → :SYST:UNPR ON                      Enables to unprotect calibration.

Send → :SYST:UNPR:SEL 2811              Unprotects the calibration of the  
                 power supply by sending the  
                 password as calibration access code;  
                 default = 2811.

Send → :SYST:ERR?

Read ← <error>

IF <error> = -221 THEN print "password not correct" STOP

Perform calibration for a selected output channel.

## **:SYSTem:UNPRotect[:STATe]**

**Action:** Enables (protects) or disables (unprotects) the selection of handles.

**Command:** :SYSTem:UNPRotect[:STATe] <boolean>

<boolean>            1 (=ON)    Unprotects the selection of handles.  
                         0 (=OFF)   Protects the selection of handles.

**Query:** :SYSTem:UNPRotect[:STATe]?

**Response:** <boolean>

### **Description:**

Before a password can be changed or a handle can be selected, they have to be unprotected. After changing of the password and/or calibration of an output channel, the selection of handles must be protected again.

### **Example:**

For a PM2811 power supply with the default calibration password.

Send → :SYST:UNPR ON            Enables to unprotect calibration.

Send → :SYST:UNPR:SEL 2811    Unprotects the calibration of the power supply by sending the password as calibration access code; default = 2811.

Perform the calibration of the PM2811 output channel

Send → :OUTP:STAT OFF           Disables the selected output channel.

Send → :SYST:UNPR OFF           Disables the unprotection of the calibration, i.e., the next calibration is protected again.

## **:SYSTem:VERSion**

**Action:** Selects the version of the SCPI command set that your programmable power supply complies to.

**Command:** :SYSTem:VERSion <float>

<float> = Floating point value.

**Query:** :SYSTem:VERSion?

**Response:** <float>

### **Description:**

This command selects the version of the SCPI command set, according to which version the power supply will respond. The floating-point value will be rounded to xxx.y, e.g., 1990.0.

### **Example:**

Send → :SYST:VERS 1990.0      Selects the 1990.0 SCPI version for the PM2811-12-13 family.

## :TEST:INSTrument?

**Action:** Performs the self test of the selected output channel and reports the test result.

**Query:** :TEST:INSTrument?

**Response:** <test\_result>

<test\_result> 0 | <integer>

0 No error has occurred during the self test.

<integer> Error code, which indicates the first error that occurred during the self test of the selected output channel.

### Description:

For possible error-codes, refer to Appendix F "Error Messages".

### Example:

Send → :TEST:INST?

Read ← <result>

Send → :INST:NSEL?

Requests the selected channel number.

Read ← <chan>

IF <result> # 0 THEN

Print "error during channel "; <chan>; " test: ", <result>

## :TEST:SYSTem?

**Action:** Reports the test results of the power-on self tests.

**Query:** :TEST:SYSTem?

**Response:** <test\_result>

<test\_result> 0 | <integer>

0 No error has occurred during the self tests.

<integer> Errorcode, which indicates the first error that occurred during the self tests of the power supply.

### Description:

This query is equivalent to the \*TST? query. For possible error codes, refer to Appendix F "Error Messages".

### Example:

Send → :TEST:SYST?

Read ← <result>

IF <result> # 0 THEN print "error during self tests: ", <result>



## 2 MAINTENANCE INSTRUCTIONS

### 2.1 Introduction

This section describes how to maintain your programmable power supply. A distinction has been made between preventive maintenance and corrective maintenance.

Preventive maintenance applies to those measures that prevent your instrument from becoming less accurate. It is recommended that you repeat section 2.2.1 "Performance verification checking" once a year for each of the output channels of your programmable power supply.

Corrective maintenance applies to those measures that correct your instrument after errors or inaccuracies have occurred. The following corrective measures are described:

- Troubleshooting; refer to section 2.3.1 for:
  - handling an overcurrent situation
  - handling an overvoltage situation
  - dealing with an unknown (forgotten) calibration code
  - handling an unregulated output channel situation
  - handling a fail situation
  - dealing with an error during testing
- Replacing the fuses; refer to section 2.3.2.1.
- Calibration of your instrument; refer to section 2.3.3.

## 2.2 Preventive maintenance

### 2.2.1 Performance verification checking

This section describes how you can verify the performance of your power supply, i.e., check its performance against the performance specifications in Appendix A "Technical Specifications". Performance verification checking is done manually, using the keys and a connected multimeter. Before any check can be done, the power supply must warm up for 30 minutes.

Notes:

- *All limits and tolerances in this section are calibration guidelines. They should not be interpreted as instrument specifications.*
- *The mentioned tolerances are the tolerances for the power supply and do not include errors of the test equipment.*

As test equipment a meter for measuring voltage and current must be connected to the output channel under verification. The measured voltage and current will be used as reference values.

The complete PERFORMANCE VERIFICATION PROCEDURE is given in Appendix B.

If during performance verification checking some voltage or current inaccuracies were found, your power supply must be calibrated again. Refer to section 2.3.3 "Calibration" for full information.

## 2.3 Corrective maintenance

### 2.3.1 Troubleshooting

#### 2.3.1.1 Overcurrent situation

A selected output channel of your power supply can be in overcurrent for one of the following reasons:

- The programmed (maximum) current level is lower than the actual load current and the OverCurrent Protection (OCP) circuitry has been enabled.

Solution:

Check whether the actual current is in the expected range with respect to the load conditions. Also check the connections between load and output channel. If allowed, program the overcurrent level higher than the current through the load or check to make sure that the programmed output voltage is not too high. Reset the OCP circuitry of the selected output channel by pressing the RESET key.

- Another output channel is in overcurrent, and protection coupling has been enabled.

Solution:

Remove the cause of the OCP in the coupled output channel, and reset the coupled output channel by pressing the RESET key. If allowed, remove the coupling of the OCP mechanisms of the output channel(s) involved.

#### 2.3.1.2 Overvoltage situation

A selected output channel of your power supply can be in overvoltage for one of the following reasons:

- The programmed overvoltage level is lower than the programmed voltage level.

Solution:

Check whether the actual current is in the expected range with respect to the load conditions. Also check the connections between load and output channel. If allowed, program the overvoltage level higher than the voltage level. Reset the Over Voltage Protection (OVP) circuitry of the selected output channel by pressing the RESET key.

- Another output channel is in overvoltage, and protection coupling has been enabled.

Solution:

Remove the cause of the OVP in the coupled output channel and reset the coupled output channel by pressing the RESET key. If allowed, remove the coupling of the OVP mechanisms of the output channel(s) involved.

### 2.3.1.3 *Unknown calibration code*

If you forgot your calibration access code, you must take the following steps to restore the default code:

STEP 1) Turn the power off, and remove all connections at the rear.

STEP 2) Remove the cover from the power supply by removing the following screws:

- the 2 screws on the left near the front (only for multiple output units)
- the 2 screws on the right near the front (only for multiple output units)
- the screw in the left and right stand-up feet at the rear
- the screw at the bottom (near the rear)

Slide the cover backwards off the power supply.

**WARNING:** Removing the instrument cover is likely to expose live parts and accessible terminals, which can be dangerous to life. Capacitors inside the instrument can hold their charge, even if the supply has been separated from all voltage sources.

**CAUTION:** Do not touch any components on the printed circuit board inside the power supply. This is to prevent electrostatic discharge which may damage electrical components.

STEP 3) Restore the default calibration code as follows:

First turn the instrument over. On the CPU board on the underside of the instrument, find the white pushbutton next to the microprocessor (the square chip). Press this button for about 5 seconds while turning on the line power. Now the default calibration access code will be restored. The default code is the number (four figures) of your type number, e.g., 2811. Turn off the power again.

STEP 4) Move the power supply back into its cover. Put the screws back into their places.

#### *2.3.1.4 Unregulated output situation*

The power supply informs you when output regulation is not guaranteed. This can occur when operating with output channels in parallel at relatively low output currents.

##### Solution:

Switch over to one output channel or program a higher output current.

#### *2.3.1.5 Fail situation*

The cause for a fail indication in the status can be OVERTEMPERATURE or OPEN SENSE.

In the case of OPEN SENSE, refer to section 2.3.1.4.

In the case of OVERTEMPERATURE, turn the power off and wait until the power supply has reached a safe operating temperature, i.e., the release temperature. The overtemperature protection is at  $90^{\circ}\text{C} \pm 5^{\circ}\text{C}$ . The release temperature is at  $60^{\circ}\text{C} \pm 5^{\circ}\text{C}$ .

#### *2.3.1.6 Error during testing*

If one of the self tests fails, try it again by switching the power off and on again. If one of the self tests fails again, write down the specific error message and contact your local FLUKE/PHILIPS Service or Sales Center. A list of these centers is printed at the back of this manual.

If a performance check fails for an output channel, perform the calibration of that output channel. Refer to section 2.3.3."Calibration".

If a GPIB interface check fails, check that the following interface parts are working correctly:

- GPIB interface card in the controller
- GPIB interface cable
- GPIB software drivers in combination with the programming environment

If no errors can be found, contact your local FLUKE/PHILIPS Service or Sales Center. A list of these centers is printed at the back of this manual.

## 2.3.2 Replacements

### 2.3.2.1 Replacing the fuses

**WARNING:** When a fuse must be replaced, the instrument must be switched off and disconnected from the line power.



The power input module is located at the rear of the power supply. This module contains the input socket, the power filter (left side), the fuse (in the middle) and the power switch (right side). The fuse can be pulled out and pushed aside. In this way the two fuses will become visible. Replace those fuses by the 2 spare ones, which are supplied at delivery. Finally restore the situation as it was before the replacement.

## 2.3.3 Calibration

This section describes how to calibrate your programmable power supply. It is recommended that you calibrate each of the output channels once a year. There are two ways to perform the calibration:

- 1) Locally using the front panel keys
- 2) Remotely by sending commands and queries via a GPIB controller

Those two ways cannot be combined. When calibration is done via the front panel keys, the first command via the GPIB automatically terminates the calibration session. When calibration is done via a GPIB controller, it terminates automatically as soon as the LCL key is pressed.

Before the actual calibration mode can be entered, the CAL access code must be entered. If the correct code is entered, the calibration mode will be active. If the CAL access code has been forgotten, refer to section 2.3.1.3 "Unknown calibration code".

Calibration is done for one output channel at a time. New calibration data is made active when the calibration session is terminated correctly. To perform a complete calibration of your power supply, you need a multimeter (with sufficient accuracy and resolution) connected to the output channel.

*Note:* Because the voltage and current to be measured with the DMM will be used as the reference for the calibration voltage and current, the DMM itself must have been calibrated accurately.

### 2.3.3.1 *Calibration Procedure*

You can calibrate the power supply, by means of the front panel keys (local control) or via the GPIB (remote control). The complete Calibration Procedure is given in Appendix C. In this procedure, the local as well as the remote sequence is given. The local sequence deals with the keys that you must press, the remote sequence gives the equivalent remote commands. The list of remote commands does not form a complete GPIB program but should be considered as a help for writing a complete program. For further details, refer to Appendix C.



# APPENDIX A TECHNICAL SPECIFICATIONS

## A.1 CHARACTERISTICS OF THE POWER SUPPLIES

### A.1.1 Performance characteristics

#### A.1.1.1 Instrument performance

|                                                                                                                                                                                                                                     |                                                               |                                                           |                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|-----------------------------------------------------------|-------------------------------------------------------|
| <b>environmental aspects:</b> meets requirements of MIL-T 28800D<br>(type III, class 5, style E)                                                                                                                                    |                                                               |                                                           |                                                       |
| <b>temperature in °C</b>                                                                                                                                                                                                            |                                                               | <b>relative humidity in %</b>                             |                                                       |
| non-operating <sup>1)</sup><br>-40 ... 71 <sup>3)</sup>                                                                                                                                                                             | operating <sup>2)</sup><br>0 ... 30<br>31 ... 40<br>41 ... 50 | non-operating <sup>1)</sup><br>95 ± 5<br>95 ± 5<br>95 ± 5 | operating <sup>2)</sup><br>95 ± 5<br>75 ± 5<br>45 ± 5 |
| 1) Non-operating limits relate to absorbtion and corrosion effects.<br>2) Operating limits relate to actual operating conditions.<br>3) For the LCD the range is from -20 ... 71.                                                   |                                                               |                                                           |                                                       |
| <b>altitude</b><br>non-operating : 4500 m (15000 ft)<br>operating : 3050 m (10000 ft)                                                                                                                                               |                                                               |                                                           |                                                       |
| <b>vibration, sinusoidal</b><br>frequency 5 ... 55 Hz<br>resonance search 15 minutes per axis<br>cycling 15 minutes per axis<br>resonance dwell 10 minutes per axis<br>gravity level at max. frequency 2g m/s <sup>2</sup> at 55 Hz |                                                               |                                                           |                                                       |
| <b>shock, functional</b><br>peak accelleration 20g m/s <sup>2</sup><br>amount of shocks 18, 3 in each direction (x, y and z)<br>shock wave form half sine wave<br>duration 11 ms                                                    |                                                               |                                                           |                                                       |
| <b>bounce, loose cargo</b><br><b>bench handling</b><br><b>shock, high impact</b>                                                                                                                                                    |                                                               |                                                           |                                                       |
| } conform MIL-T 28800D                                                                                                                                                                                                              |                                                               |                                                           |                                                       |

|                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>reference temperature</b> : $23 \pm 2^{\circ}\text{C}$<br>(for performance test + calibration)                                                                   |
| <b>overtemperature</b> (of the power modules)<br>protection : $90^{\circ}\text{C} \pm 5^{\circ}\text{C}$<br>release at : $60^{\circ}\text{C} \pm 5^{\circ}\text{C}$ |
| <b>isolation</b> : output terminals may not be more than 240V<br>from ground (output voltage included)                                                              |
| <b>display update rate</b> (measured results)<br>normal mode : 4x / sec.                                                                                            |
| <b>load cross regulation</b> : neglectable for voltage and current                                                                                                  |

### A.1.1.2 Output channel 30V/10A/60W performance

|                                                                  |                                                                            |
|------------------------------------------------------------------|----------------------------------------------------------------------------|
| <b>output ranges</b> (after 30 minutes warm-up)                  |                                                                            |
| voltage                                                          | : 0 ... 30 V                                                               |
| current                                                          | : 0 ... 10 A                                                               |
| overvoltage                                                      | : 2 ... 32 V                                                               |
| power                                                            | : max. 60 W                                                                |
| <b>output accuracy</b> (at calibration temperature)              |                                                                            |
| voltage                                                          | : $\pm (0.04 \% + 10 \text{ mV})$                                          |
| current                                                          | : $\pm (0.1 \% + 50 \text{ mA})$                                           |
| overvoltage                                                      | : $\pm (0.5 \% + 150 \text{ mV})$                                          |
| <b>output temperature coefficient</b> (after 30 min. warm-up)    |                                                                            |
| voltage                                                          | : $(0.016 \% + 2 \text{ mV}) / ^\circ\text{K}$                             |
| current                                                          | : $(0.05 \% + 2 \text{ mA}) / ^\circ\text{K}$                              |
| <b>long term drift</b> (after 30 min. warm-up + 8 hours)         |                                                                            |
| output voltage:                                                  | 0.04 % + 5 mV                                                              |
| output current:                                                  | 0.05 % + 10 mA                                                             |
| <b>programming resolutions</b>                                   |                                                                            |
| voltage                                                          | : 12 bits = 7.5 mV/lb                                                      |
| current                                                          | : 8 bits = 40 mA/lb                                                        |
| overvoltage                                                      | : 8 bits = 120 mV/lb                                                       |
| <b>source effect</b> (for any line voltage change within rating) |                                                                            |
| voltage                                                          | : $\pm (0.01 \% + 2 \text{ mV})$                                           |
| current                                                          | : $\pm (0.02 \% + 2 \text{ mA})$                                           |
| <b>load effect</b> (for a load change equal to nominal rating)   |                                                                            |
| constant voltage                                                 | : $\pm (0.01\% + 5 \text{ mV})$<br>(nominal current rating at set voltage) |
| constant current                                                 | : $\pm (0.02\% + 5 \text{ mA})$<br>(nominal voltage rating at set current) |

**output noise (PARD) :**

constant voltage : 3 mV rms  
30 mV pp (DC .. 30 MHz)  
constant current : 10 mA rms  
switching frequency :  $\pm 20$  KHz

**readback accuracies :**

voltage accuracy :  $\pm (0.05 \% + 25)$  mV  
current accuracy :  $\pm (0.1 \% + 30)$  mA  
voltage measuring resolution : 12 bits .  
current measuring resolution : 12 bits  
voltage resolution to interface : 7.5 mV  
current resolution to interface : 2.5 mA  
voltage resolution to display : 10 mV  
current resolution to display : 10 mA

**reverse voltage :** maximum current 10 A

**remote sense capability :**  $> 0.25$  V voltage drop / wire

*Note: At open sense connections, the output voltage will not be more than 3 V above the programmed value.*

**dynamic operation :** (load variation I of 1 A between 1 and 10 A)

settling band :  $\pm 50$  mV  
di/dt : 1 A/ $\mu$ s  
overshoot : 150 mV  
recovery time : 1 ms

**programming response times :**

settling band : 50 mV  
up ( 0 .. 30 V at 2 A ) : 100 ms  
up ( 0 .. 30 V no load ) : 50 ms  
down ( 30 .. 1 V at 2 A ) : 100 ms  
down ( 30 .. 1 V no load ) : 250 ms

**reprogramming delay :** 50 ms ... 60 s (resolution of 1 ms)

### A.1.1.3 Output channel 60V/5A/60W performance

|                                                                                             |                                                |
|---------------------------------------------------------------------------------------------|------------------------------------------------|
| <b>output ranges</b> (after 30 minutes warm-up)                                             |                                                |
| voltage                                                                                     | : 0 ... 60 V                                   |
| current                                                                                     | : 0 ... 5 A                                    |
| overvoltage                                                                                 | : 2 ... 62 V                                   |
| power                                                                                       | : max. 60 W                                    |
| <b>output accuracy</b> (at calibration temperature)                                         |                                                |
| voltage                                                                                     | : $\pm (0.04 \% + 20) \text{ mV}$              |
| current                                                                                     | : $\pm (0.1 \% + 25) \text{ mA}$               |
| overvoltage                                                                                 | : $\pm (0.5 \% + 250) \text{ mV}$              |
| <b>output temperature coefficient</b> (after 30 min. warm-up)                               |                                                |
| voltage                                                                                     | : $(0.016 \% + 2 \text{ mV}) / ^\circ\text{K}$ |
| current                                                                                     | : $(0.05 \% + 2 \text{ mA}) / ^\circ\text{K}$  |
| <b>long term drift</b> (after 30 min. warm-up + 8 hours)                                    |                                                |
| output voltage: $0.04 \% + 5 \text{ mV}$                                                    |                                                |
| output current: $0.05 \% + 10 \text{ mA}$                                                   |                                                |
| <b>programming resolutions</b>                                                              |                                                |
| voltage                                                                                     | : 12 bits = 15 mV/lb                           |
| current                                                                                     | : 8 bits = 20 mA/lb                            |
| overvoltage                                                                                 | : 8 bits = 240 mV/lb                           |
| <b>source effect</b> (for any line voltage change within rating)                            |                                                |
| voltage                                                                                     | : $\pm (0.01\% + 2) \text{ mV}$                |
| current                                                                                     | : $\pm (0.02\% + 2) \text{ mA}$                |
| <b>load effect</b> (for a load change equal to nominal rating)                              |                                                |
| constant voltage : $\pm (0.01\% + 5) \text{ mV}$<br>(nominal current rating at set voltage) |                                                |
| constant current : $\pm (0.02\% + 5) \text{ mA}$<br>nominal voltage rating at set current)  |                                                |

**output noise (PARD) :**

constant voltage : 6 mV rms  
60 mV pp (DC .. 30 MHz)  
constant current : 10 mA rms  
switching frequency :  $\pm 20$  KHz

**readback accuracies :**

voltage accuracy :  $\pm (0.05 \% + 50)$  mV  
current accuracy :  $\pm (0.1 \% + 15)$  mA  
voltage measuring resolution : 12 bits  
current measuring resolution : 12 bits  
voltage resolution to interface : 15 mV  
current resolution to interface : 1.25 mA  
voltage resolution to display : 10 mV  
current resolution to display : 10 mA

**reverse voltage :** maximum current 5 A

**remote sense capability :**  $> 0.25$  V voltage drop / wire

*Note: At open sense connections, the output voltage will not be more than 3 V above the programmed value.*

**dynamic operation :** (load variation I of  $1/2$  A between  $1/2$  and 5 A)

settling band :  $\pm 50$  mV  
I/dt :  $0.5$  A/ $\mu$ s  
overshoot : 150 mV  
recovery time : 2 ms

**programming response times :**

settling band : 50 mV  
up ( 0 .. 60 V at 1 A ) : 200 ms  
up ( 0 .. 60 V no load ) : 100 ms  
down ( 30 .. 1 V at 1 A ) : 200 ms  
down ( 30 .. 1 V no load ) : 500 ms

**reprogramming delay :** 100 ms ... 60 s (resolution of 1 ms)

#### A.1.1.4 Output channel 60V/10A/120W performance

|                                                                                             |                                                |
|---------------------------------------------------------------------------------------------|------------------------------------------------|
| <b>output ranges</b> (after 30 minutes warm-up)                                             |                                                |
| voltage                                                                                     | : 0 ... 60 V                                   |
| current                                                                                     | : 0 ... 10 A                                   |
| overvoltage                                                                                 | : 2 ... 62 V                                   |
| power                                                                                       | : max.120 W                                    |
| <b>output accuracy</b> (at calibration temperature)                                         |                                                |
| voltage                                                                                     | : $\pm (0.04 \% + 20) \text{ mV}$              |
| current                                                                                     | : $\pm (0.1 \% + 50) \text{ mA}$               |
| overvoltage                                                                                 | : $\pm (0.5 \% + 250) \text{ mV}$              |
| <b>output temperature coefficient</b> (after 30 min. warm-up)                               |                                                |
| voltage                                                                                     | : $(0.016 \% + 2 \text{ mV}) / ^\circ\text{K}$ |
| current                                                                                     | : $(0.05 \% + 2 \text{ mA}) / ^\circ\text{K}$  |
| <b>long term drift</b> (after 30 min. warm-up + 8 hours)                                    |                                                |
| output voltage: 0.04% + 5 mV                                                                |                                                |
| output current: 0.05% + 10 mA                                                               |                                                |
| <b>programming resolutions</b>                                                              |                                                |
| voltage                                                                                     | : 12 bits = 15 mV/lsb                          |
| current                                                                                     | : 8 bits = 40 mA/lsb                           |
| overvoltage                                                                                 | : 8 bits = 240 mV/lsb                          |
| <b>source effect</b> (for any line voltage change within rating)                            |                                                |
| voltage                                                                                     | : $\pm (0.01\% + 2) \text{ mV}$                |
| current                                                                                     | : $\pm (0.02\% + 2) \text{ mA}$                |
| <b>load effect</b> (for a load change equal at nominal rating)                              |                                                |
| constant voltage : $\pm (0.01\% + 5) \text{ mV}$<br>(nominal current rating to set voltage) |                                                |
| constant current : $(0.02\% + 5) \text{ mA}$<br>(nominal voltage rating at set current)     |                                                |

**output noise (PARD) :**

constant voltage : 6 mV rms  
60 mV pp (DC .. 30 MHz)  
constant current : 10 mA rms  
switching frequency :  $\pm 20$  KHz

**readback accuracies :**

voltage accuracy :  $\pm (0.06 \% + 50)$  mV  
current accuracy :  $\pm (0.2 \% + 30)$  mA  
voltage measuring resolution : 12 bits  
current measuring resolution : 12 bits  
voltage resolution to interface : 15 mV  
current resolution to interface : 2.5 mA  
voltage resolution to display : 10 mV  
current resolution to display : 10 mA

**reverse voltage :** maximum current 10 A

**remote sense capability :** > 0.25 V voltage drop / wire

*Note: At open sense connections, the output voltage will not be more than 3 V above the programmed value.*

**dynamic operation :** (load variation I of 1 A between 1 and 10 A)

settling band :  $\pm 50$  mV  
dI/dt : 1 A/ $\mu$ s  
overshoot : 150 mV  
recovery time : 2 ms

**programming response times :**

settling band : 50 mV  
up ( 0 .. 60 V at 2 A ) : 200 ms  
up ( 0 .. 60 V no load ) : 100 ms  
down ( 60 .. 1 V at 2 A ) : 200 ms  
down ( 60 .. 1 V no load ) : 500 ms

**reprogramming delay :** 100 ms ... 60 s (resolution of 1 ms)

### A.1.2 Safety characteristics

The instrument has been designed and tested in accordance with IEC Publication 348 for Class 1 instruments and has been supplied in a safe condition. The present Operation Manual contains information and WARNING or CAUTION statements, which must be followed by the purchaser to ensure safe operation and to retain the instrument in a safe condition.

- safety :**
- meets requirements of IEC 348, UL 1244 and VDE 0411
  - approved according to CSA 22.2 nr. 231
  - the mains power cord meets the requirement of:
    - VDE 0411 if shipped with universal European power plug
    - UL 1244/CSA 22.2 if shipped with North American power plug

Protective circuitry within the power supply limits or turns off an output channel in the event of an abnormal condition. The activated protection feature can be observed on the front panel display area. You can also read back the status of the power supply via the GPIB.

The following protection features have been implemented:

#### **OVERVOLTAGE**

Disables the output channel by reducing the output to zero volts and zero amperes, if the output voltage exceeds the programmed overvoltage.

When an overvoltage occurs, the text OVERVOLTAGE appears on the display and the OV status bit is set for that output channel.

#### **OVERCURRENT**

Disables the output channel by reducing the output to zero volts and zero amperes, if the overcurrent protection (OCP) has been enabled and the output current exceeds the maximum current level. In this case the text OVERCURRENT appears on the display and the OC status bit is set for that output channel.

#### **UNREGULATED OUTPUT**

The power supply informs the user when an output regulation is not guaranteed. In this case the UNR status bit is set for the unregulated output channel.

## OVERTEMPERATURE

Disables the output channel, which has reached an unsafe internal operating temperature, by reducing the output to zero volts and zero amperes. This can be caused by:

- an excessively high ambient temperature
- a blocked or defective fan
- inadequate air circulation, because of insufficient side space

Refer to the protection and release temperature in table A.1.1.1. The overtemperature protection is activated when the overtemperature is exceeded. The overtemperature protection will be released when the temperature is lower than the release temperature and if the protection circuitry is reset.

## FAULT

The annunciator above the text FLT is displayed, if the output channel is in a status event, which has been unmasked, so that it will be reported. The following power supply status events have been defined:

- CP = coupled parameters have been applied
- UNR = output is unregulated
- FL = output channel is in overtemperature or sense break
- OC = output channel is in overcurrent
- OV = output channel is in overvoltage
- CC = output channel is in constant current mode
- CV = output channel is in constant voltage mode

### A.1.3 Dimensions and weight

| <b>dimensions</b> : height<br>width<br>depth | <u>single unit</u>                                  | <u>dual/triple unit</u>                          |
|----------------------------------------------|-----------------------------------------------------|--------------------------------------------------|
|                                              | approx. 2U = 86 mm<br>1½x19 inch = 210 mm<br>370 mm | approx. 2U = 86 mm<br>19 inch = 420 mm<br>370 mm |
| <b>weight</b> : net weight                   | approx 5.5 kg                                       | approx. 9.5 kg                                   |

#### A.1.4 Mains supply conditions

|                                                        |   |          |           |
|--------------------------------------------------------|---|----------|-----------|
| <b>mains input :</b> 94 V ... 130 V<br>190 V ... 255 V |   |          |           |
| <b>mains frequency :</b> 47 Hz ... 63 Hz               |   |          |           |
| <b>fuses 2x</b>                                        | : | 1 module | 2 modules |
| 110V                                                   | : | 2.5 AT   | 4 AT      |
| 220V                                                   | : | 1.25 AT  | 2.5 AT    |
| <b>power consumption:</b>                              |   | 155 VA   | 275 VA    |
| <b>peak inrush current :</b> 60 A (max.)               |   |          |           |

## A.2 INTERFERENCES

#### A.2.1 Electromagnetic interference

|                                       |                                              |
|---------------------------------------|----------------------------------------------|
| <b>Electro Magnetic Compatibility</b> |                                              |
| Emission                              | : meets requirements of VDE 0871B + CISPR 11 |
| Susceptability                        | : meets requirements of IEC 801 1-6          |
| Electro Static Discharge              | : meets requirements of IEC 801-2            |

#### A.2.2 Radio Frequency interference

|                                                                     |
|---------------------------------------------------------------------|
| The RFI for an output channel meets the requirements of VDE 0871/A. |
|---------------------------------------------------------------------|

## A.3 GENERAL PURPOSE INTERFACE BUS

### A.3.1 Interface specification

The pin numbering and signal assignment of the connector is according to the IEEE-488.2 1987 standard.

| <u>Pin nr.:</u> | <u>Signal:</u> | <u>Pin nr.:</u> | <u>Signal:</u> |
|-----------------|----------------|-----------------|----------------|
| 1               | DIO 1          | 13              | DIO 5          |
| 2               | DIO 2          | 14              | DIO 6          |
| 3               | DIO 3          | 15              | DIO 7          |
| 4               | DIO 4          | 16              | DIO 8          |
| 5               | EOI            | 17              | REN            |
| 6               | DAV            | 18              | GND 6          |
| 7               | NRFD           | 19              | GND 7          |
| 8               | NDAC           | 20              | GND 8          |
| 9               | IFC            | 21              | GND 9          |
| 10              | SRQ            | 22              | GND 10         |
| 11              | ATN            | 23              | GND 11         |
| 12              | SHIELD         | 24              | LOGIC GND      |

Notes:

- *DIO* = *Digital Input Output lines*
- *EOI* = *End Or Identify*
- *REN* = *Remote ENable*
- *DAV* = *DAta Valid*
- *GND* = *GrouND*
- *NRFD* = *Not [Ready For Data]*
- *NDAC* = *Not [Data ACcepted]*
- *IFC* = *InterFace Clear*
- *SRQ* = *Service ReQuest*
- *ATN* = *ATtention*

### A.3.2 Function specification

| Interface function | Ident. code | Description                                                                                                                              |
|--------------------|-------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Source handshake   | SH1         | Complete capability                                                                                                                      |
| Acceptor handshake | AH1         | Complete capability                                                                                                                      |
| Talker function    | T5          | <ul style="list-style-type: none"> <li>• Basic talker</li> <li>• Serial Poll</li> <li>• Talk only</li> <li>• Unaddress if MLA</li> </ul> |
| Listener function  | L3          | <ul style="list-style-type: none"> <li>• Basic listener</li> <li>• Listen only</li> <li>• Unaddress if MTA</li> </ul>                    |
| Service request    | SR1         | Complete capability                                                                                                                      |
| Remote local       | RL1         | Complete capability                                                                                                                      |
| Parallel poll      | PP0         | No capability                                                                                                                            |
| Device clear       | DC1         | Complete capability                                                                                                                      |
| Device trigger     | DT1         | Complete capability                                                                                                                      |
| Controller         | C0          | No capability                                                                                                                            |

Notes: - *MLA* = My Listen Address  
 - *MTA* = My talk Address

#### Electrical specifications:

| Characteristics             | Specification | Additional information                     |
|-----------------------------|---------------|--------------------------------------------|
| • Bus drivers               | E2            | low = 0 .. 0.8 V<br>high = 2 .. 5 V        |
| • GPIB address<br>(default) | 0 .. 30<br>28 | Can be set with the AUX key<br>At delivery |

## A.4 TRIGGER BUS

### A.4.1 Function specification

The trigger bus, located at the rear of the power supply, consists of 3 miniature BNC connectors, i.e.:

- the START input line
- the STEP input line
- the READY output line

*Note:* low = 0 .. 0.8 V and high = 2 .. 5 V

The trigger bus can be operated in 2 ways:

- 1) In the synchronous mode:  
In this mode all 3 bus signal lines have their own functionality.
- 2) In the asynchronous mode:  
In this mode the READY line is externally connected to the START line.

The trigger bus can be used to control the internal recall memory. A recall memory consists of 99 addresses, numbered from 1 ... 99. A recall memory address contains space for the voltage and current setting of all available output channels.


To control the recall memory via the trigger bus, the STEP mode may not be automatic and the START input line must be pulled low. This will enable the STEP line to trigger the next step to be executed (external triggering). Pulling the START line low will also disable the manual STEP key.

### A.4.2 Timing relation

When enabled a STEP pulse will trigger the step mechanism. The leading edge of the STEP pulse makes the READY line active (low) within 100 nanoseconds. The READY line will be released, when the internal processing is finished and the STEP line is high. Not included is the reprogramming delay time. It is the responsibility of the user to choose a STEP rate. This STEP rate may not be too high for the power supply and its load condition, so that the output cannot settle within the resulting STEP time.

P.S. STEP pulses, received while the READY line is low, will be ignored.

The following scheme shows the timing relation:

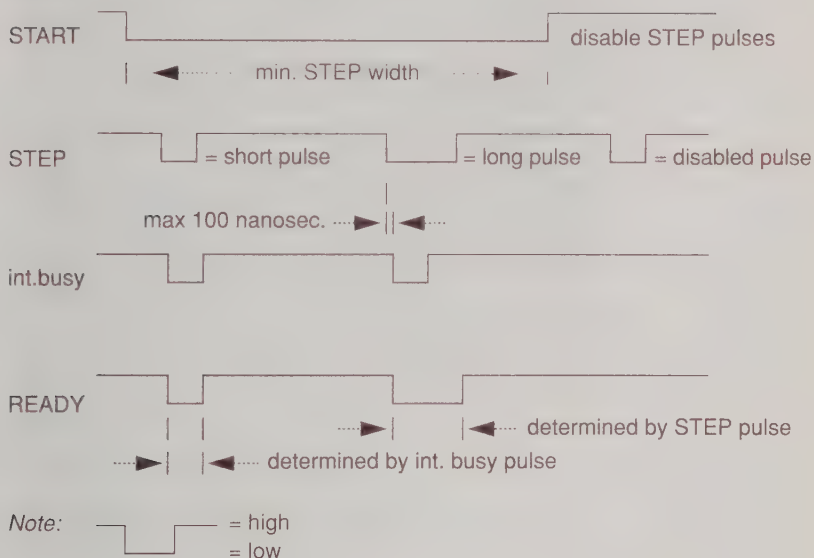



# APPENDIX B

## PM28xx PERFORMANCE VERIFICATION

The following performance verification procedure gives you an indication whether the instrument operates correctly. It does not test whether the instrument completely meets specifications.

Make sure that the instrument is suitable for the local line power as indicated on the type number plate (see the Operation Manual section 3.4)

It is assumed that the power supply passed the power-on initialization tests (see the Operation Manual, section 3.6).

Follow the instructions and guidelines given in section 1 "OPERATOR SAFETY" in the Operation Manual.

### REQUIREMENTS

- Measuring accuracies:  

|                     |                                         |
|---------------------|-----------------------------------------|
| Minimum accuracies: | dc voltage: 0.01%                       |
|                     | dc current: 0.1%                        |
| Recommended DMM:    | PM2525, which is calibrated every year. |
- Warmup time: 30 minutes to rated specifications
- Reference temperature 21°C to 25°C.

### CONVENTIONS WITH RESPECT TO THE FOLLOWING TABLES

- Values marked xxxx are not relevant and need not to be verified.
- |   |   |       |
|---|---|-------|
| V | 1 | ENTER |
|---|---|-------|

 This is an example of a key sequence. It means that you must press the indicated keys in the order from left to right.
- CV = Constant Voltage annunciator; CC = Constant Current annunciator. If CV or CC is given in the following tables, this annunciator must be displayed. If not displayed, check if the wiring to the PPS terminals and to the DDM inputs is correct, if the correct output channel is selected, and if the DMM is set to the correct measuring function.
- Along with each key sequence, the equivalent remote command string is also given. This enables you to write your own remote controlled verification procedure. Refer to the user manuals of your GPIB controller for information

about remote control of GPIB devices. Refer to the user manuals of the DMM for information about how to program the DMM functions and how to read out the DMM measurement results.

- To the left margin you will find a number which refers to extended descriptions at the back of this Appendix.

## GENERAL INSTRUCTIONS

The instructions given in TABLE B-1 are valid for the verification checks given in tables B-2 to B-9.

TABLE B-1

|   | APPLICABLE<br>CONDITION                                     | PRESS KEY                                                                                   | EQUIVALENT<br>REMOTE COMMAND | DESCRIPTION                                            |
|---|-------------------------------------------------------------|---------------------------------------------------------------------------------------------|------------------------------|--------------------------------------------------------|
| 1 | A next output channel must be verified.                     |            | :INST:NSEL <n>               | This selects output channel <n>.                       |
| 2 | The power supply is in STANDBY mode.                        |            | :INST:STAT ON                | This places the power supply in OPERATE mode.          |
| 3 | The display for the selected output channel shows DISABLED. |            | :OUTP ON                     | This enables the selected output channel.              |
| 4 | Overvoltage Protection not at maximum trip level.           |  <maximum> | :VOLT:PROT MAX               | This sets the Overvoltage Protection level to maximum. |
| 5 | Overcurrent Protection is enabled                           |            | :CURR:PROT:STAT OFF          | This disables Overcurrent Protection.                  |

## NOTES TO THE VALUES GIVEN IN THE FOLLOWING TABLES

- DMM readout not within limits.

The DMM readout must be within the specified limits. If the DMM readout is outside these limits, the power supply should be calibrated; use the Calibration Procedure given in Appendix C.


- Readback via remote (GPIB) or via the PM28xx display.

The readback accuracies are specified for readback via the GPIB. This provides the maximum readback accuracy. The readback values on the PM28xx display are truncated in correspondence with the resolution of 10 mV for voltages and 10 mA for currents.

- Readback not within limits.

The readback value shown on the power supply's display may deviate a specified value from the actual output parameter (DMM readout). If the DMM readout is correct but the corresponding readback value is outside the specified limits, the power supply is defective and should be repaired; contact your local Philips representative. Addresses are given at the back of this manual.

## OUTPUT VOLTAGE VERIFICATION

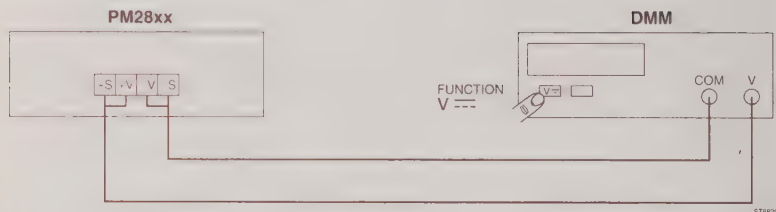

Requirements: No load connected  
PM28xx must be in CV (Constand Voltage mode).

### 30V/10A/60W OUTPUTS

TABLE B-2

|   | ACTION /<br>KEY STROKES | EQUIVALENT<br>REMOTE CMD | OUTPUT ACCURACY<br>(DMM readout) | READBACK ACCURACY<br>(display resolution 10 mV) |
|---|-------------------------|--------------------------|----------------------------------|-------------------------------------------------|
| 6 | I 2 ENTER               | :CURR 2                  | xxxxxV                           | x.xx V xx                                       |
| 7 | V 1 ENTER               | :VOLT 1                  | 1V $\pm$ 10 mV                   | DMM $\pm$ 25 mV CV                              |
| 8 | V 1 5 ENTER             | :VOLT 15                 | 15V $\pm$ 14 mV                  | DMM $\pm$ 32 mV CV                              |
| 9 | V 2 9 ENTER             | :VOLT 29                 | 29V $\pm$ 19 mV                  | DMM $\pm$ 39 mV CV                              |

### 60V/5A/60W OUTPUTS

TABLE B-3


|   | ACTION /<br>KEY STROKES | EQUIVALENT<br>REMOTE CMD | OUTPUT ACCURACY<br>(DMM readout) | READBACK ACCURACY<br>(display resolution 10 mV) |
|---|-------------------------|--------------------------|----------------------------------|-------------------------------------------------|
| 6 | I 1 ENTER               | :CURR 1                  | xxxxxV                           | x.xx V xx                                       |
| 7 | V 2 ENTER               | :VOLT 2                  | 2V $\pm$ 21 mV                   | DMM $\pm$ 50 mV CV                              |
| 8 | V 3 0 ENTER             | :VOLT 30                 | 30V $\pm$ 29 mV                  | DMM $\pm$ 64 mV CV                              |
| 9 | V 5 8 ENTER             | :VOLT 58                 | 58V $\pm$ 37 mV                  | DMM $\pm$ 79 mV CV                              |

### 60V/10A/120W OUTPUTS

TABLE B-4

|   | ACTION /<br>KEY STROKES | EQUIVALENT<br>REMOTE CMD | OUTPUT ACCURACY<br>(DMM readout) | READBACK ACCURACY<br>(display resolution 10 mV) |
|---|-------------------------|--------------------------|----------------------------------|-------------------------------------------------|
| 6 | I 2 ENTER               | :CURR 2                  | xxxxxV                           | x.xx V xx                                       |
| 7 | V 2 ENTER               | :VOLT 2                  | 2V $\pm$ 21 mV                   | DMM $\pm$ 51 mV CV                              |
| 8 | V 3 0 ENTER             | :VOLT 30                 | 30V $\pm$ 29 mV                  | DMM $\pm$ 68 mV CV                              |
| 9 | V 5 8 ENTER             | :VOLT 58                 | 58V $\pm$ 37 mV                  | DMM $\pm$ 84 mV CV                              |

OUTPUT CURRENT VERIFICATION

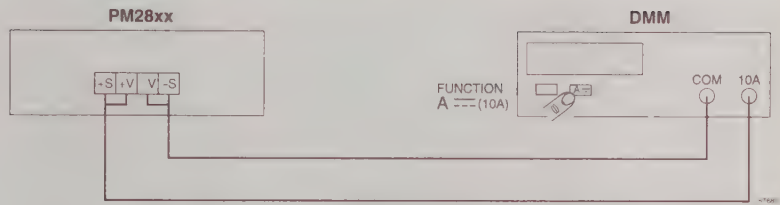

Requirements: PM28xx must be in CC (Constand Current mode).

30V/10A/60W OUTPUT MODULES      TABLE B-5

|    | ACTION /<br>KEY STROKES | EQUIVALENT<br>REMOTE CMD | OUTPUT ACCURACY<br>(DMM readout) | READBACK ACCURACY<br>(display resolution 10 mA) |
|----|-------------------------|--------------------------|----------------------------------|-------------------------------------------------|
| 10 | <div>V5ENTER</div>      | :VOLT 5                  | x.xxxA                           | x.xxxA    xx                                    |
| 11 | <div>I1ENTER</div>      | :CURR 1                  | 1A ± 50 mA                       | DMM ± 30 mA    CC                               |
| 12 | <div>I5ENTER</div>      | :CURR 5                  | 5A ± 50 mA                       | DMM ± 35 mA    CC                               |
| 13 | <div>I9ENTER</div>      | :CURR 9                  | 9A ± 50 mA                       | DMM ± 39 mA    CC                               |

60V/5A/60W OUTPUT MODULES      TABLE B-6

|    | ACTION /<br>KEY STROKES | EQUIVALENT<br>REMOTE CMD | OUTPUT ACCURACY<br>(DMM readout) | READBACK ACCURACY<br>(display resolution 10 mA) |
|----|-------------------------|--------------------------|----------------------------------|-------------------------------------------------|
| 10 | <div>V10ENTER</div>     | :VOLT 10                 | x.xxxA                           | x.xxxA    xx                                    |
| 11 | <div>I.5ENTER</div>     | :CURR 0.5                | 0.5A ± 25 mA                     | DMM ± 15 mA    CC                               |
| 12 | <div>I2.5ENTER</div>    | :CURR 2.5                | 2.5A ± 25 mA                     | DMM ± 17 mA    CC                               |
| 13 | <div>I4.5ENTER</div>    | :CURR 4.5                | 4.5A ± 25 mA                     | DMM ± 19 mA    CC                               |

60V/10A/120W OUTPUT MODULES      TABLE B-7

|    | ACTION /<br>KEY STROKES | EQUIVALENT<br>REMOTE CMD | OUTPUT ACCURACY<br>(DMM readout) | READBACK ACCURACY<br>(display resolution 10 mA) |
|----|-------------------------|--------------------------|----------------------------------|-------------------------------------------------|
| 10 | <div>V10ENTER</div>     | :VOLT 10                 | x.xxxA                           | x.xxxA    xx                                    |
| 11 | <div>I1ENTER</div>      | :CURR 1                  | 1A ± 50 mA                       | DMM ± 31 mA    CC                               |
| 12 | <div>I5ENTER</div>      | :CURR 5                  | 5A ± 50 mA                       | DMM ± 39 mA    CC                               |
| 13 | <div>I9ENTER</div>      | :CURR 9                  | 9A ± 50 mA                       | DMM ± 48 mA    CC                               |

## OVERVOLTAGE PROTECTION VERIFICATION

Disconnect all connections to the output channel.

### 30V OUTPUT MODULES

TABLE B-8

|    | ACTION /<br>KEY STROKES                                                                  | EQUIVALENT<br>REMOTE COMMAND                | PM28xx DISPLAY        |
|----|------------------------------------------------------------------------------------------|---------------------------------------------|-----------------------|
| 14 |                                                                                          | :CURR 2                                     | n x.xxV 0.00A xx      |
| 15 |                                                                                          | :VOLT:PROT 29                               | n x.xxV 0.00A xx      |
| 16 |                                                                                          | :VOLT 28                                    | n 28.00V 0.00A CV     |
| 17 | Press key + side repeatedly,<br>causing 7.5 mV steps, until<br>OVERVOLTAGE is displayed. | :VOLT 28.0075<br>:VOLT 28.0150<br>etc. .... | n OVERVOLTAGE         |
| 18 |                                                                                          | :VOLT?                                      | n VSET 29V $\pm$ 0.3V |
| 19 |                                                                                          | :VOLT 28                                    | n OVERVOLTAGE         |
| 20 |                                                                                          | :OUTP:PROT:CLE                              | n 28.00V 0.00A CV     |

### 60V OUTPUT MODULES

TABLE B-9

|    | ACTION /<br>KEY STROKES                                                                 | EQUIVALENT<br>REMOTE COMMAND                   | PM28xx DISPLAY         |
|----|-----------------------------------------------------------------------------------------|------------------------------------------------|------------------------|
| 14 |                                                                                         | :CURR 1                                        | n x.xxV 0.00A xx       |
| 15 |                                                                                         | :VOLT:PROT 59                                  | n x.xxV 0.00A xx       |
| 16 |                                                                                         | :VOLT 58                                       | n 58.00V 0.00A CV      |
| 17 | Press key + side repeatedly,<br>causing 15 mV steps, until<br>OVERVOLTAGE is displayed. | :VOLT 58.015<br>:VOLT 58.030<br>.... etc. .... | n OVERVOLTAGE          |
| 18 |                                                                                         | :VOLT?                                         | n VSET 59V $\pm$ 0.55V |
| 19 |                                                                                         | :VOLT 58                                       | n OVERVOLTAGE          |
| 20 |                                                                                         | :OUTP:PROT:CLE                                 | n 58.00V 0.00A CV      |

## OVERCURRENT PROTECTION VERIFICATION

### ALL OUTPUT MODULES

TABLE B-10

| ACTION /<br>KEY STROKES                                                              | EQUIVALENT<br>REMOTE COMMAND | PM28xx DISPLAY |
|--------------------------------------------------------------------------------------|------------------------------|----------------|
| 21  | :INST:STAT OFF               | n      STANDBY |

Repeat the complete PERFORMANCE VERIFICATION procedure for each output channel.

The following descriptions refer to the numbers to left margin in tables B1 to B10.

1. This is only necessary if you want to verify several output channels.
2. The power supply must be in OPERATE mode to get output from any channel.
3. The selected output channel must be set ENABLED to get output from it.
4. Overvoltage Protection may not trip. Therefore, set its trip level to maximum (see module specifications in Appendix A).
5. Overcurrent Protection may not trip. Therefore, disable it to occur.
6. This sets the output in its specified current control range.  
Values indicated in the table as xxxxx, are not relevant.
7. Verify DMM readout and readback voltage. Also check that the CV indicator is on.
8. Idem.
9. Idem.
10. This sets the output in its specified voltage control range.
11. Verify DMM readout and readback current. Also check that the CC indicator is on.
12. Idem.
13. Idem.
14. This sets the output in its specified current control range.
15. This sets the Overvoltage Protection level to the channel's maximum output voltage minus 1V.
16. This sets the voltage at the output 1V below the Overvoltage Protection level.
17. Now increase the output voltage carefully, step by step, by pressing the plus-side of the  key. When a GPIB program is used, you may program an increasing value. The voltage steps should be equal to the programming resolution. When the voltage reaches the Overvoltage trip level, the protection circuit will trip and will switch off the output. At this moment, verify the voltage setting by pressing the  key (step 18) or reading the response from the VOLT? query.

18. Press  to verify the voltage setting that caused the Overvoltage Protection circuit to trip.
19. Bring the voltage setting back to the level of step 16.
20. Reset the Protection Circuit. The OVERVOLTAGE message should disappear from the display.
21. This tests the (hardware) mechanism that switches an output off. Overcurrent protection uses this mechanism. It is detected by the firmware when an output becomes in CC (Constant Current) mode while Overcurrent Protection is enabled. This test does not verify the firmware control of the mechanism.  
Check that the display shows 'STANDBY'.

# APPENDIX C

## CALIBRATION PROCEDURE FOR PM28xx SERIES POWER SUPPLIES

### REQUIREMENTS

- Recommended test equipment:  
DMM: PM2525, which is calibrated every year.  
Minimum accuracies:   dc voltage:    $\pm 0.01\%$   
                              dc current:    $\pm 0.1\%$
- Warmup time for both the DMM and the PM281x:  
30 minutes to rated specifications.
- Calibration temperature 21°C to 25°C.

### NOTES TO THE FOLLOWING CALIBRATION PROCEDURE:

- There are two ways to calibrate the power supply:
  - LOCAL CALIBRATION SEQUENCE:  
This is performed by means of the front panel keys.
  - REMOTE CALIBRATION SEQUENCE:  
This is performed by means of messages via the GPIB.Along with the key sequence (manual control), the equivalent remote sequence is also given. This enables you to write your own remote controlled calibration procedure. The key strokes for the manual calibration sequence are not directly related to the remote messages for the remote calibration sequence given in the same table. You cannot combine the local and the remote sequence in the same calibration session, i.e., you must select either the local sequence or the remote sequence. The PM28xx display data is only applicable to the local sequence.

- ACTION / KEY STROKES:

Example: 2 8 1 3 ENTER

<DMM\_readout> ENTER

This means that you must press the indicated keys in the given order.

This means that you must enter the DMM measurement value via the PM28xx numeric keypad.

- **REMOTE SEQUENCE:**

This sequence gives only the command string data. Refer to the user manuals of your GPIB controller for information about remote control of GPIB devices. Refer to the user manuals of the DMM for information about how to program the DMM functions and how to read out the DMM measurement results <DMM\_readout> via the GPIB.

- **PM28xx DISPLAY:**

This gives messages and status data shown on the PM28xx display during the local calibration sequence.

n = Selected output channel number.

CV = Constant Voltage annunciator; CC = Constant Voltage annunciator.

If CV or CC is given in the following tables, check if the annunciator is displayed. If it is not displayed, check if the wiring to the PPS terminals and to the DDM inputs is correct, if the correct output channel is selected, and if the DMM is set to the correct measuring function and if the measuring leads are connected to the correct inputs.

TABLE C-1

| SEQUENCE NUMBER | LOCAL CALIBRATION SEQUENCE                                                    |                | REMOTE CALIBRATION SEQUENCE |          |
|-----------------|-------------------------------------------------------------------------------|----------------|-----------------------------|----------|
|                 | ACTION / KEY STROKE                                                           | PM28xx DISPLAY | REMOTE SEQUENCE             | NOTES *) |
| 1               | Turn power on while pressing <b>AUX</b>                                       |                | *RST                        |          |
| 2               | <code>&lt;code&gt;</code> <b>ENTER</b>                                        | 1 CODE         | :INST:STAT ON               |          |
| 3               | <b>SELECT</b> ....                                                            | 1 CALIBRATE ON | :SYST:UNPR ON               |          |
| 4               | Set the DMM to function V dc.                                                 |                | :SYST:UNPR:SEL <code>       | 1        |
| 5               | Connect the DMM (V and COM inputs) to output channel <n> +V and -V terminals. |                | :INST:NSEL <n>              | 2        |
| 6               | <b>ENTER</b>                                                                  | n VCAL LOW     | :OUTP:STAT ON               |          |
| 7               | <b>ENTER</b>                                                                  | n VCAL CV      | :CAL:STAT OFF               | 3        |
| 8               | <code>&lt;DMM_readout&gt;</code> <b>ENTER</b>                                 | n VCAL [11.11] | :CURR <curr_val>            |          |
| 9               | <b>ENTER</b>                                                                  | n VCAL LOW     | :VOLT MIN                   |          |
| 10              | <code>&lt;DMM_readout&gt;</code> <b>ENTER</b>                                 | n VCAL CV      | :CAL:VAL <DMM_readout>      | 4        |
| 11              | Set the DMM to function A dc.                                                 |                | :VOLT MAX                   |          |
| 12              | Disconnect the wire from the V input of the DMM and connect it to 10A input.  |                | :CAL:VAL <DMM_readout>      | 4        |

\*) See The notes at the back of this Calibration Procedure.

| SEQUENCE NUMBER | LOCAL CALIBRATION SEQUENCE                                                                          |                                                                                                   | REMOTE CALIBRATION SEQUENCE        |  | NOTES  |
|-----------------|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|------------------------------------|--|--------|
|                 | ACTION / KEY STROKE                                                                                 | PM28xx DISPLAY                                                                                    | REMOTE SEQUENCE                    |  |        |
| 13              | <input type="button" value="ENTER"/>                                                                | n ICAL CV                                                                                         | :VOLT <volt_val>                   |  | 5      |
| 14              | <DMM_readout> <input type="button" value="ENTER"/>                                                  | n ICAL HIGH                                                                                       | :CURR MIN                          |  |        |
| 15              | <input type="button" value="ENTER"/>                                                                | n ICAL CV                                                                                         | :CAL:VAL <DMM_readout>             |  | 4      |
| 16              | <DMM_readout> <input type="button" value="ENTER"/>                                                  | n OVCAZ LOW                                                                                       | :CURR MAX                          |  |        |
| 17              | Disconnect the power supply output.                                                                 |                                                                                                   |                                    |  |        |
| 18              | <input type="button" value="ENTER"/>                                                                | n MEASURE LOW<br>n MEASURE HIGH<br>n SAVING OFF<br>n SAVING<br>n SAVE COMPLETED<br>n CALIBRATE ON | :CURR <curr_val><br>:CAL:AUTO ONCE |  | 3<br>6 |
| 19              | <input type="button" value="1"/>                                                                    |                                                                                                   | :CAL:STAT ON                       |  |        |
| 20              | <input type="button" value="ENTER"/>                                                                |                                                                                                   |                                    |  |        |
| 21              | If you want to calibrate a next channel, repeat the above procedure from sequence number 3 onwards. |                                                                                                   |                                    |  |        |
| 22              | <input type="button" value="0"/>                                                                    | n STANDBY                                                                                         | :OUTP:STAT OFF<br>:SYST:UNPR OFF   |  |        |

\*) See the notes at the back of this Calibration Procedure.

## NOTES TO TABLE C-1:

1. Replace <code> with the four digit password. At delivery from the factory, this password is set equal to the last four digits of the power supply typenumber.
2. LOCAL SEQUENCE: Press SELECT as many times as necessary to select the output channel.  
REMOTE SEQUENCE: Replace <n> with the output channel number.
3. Replace <curr\_val> with a value that is equal to 10% of the maximum current of your power supply. You can query the maximum current with  
:CURR:LIM:HIGH?
4. Replace <DMM\_readout> with the measurement value of the DMM.
5. Replace <volt\_val> with a value that is equal to 10% of the maximum voltage of your power supply. You can query the maximum voltage with  
:VOLT:LIM:HIGH?
6. This command will take about five seconds to complete. Insert a pause longer than ten seconds after this command in your GPIB program.



# APPENDIX D      ERROR MESSAGES

## D.1 Instrument error messages

### D.1.1 Functional error messages

The following error messages can be displayed during operation:

|   |                       |                  |                                                                                   |
|---|-----------------------|------------------|-----------------------------------------------------------------------------------|
| n | O V E R V O L T A G E |                  | in the case of an overvoltage situation for output channel n                      |
| n | O V E R C U R R E N T |                  | in the case of an enabled overcurrent situation for output channel n              |
| n | F A I L               |                  | in the case of an overtemperature or an open sense for output channel n           |
| n | F A I L               | O U T P U T    N | in the case of an overtemperature or an open sense for a coupled output channel N |
| n | P R O T E C T I O N   |                  | in the case of a coupled output channel protection for output channel n           |
| n | F A U L T             | O U T P U T    N | in the case of a fault for a coupled output channel N                             |
| n |                       | ▼    ▼ ▼ ▼ ▼     | the displayed annunciator points at the fault or status text on the front panel   |

### D.1.2 Hardware error messages

The following text + error code can be displayed:

**ERROR n:ddd**      n      = indication of the error source  
                                 ddd = summation of the decimal equivalents of the individual error bits

The following error codes are possible:

0) Main CPU error: (n = 0)

| bit: | decimal: | error description:         |
|------|----------|----------------------------|
| 7    | 128      | display controller failure |
| 6    | 64       | bank switch failure        |
| 5    | 32       | not used                   |
| 4    | 16       | D <sup>2</sup> B failure   |
| 3    | 8        | IEEE controller failure    |
| 2    | 4        | processor timer failure    |
| 1    | 2        | RAM failure                |
| 0    | 1        | ROM failure                |

1) CPU error of output channel 1: (n = 1)

| bit: | decimal: | error description:            |
|------|----------|-------------------------------|
| 7    | 128      | not used                      |
| 6    | 64       | ROM check sum error           |
| 5    | 32       | CONFIG check sum error        |
| 4    | 16       | CAL(ibration) check sum error |
| 3    | 8        | DEFSET check sum error        |
| 2    | 4        | processor timer failure       |
| 1    | 2        | not used                      |
| 0    | 1        | output channel not responding |

2) CPU error of output channel 2: (n = 2)

conform 1)

3) CPU error of output channel 3: (n = 3)

conform 1)

## D.2 SCPI command/query error messages

| Error class           | Range of Error numbers | Standard Event Register |
|-----------------------|------------------------|-------------------------|
| No errors             | 0                      |                         |
| Command Error         | -100 .. -199           | bit 5 CME               |
| Execution Error       | -200 .. -299           | bit 4 EXE               |
| Device-Specific Error | -300 .. -399           | bit 3 DDE               |
| Query Error           | -400 .. -499           | bit 2 QYE               |

*Remark: The error lists specify standard SCPI (1990.0) error numbers and descriptions. For completeness all defined errors have been listed.*

### D.2.1 Command errors

| Error number: | Error description:          |
|---------------|-----------------------------|
| 0             | No error                    |
| -100          | Command error               |
| -101          | Invalid character           |
| -102          | Syntax error                |
| -103          | Invalid separator           |
| -104          | Data type error             |
| -105          | GET not allowed             |
| -108          | Parameter not allowed       |
| -109          | Missing parameter           |
| -110          | Command header error        |
| -111          | Header separator error      |
| -112          | Program mnemonic too long   |
| -113          | Undefined header            |
| -114          | Header suffix out of range  |
| -120          | Numeric data error          |
| -121          | Invalid character in number |
| -123          | Exponent too large          |
| -124          | Too many digits             |
| -128          | Numeric data not allowed    |
| -130          | Suffix error                |
| -131          | Invalid suffix              |
| -134          | Suffix too long             |
| -138          | Suffix not allowed          |
| -140          | Character data error        |
| -141          | Invalid character data      |
| -144          | Character data too long     |
| -148          | Character data not allowed  |

|      |                                  |
|------|----------------------------------|
| -150 | String data error                |
| -151 | Invalid string data              |
| -158 | String data not allowed          |
| -160 | Block data error                 |
| -161 | Invalid block data               |
| -168 | Block data not allowed           |
| -170 | Expression error                 |
| -171 | Invalid expression               |
| -178 | Expression data not allowed      |
| -180 | Macro error                      |
| -181 | Invalid outside macro definition |
| -183 | Invalid inside macro definition  |
| -184 | Macro parameter error            |

### D.2.2 Execution errors

Error number:      Error description:

|      |                                            |
|------|--------------------------------------------|
| -200 | Execution error                            |
| -201 | Invalid while in local                     |
| -202 | Settings lost due to rtl (return to local) |
| -210 | Trigger error                              |
| -211 | Trigger ignored                            |
| -212 | Arm ignored                                |
| -213 | Init ignored                               |
| -214 | Trigger deadlock                           |
| -215 | Arm deadlock                               |
| -220 | Parameter error                            |
| -221 | Settings conflict                          |
| -222 | Data out of range                          |
| -223 | Too much data                              |
| -224 | Illegal parameter value                    |
| -230 | Data corrupt or stale                      |
| -231 | Data questionable                          |
| -240 | Hardware error                             |
| -241 | Hardware missing                           |
| -250 | Mass storage error                         |
| -251 | Missing mass storage                       |
| -252 | Missing media                              |
| -253 | Corrupt media                              |
| -254 | Media full                                 |
| -255 | Directory full                             |
| -256 | File name not found                        |
| -257 | File name error                            |

|      |                                |
|------|--------------------------------|
| -258 | Media protected                |
| -260 | Expression error               |
| -261 | Math error in expression       |
| -270 | Macro error                    |
| -271 | Macro syntax error             |
| -272 | Macro execution error          |
| -273 | Illegal macro label            |
| -274 | Macro parameter error          |
| -275 | Macro definition too long      |
| -276 | Macro recursion error          |
| -277 | Macro redefinition not allowed |
| -278 | Macro header not found         |
| -280 | Program error                  |
| -281 | Cannot create program          |
| -282 | Illegal program name           |
| -283 | Illegal variable name          |
| -284 | Program currently running      |
| -285 | Program syntax error           |
| -286 | Program runtime error          |

### **D.2.3 Device-specific errors**

Error number: Error description:

|      |                                       |
|------|---------------------------------------|
| -300 | Device-specific error                 |
| -310 | System error                          |
| -311 | Memory error                          |
| -312 | PUD memory lost (Protected User Data) |
| -313 | Calibration memory lost               |
| -314 | Save/recall memory lost               |
| -315 | Configuration memory lost             |
| -330 | Self-test failed                      |
| -350 | Queue overflow                        |

### **D.2.4 Query errors**

Error number: Error description:

|      |                                              |
|------|----------------------------------------------|
| -400 | Query error                                  |
| -410 | Query INTERRUPTED                            |
| -420 | Query UNTERMINATED                           |
| -430 | Query DEADLOCKED                             |
| -440 | Query UNTERMINATED after indefinite response |



# Sales and Service all over the world

**Algeria**  
**Bureau de Liaison Philips**  
 24 rue Bougainville  
 El Mouradia, Alger  
 Tel: 60 14 05  
 TLX: 62221

**Angola**  
**Lusolanda Trading S.A.R.L.**  
 C.P. 178  
 LUANDA  
 Tel: 244-2-372250  
 Fax: 244-2-373413

**Antilles**  
**Philips Antillana N.V.**  
 (For Philips products)  
 Kaminda Michigan 4  
 PO Box 3523/3051  
 Willemstad, Curacao  
 Tel: 599-9-615277  
 Fax: 599-9-612772  
 TLX: 1047 PHINA

**Argentina**  
**Philips Argentina S.A.**  
 (For Philips products)  
 Casilla Correo 3479  
 Vedia 3892  
 1430 Buenos Aires  
 Tel: 54-1-5414106/5417141  
 Fax: 54-1-7689618  
 Tel: 54-1-5422411/5422451\*  
 TLX: 21359/21243

**Coasin S.A.**  
 (For Fluke products)  
 Virrey del Pino 4071 DEP E-1  
 1430 CAP FED  
 Buenos Aires, Argentina  
 Tel: (54) (1) 552-5248  
 TLX: (390) 22284 COASN AR

**Viditex SA**  
 Lacarra 234  
 Buenos Aires, Argentina  
 Tel: 54-1-69-1988/7669  
 Fax: 54-1-6332185  
 TLX: 17513 vidtex ar

**Australia/New Zealand**  
**Philips Scientific & Industrial PTY Ltd.**  
**Test & Measurement Dept.**  
**NZ Head Office**  
 2 Wagner Place  
 PO Box 4021  
 Auckland 3  
 New Zealand  
 Tel: 09-894160  
 Fax: 09-862728  
 TLX: NZ 2395

**Australia Head Office**  
**Philips Scientific & Industrial PTY Ltd.**  
**Test & Measurement Dept.**  
 Centrecourt 25-27 Paul Street  
 North Ryde  
 Sydney New South Wales 2113  
 Tel: 02-888 0416  
 Tel: 02-888 8222\*  
 Fax: 02-888 0440  
 TLX: AA 20165 philind ausrnsi

**Philips Scientific & Industrial PTY Ltd.**  
**Test & Measurement**  
 23 Lakeside Drive  
 East Burwood  
 Melbourne Victoria 3151  
 Tel: 03-235 3666  
 Fax: 03-235 3618

**Philips Scientific & Industrial PTY Ltd.**  
**Test & Measurement**  
 348 Torrens Road  
 Croyden  
 Adelaide South Australia 5008  
 Tel: 08-3482684  
 Fax: 08-3482813

**Philips Scientific & Industrial PTY Ltd.**  
**Test & Measurement**  
 299 Montagne Road  
 West End  
 Brisbane Queensland 4101  
 Tel: 07-8440191  
 Fax: 07-8448537

**Philips Scientific & Industrial PTY Ltd.**  
**Test & Measurement**  
 1 Frederick Street  
 Belmont  
 Perth West Australia 6104  
 Tel: 09-277-4199  
 Fax: 09-277-1202

**Austria**  
**Philips Professionelle Elektronik GmbH**  
**Marktbereich Test- und Messgeraete**  
 Gutheil-Schoder-Gasse 10  
 A-1102 Wien  
 Tel: 0222/60101-0  
 Fax: 0222/6272165  
 TLX: 133129

**Philips Professionelle Elektronik GmbH**  
**Marktbereich Test- und Messgeraete**  
**Technischer Kundendienst**  
 Gutheil-Schoder-Gasse 10  
 A-1102 Wien  
 Tel: 0222/60101-818  
 Fax: 0222/601011969

**Bahrain**  
**Messrs. Mohamed Fakhroo & Bros**  
 PO Box 439  
 Bahrain  
 Tel: 973-253529  
 Fax: 973-275996  
 TLX: 8679 alfaro bn

**Bangladesh**  
**Philips Bangladesh Ltd.**  
 (For Philips products)  
 P.O. Box 62, Ramna 16/17 Kawan Bazar  
 DHAKA  
 Tel: 325081-5  
 Fax: 412972/sherat  
 TLX: 65668 PHIL BG

**Motherland Corporation**  
 (For Fluke products)  
 24 Hatkhola Road, Tikatuli  
 Dacca-3, Bangladesh  
 Tel: 880257249  
 TLX: (950) 642022 PCO BJ

**Barbados**  
**Manning Wilkinson & Challenor**  
 P.O. Box 176  
 Bridgetown  
 Tel: 436-6185  
 Fax: 809-426-7373  
 TLX: MANNINGS 2355 WB

**Belgium**  
**Philips Professional Systems S.A.**  
**Test & Measurement Department**  
 Rue des deux gares 80  
 B-1070 Bruxelles  
 Tweestationstraat 80  
 B-1070 Brussel  
 Tel: 02-525 6692/94  
 Fax: 02-525 6483  
 TLX: 61511 beldiet

**Bermuda**  
**Holmes, Williams and Purvey**  
 P.O. Box 444  
 Hamilton  
 Tel: 809-2955000  
 TLX: 3725 HWPBA

**Bolivia**  
**E.P.T.A. INGENIERIA S.R.L.**  
**Edificio Coby**  
 Av. Arce nr. 2355 off 202  
 PO Box 10294  
 LA PAZ  
 Tel: 351581 355604  
 Fax: 5912 355604  
 TLX: 2518 EPTABV

**Coasin Bolivia S.R.L.**  
 (For Fluke products)  
 Casilla 7295  
 La Paz, Bolivia  
 Tel: (591) (2) 40962  
 TLX: (336) 3233 COALAP BV

**Brazil**  
**Philips Medical Systems Ltda.**  
 Av. Interlagos N. 3493  
 04661 Sao Paulo S.P  
 Tel: 55-11-5234811  
 Fax: 55-11-5244873

**Brunei**  
**Brunei (via Singapore)**  
 (For Philips products)  
 Philips Project Development  
 (S) PTY Ltd  
 Lorong 1, Toa Payoh  
 Singapore 1231  
 PO Box 340 Tao Payoh C.P.O  
 Tel: 65-3502000  
 TLX: philips rs/21375

**Rank O'Connor's, 5nd Bhd**  
 (For Fluke products)  
 No. 8 Block D,  
 Sulu Shophouse Complex  
 Mile 1 Jalan Tutong  
 Bandar Sen Begawan  
 Negara Brunei Darussalam  
 Tel: (673) (2) 23109 or 23557  
 TLX: (799) BU 2265 RANKOC

**Bulgaria**  
**AC Sophiano**  
 Bul. Jane Sandanski, blok 65  
 P.O. Box 42  
 1309 Sofia  
 Tel: (416) 890-7600  
 Fax: 359-2-220910

**Canada**  
**Fluke Electronics Canada Inc.**  
 4370 Dominion Street, Suite 403  
 Burnaby, British Columbia  
 V5G 4L7 Canada  
 Tel: (604) 439-9004  
 FAX: (604) 439-1058

**Fluke Electronics Canada Inc.**  
 400 Britannia Rd. East Unit #1  
 Mississauga, Ontario  
 L4Z 1X9 Canada  
 Tel: (416) 890-7600  
 Fax: (416) 890-6866

**Fluke Electronics Canada Inc.**  
 1690 Woodward Drive  
 Suite 216  
 Ottawa, Ontario  
 K2C 3R8 Canada  
 Tel: (613) 723-9453  
 Fax: (613) 723-9458

**Fluke Electronics Canada Inc.**  
 1255 Trans Canada Highway  
 Suite 120  
 Donval, Quebec  
 H9P 2V4, Canada  
 Tel: (514) 685-0022  
 Fax: (514) 685-0039

**Fluke Electronics Canada Inc.**  
 101, 1144 - 29th Ave N.E  
 Calgary, Alberta  
 T2E 7P1 Canada  
 Tel: (403) 291-5215  
 Fax: (403) 291-5219

**Chile**  
**Philips Chilena S.A.**  
**de Product Electr**  
 (For Philips products)  
 Avenida Santa Maria 0760  
 Casilla 2678  
 Santiago de Chile  
 Tel: 56-2-770038  
 Fax: 56-2-776730  
 TLX: 240239

**Ironsra**  
 (For Fluke products)  
 Casilla 16228  
 Santiago, Chile  
 Tel: (56) (2) 232-4308  
 Fax: (56) (2) 2322694  
 TLX: (332) 34651

**China, People's Republic of**  
**Philips HongKong Ltd.**  
 Site 7 ground floor, Whampoa Garden  
 Hung Hom, Kowloon, HongKong  
 Tel: 7735588  
 Fax: (852) 3345496  
 TLX: 43752 PHIL HX

**Fluke International Corp.**  
 (For Fluke products)  
 Beijing Representative Office  
 P.O. Box 9085  
 Beijing 100004  
 Peoples Republic of China  
 Tel: (86) 1 512-3435  
 TLX: (716) 225259 FLUKE CN  
 FAX: (86) 1 512-3437

**Colombia**  
**Industrias Philips de Columbia S.A.**  
 (For Philips products)  
 Apartado Aereo 4282  
 Calle 13 No. 51-39  
 Bogota  
 Tel: 57 1-2600600  
 Fax: 57-1-2610139  
 TLX: philcolon 44776

**Sistemas E Instrumentation, Ltda.**  
 (For Fluke products)  
 Carrera 21, No. 39A - 21, Of. 101  
 Ap. Aereo 29583  
 Bogota, Colombia  
 Tel: (57) 232-4532  
 Fax: (57) 1-287-2248

**Costa Rica**  
**Electrocom**  
 Apartado 7742  
 1000 San Jose  
 Costa Rica  
 Tel: 530083/57  
 Fax: 6-257887  
 TLX: 3050 elecocr cr

**C.S.F.R.**  
**Branch Office Brno\***  
 Babickova 40  
 61300 BRNO  
 Tel: 42-2-746555/391  
 Fax: 42-2-764489  
 TLX: 62345 UFMBC

**Elso Philips**  
 Na Berance 2  
 16000 PRAHA 6  
 Tel: 42-2-3164810  
 Fax: 42-2-3164810  
 TLX: 123069 OBPA C

# Sales and Service all over the world

**Cyprus**  
**Cy. Zouman M. Soutanian & Co. Ltd.**  
 PO Box 1775  
 45 Evagoras Avenue  
 Nicosia  
 Tel: 357 2 442220  
 Fax: 357 2 454884  
 TLX 2315 cy.automobil

**Denmark**  
**Philips A/S Test & Measurement**  
 P.O. Box 80  
 DK 2300 København S  
 Tel: 45-32 882100  
 Fax: 45-31 571355  
 TLX 31201

**Ecuador**  
**Philips Ecuador S.A.**  
 Depto. de Sistemas Medicos Prof  
 Av. Amazonas  
 1188Y Cordero  
 QUITO  
 Tel: 593 2 565835  
 Fax: 593 2 564601  
 TLX 22227 PHLPSO-ED

**Proteco Coasin Cia., Ltda.**  
 (For Fluke products)  
 P.O. Box 228-A  
 Ave. 12 de Octubre 2285 y Orellana  
 Quito Ecuador  
 Tel: (593) 32 529684  
 TLX (393) 2285 PROTECEO  
 FAX (593) 32 561980

**Proteco Coasin Cia., Ltda.**  
 (For Fluke products)  
 Ave. Principal No. 204 y Calle Segunda  
 Urbanización Miraflores  
 Guayaquil, Ecuador  
 Tel: (593) (4) 387519

**Arab. Rep. of Egypt**  
**Philips Egypt Branch of Philips**  
**Middle East B.V.**  
 10, Abdel Rahman el Rafei St  
 PO Box 242  
 Dokki, Cairo  
 Tel: 20-2 3490922  
 Fax: 20-2 3492142  
 TLX 22816 pheyg un

**Ethiopia**  
**Philips Ethiopia**  
 (Pvt. Ltd. Co.)  
 Ras Abebe Areguay Avenue  
 PO Box 2565  
 Addis Ababa  
 Tel: 251-1-518300  
 Fax: 251-1-52845  
 TLX 021319 phids

**Fiji**  
**Awa Southwest Pacific**  
 (For Fluke products)  
 37 Freestone Road  
 Waiu Bay  
 P.O. Box 858  
 Suva, Fiji  
 Tel: (679) 312079  
 TLX (792) 2347  
 FAX: (679) 314379

**Finland**  
**OY Philips Ab**  
**Test & Measurement**  
 Sirkkalantie 3  
 PO Box 75  
 SF-02631 Espoo  
 Tel: +358 0 50261  
 Fax: +358 0 529558  
 TLX 1248 11 Phi

**France**  
**S.A. Philips Industrielle et Commerciale**  
**Division Science et Industrie**  
 105 Rue de Paris, BP 62  
 93002 Bobigny Cedex  
 Tel: (1) 49428080  
 Tel: (1) 49428073  
 Fax: (1) 49428100  
 TLX 235546

**Germany**  
**Philips GmbH - EWI**  
 Head Office  
 Mühlentrasse 87  
 D 3500 Kassel  
 Tel: 0561-501495  
 Fax: 0561 501690  
 TLX 997070

**Philips GmbH - EWI**  
 Martin Luther Strasse 3-7  
 D 1000 Berlin 30  
 Tel: 030-21006362  
 Fax: 030-21006355  
 TLX 185532

**Philips GmbH - EWI**  
 Wiesweg 5  
 D-3000 Essen 11  
 Tel: 0201 3610 245  
 Tel: 0201-3610250 (\*)  
 Fax: 0201-3610265  
 TLX 857-226

**Philips GmbH - EWI**  
 Th. Heuss Allee 106  
 D 6900 Frankfurt 90  
 Tel: 069-794093-31  
 Fax: 069-794093-91  
 TLX 413611

**Philips GmbH - EWI**  
 Meindorfstrasse 205  
 D 2000 Hamburg 73  
 Tel: 040 6797-278  
 Fax: 040-6797434\*  
 TLX 2116625

**Philips GmbH - EWI**  
 Ikarusallee 1A  
 D 3000 Hannover 1  
 Tel: 0511-6786-120  
 TLX 923950

**Philips GmbH - EWI**  
 Oskar Meesterstrasse 18  
 (For Fluke products)  
 D 8045 Ismaning  
 Tel: 089-9605-121  
 Tel: 089-9605-270  
 Tel: 089-9605-5166  
 TLX 21701380 phd

**Philips GmbH - EWI**  
 Hoehenstrasse 21  
 D 7012 Fellbach  
 Tel: 0711-5204-104  
 Tel: 0711-5204150\*  
 Fax: 0711-5204136  
 TLX 7254669

**Ghana**  
**Malawi Engineering Co. Ltd.**  
 P.O. Box 2972  
 D710 A/4 Kojo Thompson Rd  
 Tudu ACORA  
 Fax: 233-667-131  
 TLX 2072 MALACO GH

**Great Britain**  
**Philips Industrial Electronics**  
**Test & Measurement**  
 Colonial Way  
 Watford Herts WD2 4TT  
 Tel: 0923-240511  
 Fax: 0923-225067  
 TLX 934583 phimd

**Philips Industrial Electronics**  
**Test & Measurement**  
 Yokivied  
 Cambridge CB1 2PX  
 Tel: 0223 358866  
 Fax: 0223-321764  
 TLX 817331 phsc cam g

**Greece**  
**Philips S.A. Hellenique**  
 PO Box 3153  
 15 25th March Street  
 15 GR 17778 Tavros, Athens  
 Tel: 30-1-4894911  
 Fax: 30-1-4815180  
 TLX 241566 PHAT GR

**Guyana**  
**Guyana Stores Ltd.**  
 19 Water Street  
 GEORGE TOWN  
 TLX 2212 GUYSTORE GY

**Hong Kong**  
**Philips Hong Kong Ltd.**  
 (For Fluke products)  
 Site 7 ground floor, Whampoa Garden  
 Hung Hom, Kowloon, Hong Kong  
 Tel: 7735888  
 Fax: 852 334555496  
 TLX 43752 PHILH HX

**Schmidt & Co (H.K.), Ltd.**  
 (For Fluke products)  
 18th Floor, Great Eagle Centre  
 23 Harbour Road  
 Wanchai, Hong Kong  
 Tel: (852) 5 8330-222  
 Fax: (852) 5-836-2652  
 TLX (780) 74766 or 76762 SCHMC HX

**Hungary**  
**MTA-MMSZ Philips Service\***  
 Szakassz Apard u. 59-61  
 P.O. Box 58  
 1502 BUDAPEST  
 Tel: 36-1-1662366  
 Fax: 36-1-1661021  
 TLX 225114 MTAMM H

**Iceland\***  
**Heimilistaeiki S.F.**  
 (For Fluke products)  
 Sævalur 8  
 125 Reykjavik  
 Tel: 354-1-691500  
 Fax: 354-1-691555

**Sameind H.F.**  
 (For Fluke products)  
 Brautartoll 8  
 125 Reykjavik  
 Te. 354-1-25833  
 Fax: 354-1-621531  
 TLX 3136 samein is

**Indonesia**  
**P.T. Daeng Brothers**  
 (For Philips products)  
 Philips House  
 Ji. H.R. Rasuna Said Kav. 3-4  
 Jakarta 12950  
 Tel: 021 5201122  
 TLX 62789 phdc ia

(For Fluke products)  
 Fluke International Corp  
 P.O. 9090  
 Mail Stop 268-C  
 Everett, WA 98206-9090  
 Tel: (206) 356-5500  
 TLX 185103 FLUKE UT  
 FAX: (206) 356-5116

**Iran**  
**Magnetic Co. Ltd.**  
 PO Box 15745-498  
 15736 TEHRAN  
 Tel: 98-21-824620  
 Fax: 824822

**Iraq**  
**Al-Tel Co. Ltd.**  
 P.O. Box 5904  
 Baghdad  
 Tel: 964-1-7191982  
 Fax: 964-1-7191982  
 TLX 213899 SAKO IK

**Ireland**  
**Circuit Specialists Ltd.**  
 Unit 5, Enterprise Centre  
 Plassey Technology Park  
 Castleroy, Limerick  
 Tel: 061 333333

**Italy**  
**Philips S.p.A.**  
 Industrial Electronics, T & M Dept  
 Viale Elvezia 2  
 20052 Monza  
 Tel: (039) 3635240/8-9  
 Fax: 039-3635309  
 TLX 333343

**Japan**  
**NF Circuit Design**  
 Block Co., Ltd.  
 (For Fluke products)  
 3-20 Tsunashima Higashi, 6  
 Chome  
 Kokokukyu, Yokohama 223  
 Tel: (045) 452-0411  
 TLX 3823-297

**Japan**  
**Nihon Philips Corporation\***  
 Shuwa Shinagawa Building  
 26-38 Tahanaawa 3-Chrome  
 Minatu-ku Tokyo 108  
 Tel: 4845511

**John Fluke Mfg. Co., Inc.**  
 Japan Branch  
 (For Fluke products)  
 Sumitomo Higashi Shinbashi Bldg  
 1-1-11 Hamamatsuno  
 Minato-ku, Tokyo 105, Japan  
 Tel: (81) 3 434-0181  
 Fax: (81) 3-434-0170  
 TLX: (781) 2424331 FLUKJPJ

**John Fluke Mfg. Co. Inc.**  
 Japan Branch  
 (For Fluke products)  
 Katsushige Building  
 2-3-10 Kohraibashi  
 Chuo-ku, Osaka 541  
 Japan  
 Tel: (81) 6 229-0871  
 FAX: (81) 6 229-1098

**Jordan**  
**Jordan Medical Supplies & Services**  
 PO Box 140415  
 Al Biader  
 Amman Jordan  
 Tel: 962-6-819929  
 Fax: 962-2-823556  
 TLX: 22161 jms jo

**Kenya**  
**Philips Kenya Ltd.**  
 Ol Kalou Road, Industrial Area  
 PO Box 30554  
 Nairobi  
 Tel: 254-2-557999  
 Fax: 254-2-543135  
 TLX 24033 PHLP KE

**Korea, Republic of**  
**Myoung Corporation**  
 (For Fluke products)  
 Yeo Eui Do  
 P.O. Box 14  
 Seoul, Korea  
 Tel: (82) 2 784-9942  
 TLX: (787) MYOUNG K24263  
 FAX: (82) 2-784-2387

# Sales and Service all over the world

**South Africa**  
**South African Philips PTY Ltd.**  
 Test & Measurement  
 P.O. Box 7703  
 10 Bondstreet  
 Randburg 2194  
 Johannesburg 2000  
 Tel: 27-11-889-3911  
 Fax: 27-11-889-3098/889-3191  
 TLX 4-26152-SA

**South African Philips PTY Ltd.\***  
 I & E Customer Support Centre  
 195 Mai Road, PO Box 58088  
 Marindaale New Ville 2092  
 Tel: 27-11-470-5937  
 Fax: 27-11-470-5166  
 TLX 4-26152-SA

**Spain**  
**Philips Iberica SAE**  
 Depto Instrumentacion de  
 Medida  
 Poligono Industrial Zona Franca  
 Sector C-calle F  
 08004 Barcelona  
 Tel: 34-3-3361061  
 Fax: 34-3-335538  
 TLX 51293-59292

**Philips Iberica\***  
 Depto Instrumentacion de  
 Medida  
 Martinez Villergas 2  
 28027 Madrid  
 Tel: 34-1-4042200  
 Fax: 34-1-4048603  
 TLX 27710

**Philips Iberica SAE\***  
 Jose Olabarra 6  
 45012 Bilbao  
 Tel: 34-4-4313800  
 Fax: 34-4-432 0361  
 TLX 31230

**Sri Lanka**  
**Hayleys Electronics & Engineering Ltd.**  
 400 Deans Road  
 P.O. Box 70  
 COLOMBO 10  
 Tel: 94-1-699087  
 Fax: 94-1-699299  
 TLX 23059 SRLCOHA

**ComputerLink Data Systems, Ltd.**  
 (For Fluke products)  
 68 Havelock Rd.  
 Colombo, 5, Sri Lanka  
 Tel: (94) (1) 502202/3  
 Fax: (94) 1-502203  
 TLX (954) 22455 COLINK CE

**Surlinam**  
**C. Kersten & Co. N.V.**  
 P.O. Box 1808  
 PARIMARIBO

**Surtel**  
 P.O. Box 155  
 PARIMARIBO  
 Te: 597-477880/472118  
 Fax: 597-452745  
 TLX 162 SN

**Sweden**  
**Philips Industrial Electronics AB**  
**Test & Measurement**  
 Testgata 1  
 S-115 84 Stockholm  
 Tel: 46-8-7821300  
 Fax: 46-8-6677839  
 TLX: 17173 phiks

**Switzerland**  
**Philips AG Test und Messtechnik**  
 Postfach 670  
 8027 Zurich  
 Tel: 01 4882390  
 Fax: 01 4828595  
 TLX 815780-0

**Philips SA**  
**Test et Mesure**  
 Avenue du Mont Blanc  
 1196 Gland  
 Tel: 022/647171

**Syria**  
**Al-Shahed Electronics and Trading Co.**  
 Fardoss Street 79  
 Kassas and Sadat Building  
 P.O. Box 2442  
 Damascus  
 Tel: 228003/218605  
 TLX 411203 phisyf

**Taiwan**  
**Philips Taiwan Ltd.**  
 (For Philips products)  
 581 Min Sheng East Road  
 10446 Taipei  
 Taiwan  
 Te: 886-2-5097666  
 Fax: 886-2-5005899

**Schmidt Scientific**  
 5/F 344 Min Sheng E. Rd  
 Taipei  
 Taiwan  
 Tel: 02-5005779  
 Fax: 886-2-5029692  
 TLX 11111 Schmidt

**Tanzania**  
**Philips (Tanzania) Ltd.**  
 Nkrumah Street  
 Dar es Salaam  
 Tel: 2555129571  
 TLX 41016

**Thailand**  
**Philips Electrical Co. of Thailand Ltd**  
 (For Philips products)  
 263, Silom Road  
 PO Box 961  
 Bangkok 10500  
 Tel: 66-2-233-6330/9  
 TLX. 87327 phltha th

**Measuretronix Ltd.**  
 (For Fluke products)  
 210231 Ramkhamhaeng Road  
 Bangkok 10240  
 Thailand  
 Tel: (66) (2) 375-2733  
 Fax: 66-2-374-9955  
 TLX: (788) 82796 HUAMARK TH

**Trinidad / West Indies**  
**Compression & Power Services (1988) Ltd.**  
 P.O. Box 76  
 SAN FERNANDO By Pass  
 Tel: 653-5445/6/7  
 Fax: 1.809 667 0353  
 TLX: 32451 WG

**Tunisia**  
**S.T.I.E.T.**  
 32 bis rue Ben Ghedahem  
 Tunis  
 Tel: 348666  
 TLX. 14512

**Turkey**  
**Turk Philips Ticaret A.S.**  
 Taatpasa Caddesi no 5  
 PO Box 161  
 80640 Levent Istanbul  
 Tel: 90-1-779270  
 Fax: 90-1-1693094  
 TLX 24192 phtr tr

**United Arab Emirates**  
**Al Sanani Trading Est.**  
 PO Box 7187  
 Abu Dhabi, U.A.E  
 Tel: 971-2-771370  
 Fax: 971-2-728963  
 TLX 23966 Sanani em

**Haris Al-Afaq Ltd.**  
 PO Box 8141  
 Dubai, U.A.E  
 Tel: 971-4-283625  
 Fax: 971-4-281285

**Uruguay**  
**Industrias Philips del Uruguay S.A.**  
 (For Philips products)  
 Avenida Uruguay 1287  
 Casilla de Correo 294  
 Montevideo, Uruguay  
 Tel: (598) (2) 921111  
 Fax: (598) (2) 920601

**U.S.S.R.**  
**N.V. Philips Gloeilampenfabrieken**  
 Mynaya Str 1  
 Fl 7 Office 18  
 MOSCOW  
 Tel: 7095-2302485  
 Fax: 7095-2302485  
 TLX 413961 PHIL SU

**Infomedia Sotrudnichestvo**  
 Kievskaya, 2 - Office 106  
 121111 MOSCOW  
 Tel: 240 52 52  
 Fax: 230 26 18  
 TLX 411670 DNEPR SU

**Venezuela**  
**Inds. Venezolanas Philips S.A.**  
 (For Philips products)  
 Apartado Aereo 1167  
 Caracas 1010-A  
 Tel: 58-2-905 7061  
 Fax: 58-2-951 7339  
 TLX 25267 vpsa vc

**Cosin C.A.**  
 (For Fluke products)  
 Calle 9 Con Calle 4, Edif. Edinurdi  
 Apartado de Correos NR-70.136  
 Los Ruices  
 Caracas 1070-A, Venezuela  
 Tel: (58) (2) 241-03-09  
 TLX: (395) 21027EMVEN VC

**Yemen**  
**Rashed Trading & Travel Agency**  
 Ali Abdulmugni st  
 PO Box 1221  
 Sana'a, Yemen  
 Tel: 967-2-273231  
 TLX. 2230 atgbar ye

**Yugoslavia**  
**N.V. Philips Gloeilampenfabrieken**  
 Strahinja Bana 47/II  
 Postaranka Iah 484  
 BE-OGRA  
 Tel: 38-11-625344  
 Fax: 38-11-635777  
 TLX 12499 YU PHILIPS

**Jugoelectro\***  
 Junja Gagarna 81  
 Block 70  
 11070 BEOGRAD  
 Tel: 38-11-178134  
 Fax: 38-11-175472  
 TLX. 12370 YUJELB

**Technicar Servis\***  
 (For Fluke products)  
 Junsicava 25  
 41000 ZAGREB  
 Tel: 041 276333  
 Fax: 041-274416

**Zambia**  
**Philips Electrical Zambia Ltd.**  
 Mwembeshi Road  
 PO Box 31878  
 Lusaka  
 Tel: 218511/218701  
 TLX za 41220

**Zimbabwe**  
**Philips Electrical (Pvt.) Ltd.**  
 62 Mulare Road  
 PO Box 994  
 Harare  
 Tel: 263-4 47211  
 Fax: 263-4-47966  
 TLX 2236 ZW

**For Countries not listed above:**  
**Philips Export B.V.**  
**I & E Export**  
**Test & Measurement**  
 Building TG III-4  
 PO Box 218  
 5600 MD Eindhoven  
 The Netherlands  
 Tel: +31 40 788667  
 Fax: +31 40 788321  
 TLX 35000 phic n nltff

**Fluke Int'l Corp.**  
 PO Box 9090  
 Mail Stop 206A  
 Everett, WA 98206-9090  
 Te: 206-356-5500  
 Fax: (206) 356-5116  
 TLX 185103 FLUKE UT

# Sales and Service all over the world

(For Distribution products)  
**IL Myoung, Inc**  
 Yongdong P.O. Box 1486  
 Seoul Korea  
 Tel: 82-2-552-8582-4  
 TLX: 787 24283 MYOUNG  
 FAX: 82-2-553-0388

**Myoung Corporation**  
 (For Fluke Products)  
 139-5, Shinchon-Dong, Dong-Ku  
 Taegu Korea  
 Tel: 82-53-753-8163-4  
 FAX: 82-53-753-8165

**Kuwait**  
**Yusaf A. Alghanim & Sons**  
 P.O. Box 223  
 13003 KUWAIT  
 Tel: 965-4842988  
 Fax: 965-4847244

**South Korea**  
**Philips Industries (Korea) Ltd.**  
 (For Philips products)  
 CPO Box 3680, Philips House  
 260-199 Itaewon-Dong  
 Youngsan-Ku  
 Seoul  
 Tel: 82-2-7970378  
 Fax: 82-2-7978048  
 TLX: philkor K 27291

**South Korea**  
**Hanmac Electronics Co. Ltd.**  
 Myin Bld. 116-2 Samsung-Dong  
 Kangnam-Ku  
 Seoul  
 Korea  
 Tel: 82-2-5537441  
 Fax: 82-2-5566816  
 Tlx: K25749 Hanmaco

**Lebanon**  
**Electronic Supplies S.A.R.L.**  
 Autostrade Dora, Hayek Bldg  
 PO Box 90 1388  
 Beirut  
 Tel: 01-894243  
 TLX: 42950 DICL

**Luxembourg**  
**Philips Luxembourg**  
 Professional Systems S.A.  
 Rue des Jons 4  
 L-1818 Howald  
 Tel: 496111  
 Fax: 400577  
 TLX: 60572

**Malaysia**  
**Electronic Systems (Malaysia)**  
 Son Bhd.  
 (For Philips products)  
 Lot 51 Section 13  
 Jalan University  
 Petaling Jaya - Selangor 46200  
 Tel: 60-3-7560112  
 Fax: 60-3-7560761

**Mecomb Malaysia Sdn. Bhd.**  
 (For Fluke products)  
 PO Box 24  
 46700 Petaling Jaya  
 Selangor, Malaysia  
 Tel: (60) 3-774-3422  
 Fax: (60) 3-774-3414  
 TLX: (784) MA37764 MECOMB

**Malta**  
**Charles A. Micallef & Co. Ltd.**  
 PO Box 527  
 217 St. Paul str.  
 Valletta  
 Tel: 356-221168  
 Fax: 356-224748

**Mexico**  
**Mexicana de Electronica**  
 Industrial S.A. (Mexell)  
 Diagonal No. 27  
 Entre Calle de Eugenia Y Ave  
 Colonia del Valle  
 C.P. 03100 Mexico  
 Tel: (90) (5) 680-4323  
 Fax: (525) 687 8695  
 TLX: (383) 177 1823 MDEIME

**Mexel Servicios en Computacion\***  
 Instrumentacion Y Perifericos  
 Blvd. Adolfo Lopez Mateos No. 163  
 Col. Mixcoac  
 Mexico D.F.  
 Tel: 90-5-563-5411

**Morocco**  
**Samtel\***  
 2 Rue de Bapume  
 Casablanca  
 Tel: 243050

**Somaciel**  
**304 Boulevard Mohammed V**  
 Casablanca 05  
 Tel: 308051/52  
 TLX: 27021

**Mozambique**  
**Interelectra E.E.**  
 P.O. Box 1159  
 MAPUTO  
 TLX: 6203 NEGONHO

**Nepal**  
**Bhajaratna Engineering & Sales**  
 (P) Ltd.  
 (For Philips products)  
 Jyoti Bhawan  
 PO Box 133 Kantipath  
 Kathmandu  
 Tel: 2-25134  
 TLX: 2264 jyoti bh np

**Associated Enterprises**  
 (For Fluke products)  
 GPO Box 790, Pyaphal Tole  
 Kathmandu, Nepal  
 TLX: 13868  
 TLX: (947) 2588 ASCENT NP

**Netherlands**  
**Philips Nederland B.V.**  
 Test en Meetapparaten  
 Hoevensweg 55A  
 Postbus 115  
 5000 AC Tilburg  
 Tel: 013-390111  
 Fax: 013-427528  
 TLX: 52683

**Philips Nederland**  
 Technische Service Prof. Akt \*  
 Hurskestraat 2C  
 Gebouw HBR  
 5652 AJ Eindhoven  
 Tel: 040-723095  
 Fax: 040-723337  
 TLX: 59279 MILAP NL

**New Zealand**  
**Philips Scientific & Industrial PTY Ltd.**  
 Test & Measurement Dept  
 2 Wagner Place  
 PO Box 4021  
 Auckland 3  
 Tel: 09-084-160  
 Fax: 09-862728  
 TLX: N2 2395

**Nigeria**  
**Associated Electronic Products**  
 (Nigena) Ltd.  
 KM 16, Ikorodu Road  
 Ojota  
 PO Box 1921  
 Lagos  
 Tel: 234-1-900160/69  
 Fax: 234-1-615601

**Norway**  
**Norsk A/S Philips**  
 Dept. IE Test & Measurement  
 Sandstuveien 70  
 PO Box 1 Mangelrud  
 0612 Oslo 6  
 Tel: 47-2-741010  
 Fax: 47-2-740050  
 TLX: 72640

**Oman**  
**Messrs. Mustafa Jawad Trading Co.**  
 PO Box 4918  
 RUWI - MUSKAT  
 Tel: 968-709955  
 Fax: 968-797277

**Pakistan**  
**Philips Electrical Co. of Pakistan (Private) Ltd.**  
 (For Philips products)  
 Philips Markaz, M.A. Jinnah Road  
 PO Box 7101  
 Karachi - 74400  
 Tel: 92-21-725772-8  
 Fax: 92-21-726694  
 TLX: 2874 PHPAK PH

**(For Fluke Products)**  
 Fluke International Corp  
 P.O. 9090  
 Mail Stop 268-C  
 Everett, WA 98206-9090  
 Tel: (206) 356-5500  
 TLX: 185103 FLUKE UT  
 FAX: (206) 356-5116

**Paraguay**  
**Philips del Paraguay S.A.**  
 (For Philips products)  
 Avenida Artigas 1519  
 Casilla de Correo 605  
 Asuncion  
 Tel: 595-21-291934/291935  
 Fax: 595-21-211662  
 TLX: py 215

**Peru**  
**Philips Peruana S.A.**  
 Planta Carretera Central  
 Av. Comandante Espinar 719  
 Miraflores  
 Lima 18  
 Tel: 51-14-350059  
 Fax: 51-14-354200

**Importaciones y Representaciones**  
 Electronicas S.A.  
 (For Fluke products)  
 Avda. Franklin D. Roosevelt 105  
 Lima 1, Peru  
 Tel: (51) (14) 28-8650  
 TLX: (394) 25663 PE IREING

**Philippines**  
**Philips Industrial Development Inc.**  
 (For Philips products)  
 106 Valero Street  
 Salcedo Village  
 Makati, Metro Manila  
 Philippines  
 Tel: 810-0161  
 Fax: 817-3474

**Spark Radio & Electronics, Corp.**  
 (For Fluke products)  
 PO Box 610, Greenhills  
 Metro Manila 1502  
 Philippines  
 Tel: (63) (2) 775192  
 Fax: (63) (2) 7220313  
 TLX: (712) 4005 FLA PH PU

**Poland**  
**Electronic Instrument Service\***  
 (Philips Service)  
 Ul. Malechowska 6  
 60-188 POZNAN  
 Tel: 48-61-461998  
 TLX: 0413791 PHIL PL

**BHZ Spectro-Lab Sp Z.O.O.**  
 Ul. Mokotowska 51/53  
 Lok 58  
 00542 Warszawa  
 Tel: 4822 298506  
 Fax: 4822 285735  
 Tlx: 817399 slab pl

**Portugal**  
**Philips Portuguesa, S.A.R.L.**  
 Division I & E  
 Test & Measurement  
 Av. Eng. Duarte Pacheco 6  
 1009 Lisboa Codex  
 Tel: 1-657181  
 Fax: 1-658013

**Philips Portuguesa\***  
 Division I & E  
 Rua Eng. Ezequiel de Campos 182  
 4100 Porto  
 Tel: (2) 678278  
 TLX: 28790

**Qatar**  
**Danish Trading Company**  
 PO Box 92  
 Doha, Qatar  
 Tel: 974-434308  
 Fax: 974-426378  
 Romana  
 Runex S.R.L.  
 P.O. Box 1/285  
 Sir Stefan Furlana Nr 2-4  
 Apt. 14 S.1.  
 BUCAREST 70100  
 Tel: 40-0-594468  
 Fax: 594468  
 TLX: 119488 A CBTX R

**Saudi Arabia**  
**Messrs. A. Rajab & A. Silsilah**  
 Head Office  
 PO Box 203  
 Jeddah 21411  
 Tel: 966-2-6610006  
 Fax: 966-2-6610164  
 TLX: 601180 amdas sj

**Messrs. A. Rajab & A. Silsilah**  
 PO Box 260  
 Riyadh 11411  
 Tel: 966-1-4122425  
 Fax: 966-1-4122366  
 TLX: 404787 amdas sj

**Messrs. A. Rajab & A. Silsilah**  
 PO Box 587  
 Dammam  
 Tel: 966-3-8322596/8331870  
 Fax: 966-3-8271962  
 TLX: 601044 amdas sj

**Singapore**  
**Philips Project Development (S) PTY Ltd.**  
 (For Philips products)  
 Lorong 1, Toa Payoh  
 Singapore 1231, PO Box 340  
 Toa Payoh Central Post Office  
 Singapore 9131  
 Tel: 65-3502000  
 Fax: 65-2535873  
 TLX: philips rs21375

**Rank O'Connor's Pte Ltd.**  
 (For Fluke products)  
 O'Connor House  
 96 Pasir Panjang Road  
 Singapore 0511  
 Republic of Singapore  
 Tel: (65) 473-7944  
 Fax: (65) 472-4508  
 TLX: (766) RS 21023 OCONSIN

# Sales and Service all over the world

## U.S. Sales

### Alabama Huntsville

Fluke  
4920 Corporate Drive  
Suite J  
Huntsville, AL 35805-6202  
(205) 837-0581

### Arizona Phoenix

Fluke  
2211 S. 48th Street  
Suite B Tempe, AZ 85282 -1073  
(602) 438-8314

### Tucson\*

Fluke  
(602) 790-9881

### Arkansas

(800) 83-FLUKE\*

### California

#### Burbank\*

Fluke  
(714) 863-9031

#### Irvine

Fluke  
P.O. Box 19676  
Irvine, CA 92713-9676  
16715 Von Karman Ave  
Suite 110  
Irvine, CA 92714  
(714) 863-9031

#### Los Angeles\*

Fluke  
(213) 747-5935

#### Northern

Fluke  
46610 Landing Parkway  
Fremont, CA 94538-6420  
(415) 651-5112

#### San Diego\*

Fluke  
(619) 587-4664

### Colorado

#### Colorado Springs\*

Fluke  
(719) 632-7722

#### Denver

Fluke  
14180 E. Evans Ave  
Aurora, CO 80014-1451  
(303) 695-1000

### Connecticut

#### Hartford

Fluke  
Glen Lochan East  
41-C New London Turnpike  
Glastonbury, CT 06033-4215  
(203) 659-3541

### DC, Washington

#### Washington, DC\*

Fluke  
(301) 770-1570

### Florida

#### Altamonte Springs

Fluke  
550 So. Northlake Blvd  
Altamonte Springs, FL  
32701-5227  
(407) 331-4881

#### Clearwater/St. Petersburg\*

Fluke  
(813) 799-0087

#### Miami\*

Fluke  
(305) 462-1380

### Tampa\*

Fluke  
(813) 251-9211

### Georgia

#### Atlanta\*

Fluke  
2700 Delk Road  
Suite 150  
Marietta, GA 30067-6202  
(404) 953-4747

### Illinois

#### Chicago

Fluke  
1150 W. Euclid Avenue  
Palatine, IL 60067-7397  
(708) 705-0500

### Indiana

#### Indianapolis

Fluke  
8777 Purdue Road  
Suite 101  
Indianapolis, IN 46268-3104  
(317) 875-7870

### Kansas

Fluke  
(800) 83-FLUKE\*

### Louisiana

Fluke  
(800) 83-FLUKE\*

### Massachusetts

#### Boston

Fluke  
900 Middlesex Turnpike  
Building 8  
Billerica, MA 01821-3929  
(508) 663-2400

### Maryland

#### Baltimore\*

Fluke  
(301) 792-7060

#### Rockville

Fluke  
5640 Fishers Lane  
Rockville, MD 20852-1794  
(301) 770-1570

### Michigan

#### Detroit

Fluke  
Metro West Industrial Park  
45550 Helm Street  
Plymouth, MI 48170-6096  
(313) 453-3373

### Minnesota

#### Minneapolis

Fluke  
1380 Corporate Center Curve  
Suite 113  
Eagan, MN 55121-1200  
(612) 452-4264

### Nebraska

Fluke  
(800) 83-FLUKE\*

### North Carolina

#### Greensboro

Fluke  
Oak Hollow Business Park  
18C Oak Branch Drive  
Greensboro, NC 27407  
(919) 294-8618

### New Jersey

#### Paramus

Fluke  
P.O. Box 930  
Paramus, NJ 07653-0930  
West 75 Century Road  
Paramus, NJ 07653  
(201) 262-9550

### New Mexico

#### Albuquerque\*

Fluke  
(505) 881-3550

### New York

#### Rochester

Fluke  
4515 Culver Road  
Rochester, NY 14622-1498  
(716) 323-1400

### Ohio

#### Cleveland

Fluke  
16600 Sprague Road  
Suite 90  
Cleveland, OH 44130  
(216) 234-4540

### Oklahoma

(800) 83-FLUKE\*

### Oregon

#### Portland\*

Fluke  
(503) 227-2042

### Pennsylvania

#### Philadelphia

Fluke  
200 Lindenwood Drive  
Malvern, PA 19355-9988  
(215) 647-9550

#### Pittsburgh\*

Fluke  
(412) 261-5171

### Texas

#### Dallas

Fluke  
2104 Hutton Drive  
Suite 112  
Carrollton, TX 75006-6807  
(214) 406-1000  
(800) 83-FLUKE

#### El Paso\*

Fluke  
(915) 533-3508

### San Antonio

Fluke  
10417 Guildale  
San Antonio, TX 78216-4130  
(512) 340-0498

### Utah

#### Salt Lake City\*

Fluke  
(801) 268-9331

### Washington

#### Seattle

Fluke  
2375 130th Ave. N.E.  
Suite 100  
Bellevue, WA 98005-1758  
(206) 881-6966

\* Tie-line to a Fluke Sales Office in another city.





NOTES



